

Electronic Lock Operate Instructions

When you receive your safe you can use override keys to open the door.

1. Factory code:

Master code (1-8 digital) :default 1234

User code (1-8 digital): default 12345678

Reset code : default 12345678

2. Unlock the door,

Enter<master code> or < user code> then press '#' key ,green Led light up and you will hear 2 beeps, then the door can be open in 5 seconds. If four time incorrect code entered ,the keypad will be lock up for one minute.

3. Change master code:

Enter <master code > then press '#' key , green LED light up, press '*' key yellow LED light up, get into changing mode within 8 second enter <new code > and press '*' to confirm, you will hear 3 beeps means succeeded otherwise try again. If you hear 4 beeps means unsuccessful. After change master code the user code changes to default 12345678 automatically.

4. Change user code:

Enter <user code > then press'#' key green led lights up, press '*' key, yellow light up, with in 8 seconds enter <new users code > press * key to confirm. you will hear 3 beeps means succeeded, If you hear 4 beeps means unsuccessful.

5.Change reset code:

Enter <master code> press'#' key green led lights up,press '##', yellow light up, with in 8 seconds enter <new reset code >then '*' key to confirm. you will hear 3 beeps means succeeded, If you heard 4 beeps means unsuccessful.

6.Reset the lock

Press ## then < reset code> the door will open and <master code > and < user code > will be reset to factory default setting.

7. Low battery

Both red and green LED light up, means low battery, please replace the battery ASAP.