



PATENTS PENDING



## GHILLIE 3-MAN BLIND *with* NO-SHADOW DUAL ACTION TOP

# ASSEMBLY INSTRUCTIONS

### PARTS LIST

- A. **Folded Main Frame Base** with Pre-Installed Windblockers and Attached Carry Strap (right side, back, left side)
- B. **Folded Porthole Mesh Top** (mesh pre-installed)
- C. **Front Panel Frame** with Pre-Installed Windblocker
- D. **Ground Stakes**



### INSTALLATION INSTRUCTIONS

#### STEP 1

Identify the components of the box, separate and organize on the ground.

#### STEP 2

Main Frame Assembly - Unroll Main Frame with pre-installed Windblockers. (ill. 1) You'll have to unclip the carry from either end of the strap before unrolling the Windblockers. Next, carefully unfold each of the four legs and insert the pins into the holes to secure the legs into position. (ill. 2) Carefully, unfold and open the main frame legs into a rectangular shape. (ill. 3) Attach the pins to the center bracket of the back of the blind. *Tip: While the Main Frame is upside down, attach the Windblockers to the legs using the hook & loop straps before flipping upright.*



ill. 1



ill. 2



ill. 3

With the assistance of a second person, flip over the Main Frame (ill. 4) and attach the hook & loop straps and connect and tighten the webbing straps on all four legs to secure the Windblockers together. (ill. 5)



ill. 4



ill. 5

### STEP 3



ill. 6



ill. 7

Unroll the Front Panel and extend the tubing out. (ill. 6) Insert the pins in the center bracket on the tubing at the top of the Front Panel. Install the Front Panel onto the Main Frame, inserting the threaded pins into the holes on the corner of the top part of the tubing. (ill.7)



ill. 8

### STEP 4

Lastly, carefully unfold and install the Mesh Top onto the brackets in the center of the top tubing on the sides of the Main Frame. Insert the pin to set your desired height of the Adjustable Mesh Top.

*Make sure that you secure the blind to the ground with the included ground stakes before your hunt.*

Your Ghillie 3-Man Blind comes with adjustable legs that allow you to adjust the height of the blind from 32-50 inches as needed. This comes in handy if you want to set the blind in 10 to 20" of water or if you want to drop the blind and sit on dry ground, and if you're on a levee or uneven ground, you can raise the front and lower the back or vice-versa, to level the blind.

**IMPORTANT!** Add brush or "Ghillie Grass" (sold separately) to your blind to fit your surroundings. As with every blind, CONCEALMENT is most important.



**ENJOY  
and GOOD  
HUNTING!!**



Drake Waterfowl Systems  
7282 Maygan Drive  
Olive Branch, MS 38654  
PHONE (866) 521-5012  
FAX (662) 895-0449

[www.drakewaterfowl.com](http://www.drakewaterfowl.com)