



PATENTS PENDING



GHILLIE CLUBHOUSE 6-MAN BLIND

with NO-SHADOW DUAL ACTION TOP



ASSEMBLY INSTRUCTIONS

PARTS LIST

- A. (6) Windblockers - Left Rear, Right Rear, Left End, Right End, Left Front, Right Front
- B. Porthole Mesh Top (mesh pre-installed)
- C. Main Frame - Left Side and Right Side
- D. Carry Bag
- E. (6) Gun Rests
- F. Ground Stakes

INSTALLATION INSTRUCTIONS


STEP 1

Identify the components of the box, separate and organize on the ground. You'll need a second person to aid in the assembly of your blind.

STEP 2

The frame comes in two halves that mirror each other. Each half of the main frame has 4 legs. Unfold and pull each leg down until it hits the back stop of its pivot bracket. Insert the pin from the outside of the frame to lock the leg in the down position (ill. 1). Make sure that you also insert the pins on the outside of the frame into the center locking joint bracket between the longer segment of legs on each side (ill. 2). Adjust the height of the legs to make sure they are the same height before connecting the two ends together. Repeat for the other end. Once you've pinned all 8 legs, connect the left and right side with the center bracket on the front and rear of the blind. Make sure the tab fits snugly into the notch in the center bracket and insert pin (ill. 3). This pin can be placed inside the frame, making it easier to open and close the door sections.

TIP: The pins used to hold together the frame should be pinned on the outside of the frame so that when the windblockers are installed, they will secure the pins tightly as you use the blind during your hunt.

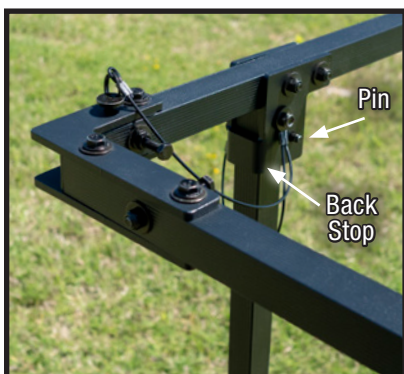

ill. 1



ill. 2



ill. 3

STEP 3

Install the windblockers. The windblockers have a label indicating where they belong. Left Rear, Right Rear, Left End, Right End, Left Front and Right Front. Lay them out on the ground according to their corresponding side and position. Attach them in each corresponding area using the grommet holes onto the bolt head pegs (ill.4). Attach the velcro strips on the back of the windblockers to the legs to help the windblocker stay in place. Each corner of your blind has clips to secure the windblockers. Last, install the gun rests. Choose a location and attach the gun rests on the main frame rail along the front, back and/or sides of the blind. Their location is based solely on your preferences on where you wish to rest your gun against the blind.



ill. 4

STEP 4

Unfold and pin the Porthole Mesh Top. This step will require a second person to help you unfold and install. It will be helpful if the top is unfolded upside down so that the frame of the top is visible and accessible. There are 3 center locking joint brackets on each side of the top. Insert the pins on the outside of the top frame on the front and back (ill. 5). Now, carefully lift and flip the top to insert the top frame posts into the resting brackets on each end of the blind (ill. 6).



ill. 5



ill. 6

IMPORTANT! Add brush or "Ghillie Grass" (sold separately) to your blind to fit your surroundings. As with every blind, CONCEALMENT is most important.

Along the Porthole Mesh Top, there are 4 tension adjustment straps. They are used to adjust the tightness of the top depending on how much brush you apply to the top. The more brush, the tighter the adjust to these straps will be needed to reduce/eliminate the amount of sag that can happen with the mesh fabric. Be careful, if the adjustment straps are tightened too much, the top will not completely close and leave you exposed to the waterfowl.

When on dry ground, make sure that you secure the blind to the ground with the included ground stakes before your hunt. Failure to do so will make the blind unstable and hard to use when flipping the top open.

Your Ghillie Clubhouse 6-Man Blind comes with adjustable legs that allow you to adjust the height of the blind from 32-50 inches as needed. This comes in handy if you want to set the blind in 10 to 20" of water or if you want to drop the blind and sit on dry ground, and if you're on a levee or uneven ground, you can raise the front and lower the back or vice-versa, to level the blind.



**ENJOY
and GOOD
HUNTING!!**



Drake Waterfowl Systems
7282 Maygan Drive
Olive Branch, MS 38654
PHONE (866) 521-5012
FAX (662) 895-0449

www.drakewaterfowl.com