


Say Hello To Ova™

Ova $^{\text{TM}}$ is an egg shaped rechargeable vibrator with a flexibile silicone finger grip.

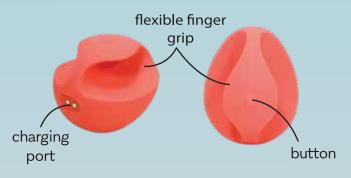

Using Ova™

OvaTM has a single button that controls the vibration settings. Press and hold the button for 2 seconds to power on OvaTM. Quickly press the button once more to start vibrations. Press the button again to cycle through the different speeds and patterns. Press and hold the button for 2 seconds to turn OvaTM off.

Charging Ova™

For best performance, fully charge Ova™ before use.

To charge Ova[™], connect the included magnetic charging cable to the metal contacts on the toy. Then plug the cable into any standard 5V USB power source. Ova[™]'s battery lasts between 1.5 and 2 hours. When Ova[™] is charging, its light will blink. When fully charged, it will remain illuminated.

Ways to Try Ova™

Tuck Ova[™] between your fingers, and allow its flexible silicone wings to hold on so you don't have to.



OvaTM's smooth egg shape compliments the curve of your body, making it ideal for solo use.



Slip between bodies for partner sex or to massage your partner.



1 Year Warranty

Wild Flower warrants your toy for a period of one year from the date of original purchase against any defects due to faulty materials or workmanship. If the product fails during the warranty period, Wild Flower will repair or replace the toy free of charge.

For more information visit wildflowersex.com/warranty

Cleaning Ova™

We recommend washing your Ova™ with warm water and a gentle soap or water based toy cleaner.

DO NOT use alcohol, petroleum, or acetone products on your toy.

Warnings

DO NOT use silicone-based lube with Ova™. DO NOT wash Ova™ in the dishwasher. DO NOT boil, bake, or microwave. DO NOT expose to extreme temperatures (hot or cold)