

USER MANUAL

Model: B0304STH


Jumbo Atomic Wall Clock

We thank you for the purchase of Baldr Jumbo Atomic Wall Clock. It has been designed and constructed using innovative components and techniques to enable the perfect display of time, temperature and humidity by this device. Please read the instructions carefully to become familiar with the properties and functions, before you use the unit.

For the start-up of this device you require:


3x "AA", alkaline batteries (not included)

OVERVIEW

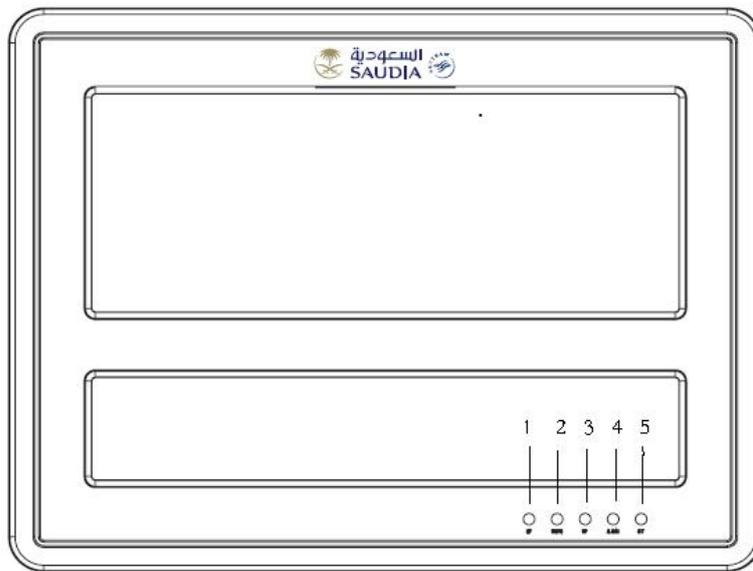

1. RCC
2. F/C
3. DOWN
4. UP
5. SET

LCD SCREEN DISPLAY

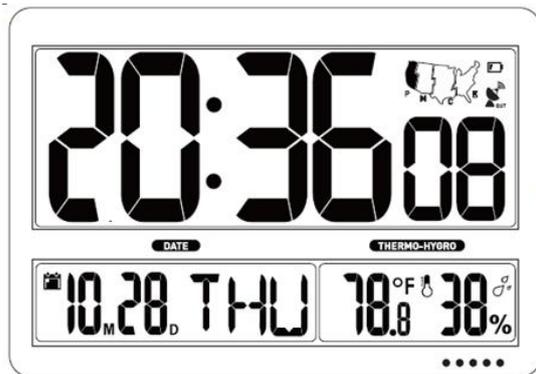

FEATURES

1. RCC with WWVB.
2. Calendar display (default time 2015-1-1 12:00AM) .
3. 12/24 hours selectable.
4. Time zone display with P/M/C/E.
5. DST function
6. Temperature display with °F/°C selectable.
7. Indoor temperature range: 14 °F~140 °F (-10°C ~ 60°C)
8. Indoor humidity display.
9. Humidity range: 20%-99%

10. Seven language weekday display: English, French, Italian, Dutch Spanish, Danish and Germany.
11. Low battery indicator

GETTING STARTED

POWER SUPPLY

1. Remove the battery compartment cover.
2. Insert 3x AA battery matching the polarity (+and-).

TIME SET

Automatic Time Set

RCC Receiving Conditions:

1. When power on or reset, the clock will start searching WWVB signal for 7 minutes.
2. There are daily automatic WWVB receiving at 2:03AM, 3:03AM, 4:03AM, 5:03AM. If WWVB time is received at any of 2:03AM, 3:03AM, 4:03AM, there will be no receiving the day. If not, it will start receiving again at 5:03AM. If the time is not successfully received, there will be no receiving the day. It will start searching for signal at 2:03AM the next day.
3. On normal time mode, press and hold "RCC" key for 3 seconds to enter WWVB signal receiving

RCC Receiving Icon:

- a. When receiving signal, RCC icon  will be flashing by "1HZ";
- b. When signal received, RCC icon  will be flashing by "1HZ";
- c. When signal is weak and cannot tell the right signal, icon of  will be flashing by "1HZ" as well ;
- d. When signal successfully received, LCD will display complete RCC icon , and exit RCC receiving.
- e. If no signal is received, the RCC icon  will disappear.

Note: On the receiving mode, press "RCC" key to exit RCC receiving.

Manual Time Set

1. After power on, press "RCC" key to turn off the RCC function.
2. On normal time mode, press "UP" key to select the time zone from P/M/C/E. The default time zone is E.
3. Press and hold "SET" key for 3 seconds to enter into time setting
4. The figure to be set will be flashing.
5. Press "UP" or "DOWN" key to change the data. Press and hold "UP" or "DOWN" key to skip by 4 steps per second.
6. The setting order is: Hour, Minute, Year, Month, Date, Seven language weekday, 12/24-hr format, DST on/off.
7. Press "SET" again to confirm and exit setting.
8. If do nothing to the keys above 20 seconds, it will automatically exit setting and back to normal time mode.
9. Press and hold "RCC" key for 3 seconds to enter RCC receiving mode again to receive WWVB time.

TEMPERATURE & HUMIDITY

- 1 The indoor temperature and humidity will display after power on.
2. Press "F/C" key to switch F/°C.
3. Temperature range: 14 °F ~ 140 °F (-10°C ~ 60°C)
4. Humidity range: 20%-99%

7 LANGUAGE WEEKDAY DISPLAY

COUNTRY	GERMAN	ENGLISH	ITALIAN	FRENCH	NEDERLANDS	SPANISH	DANISH
ABBREVIATION	GER	ENG	ITA	FRE	TNE	ESP	DAN
SUNDAY	SON	SUN	DOM	DIM	ZON	DOM	SON
MONDAY	MON	MON	LUN	LUN	MAA	LUN	MAN
TUESDAY	DIE	TUE	MAR	MAR	DIN	MAR	TIR
WEDNESDAY	MIT	WED	MER	MER	WOE	MIE	ONS
THURDAY	DON	THU	GIO	JEU	DON	JUE	TOR
FRIDAY	FRE	FRI	VEN	VEN	VRI	VIE	FRE
SATURDAY	SAM	SAT	SAB	SAM	ZAT	SAB	LOR

POSITONED METHOD

This clock is for wall hanging only. Please hang this clock to the wall by using the two hanging holes on the back.

PRECAUTIONS

- Do not clean any part of the product with benzene, thinner or other solvent chemicals. When necessary, clean it with a soft cloth.
- Never immerse the product in water. This can damage the product.
- Do not subject the product to extreme force, shock, or fluctuations in temperature or humidity.
- Do not tamper with the internal components.
- Do not mix new and old batteries or batteries of different types.
- Do not mix alkaline, standard or rechargeable batteries with this product.
- Remove the batteries if storing this product for a long period of time.
- Do not dispose of this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

WARRANTY

- BALDR provides a 1-year limited warranty on this product against manufacturing defects in materials and workmanship.
- Warranty service can only be performed by our authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to us, or our authorized service center.
- The warranty covers all defects in material and workmanship with the following specified exceptions:(1) damage caused by accident, unreasonable use or neglect (including the lack of reasonable and necessary maintenance); (2) damage occurring during shipment (claims must be presented to the carrier); (3) damage to, or deterioration of any accessory or decorative surface;(4) damage resulting from failure to follow instructions contained in your owner's manual.
- This warranty covers only actual defects within the product itself, and does not cover the cost of installation or removal from a fixed installation, normal set-up or adjustments, claims based on misrepresentation by the seller or performance variations resulting from installation-related circumstances.
- To receive warranty service, the purchaser must contact with BALDR nominated service center for the problem determination and service procedure.
- Thank you for your choice of BALDR products!