

# SMART ALARM CLOCK

USER MANUAL MODE: B0326ST

# **OVERVIEW**

MAIN UNIT



1.TIME2.SNOOZE3. ALARM4. DATE5. INDOOR TEMPERATURE



#### **FEATURES**

- 1.Sensitive white backlight.
- 2.Time display, 12/24hour selectable.
- 3. Year Month and Date.
- 4.Indoor temperature T/C selectable.
- 5.Temperature range: -10°C ~ 50°C (14°F ~122°F).
- 6.Dual alarm, daily alarm (Mon. to Sun.)
- or working day alarm (Mon. to Fri.) optional.
- 7. Snooze function.

#### **GETTING STARTED**

#### POWER SUPPLY

- 1. Remove the battery compartment cover.
- 2. Insert 3xAAA battery matching the polarity (+and-).

## TIME / YEAR / MONTH / DATE SET

## TIME SET

- 1. When power on, the preset time will be displayed on AM 12:00.
- 2.Turn the "LOCK" key to "TIME" level, time display will be flashing
- 3. Press the "12/24" button to switch 12 hour or 24 hour; press the "MINUTE" button to add the minute; press the "HOUR" button to add the hour.
- Press and hold "MINUTE" or "HOUR" for seconds can quickly add the data.
- 5. Turn the "LOCK" key back to LOCK STATUS to confirm the data setting

#### YEAR/MONTH/ DATE SET

- 1. When power on, the preset date/month will be displayed on date:1. month:1
- 2. Turn the "LOCK" key to "DATE" level, year/month/date will be flashing.
- 3.Press the "YEAR" button to add year; press the "DATE/C- $\mathbb T$ " button to add the date; press the "MONTH" button to add the month
- 4. Press and hold "YEAR", "DATE/ $\mathbb{C}$   $\mathbb{F}$ " and "MONTH" for seconds can quickly add the data.
- 5. Turn the "LOCK" key back to LOCK STATUS to confirm the data setting

## **ALARM & SNOOZE SET**

#### ALARM SET

- 1. When power on, the preset alarm time displayed is AM 6:00.
- 2. Turn the "LOCK" key to the "ALARM" level, the alarm time will be flashing.
- 3. Press the "12/24" button to set alarm time mode; press the "MINUTE" button to add the minute
- 4. Press and hold "MINUTE" or "HOUR" for seconds can quickly add the data.
- 5. Turn the "LOCK" key back to LOCK STATUS to confirm the data setting
- 6. Turn the "ALARM ON" key to the "MO-FR" level to set working day alarm (alarm working from Mon. to Fri.). words "MO-FR" will display on screen.
- Turn the "ALARM ON" key to the "MO-SU" level to set the daily alarm (alarm working from Mon. to Sun.), words "MO-SU" will display on screen.
- 8. Turn the "ALARM ON" key to the "OFF" level to turn off the alarm.
- Q. Alarm will last 1 minute if no other operations

## SNOOZE SET

- 1. When alarm ringing, press "LIGHT/SNOOZE" to make it silent for 5 minutes, and the snooze " 22" flashing.
- 2. During snooze time, press any other key (except "LIGHT/SNOOZE") will stop snooze function.
- 3. The maximum of repeated snooze can be 10 times.

#### **TEMPERATURE**

- 1. The indoor temperature will display automatically after set up.
- 2. Press "DATE/C-T" key to switch C/T.
- 3. The temperature will be automatically updated in each 10 seconds.
- 4. Temperature tolerance: +/- 1.5 C

## LIGHT SENSOR

- Turn the "LIGHT SENSOR ON/OFF" button to turn on or turn off the light sensor.
- When light sensor is turned on, clock will automatically adjust its back light according to the brightness of surroundings For example, clock backlight will auto on dark surroundings
  When light sensor is turned off, clock will not automatically adjust its backlight

## **BACK LIGHT**

Press "LIGHT/SNOOZE" to manually switch on backlight, it will last for 5 seconds

## **PRECAUTIONS**

Do not clean any part of the product with benzene, thinner or other solvent chemicals. When necessary, clean it with a soft cloth.

Never immerse the product in water. This will damage the product,

Do not subject the product to extreme force, shock, or fluctuations in temperature or humidity.

Do not tamper with the internal components.

Do not mix new and old batteries or batteries of different types.

Do not mix alkaline, standard or rechargeable batteries with this product.

Remove the batteries if storing this product for a long period of time.

Do not dispose of this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

#### WARRANTY

BALDR provides a 1-year limited warranty on this product against manufacturing defects in materials and workmanship. Warranty service can only be performed by our authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to us, or our authorized service center.

The warranty covers all defects in material and workmanship with the following specified exceptions:

- damage caused by accident, unreasonable use or neglect (including the lack or reasonable and necessary maintenance);
  damage occurring during shipment (claims must be presented to the carrier);
- (3) damage to, or deterioration of any accessory or decorative surface;
- (4) damage resulting from failure to follow instructions
- in your owner's manual. This warranty covers only actual defects

within the product itself, and does not cover the cost of installation or removal from a fixed installation, normal set-up or adjustments, claims based on misrepresentation by the seller or performance variations resulting from installation-related circumstances. To receive warranty service, the purchaser must contact with BALDR nominated service center for the problem determination and service procedure.

Thank you for your choice of BALDR products!

