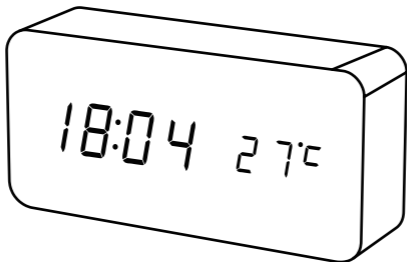 


SOUND CONTROL **WOODEN CLOCK**

Thank you for your purchase of Baldr Sound Control Wooden Clock. It has been designed and constructed using innovative components and techniques to enable the perfect display of time and temperature by this device. Please read the instructions carefully to become familiar with the properties and functions, before you use the unit.

Dual Power Supply: USB Charging Cable (Included) or
4 x AAA Batteries (Not Included)

Table of Contents

1. Product Overview-----	Page1
2. Features-----	Page2
3. Operation Instructions-----	Page2
1) Display Mode-----	Page2
2) Sound Control Mode-----	Page3
3) Time Setting-----	Page3
4) Alarm Setting-----	Page3
5) Reset-----	Page4
4. Precautions-----	Page5
5. Warranty-----	Page5

 
Product Overview

● DP-1 display mode

Display switches by turns: Time Temperature display for 10s; Year Month Date displays for 5s.




● DP-2 display mode



1. Time display
2. PM indicator for 12H mode
3. Alarm ON indicator
4. Temperature

 ● Back View

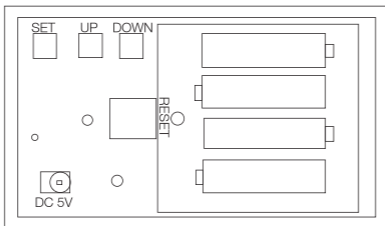

Features

- 2 display modes switching from time/date display
- Temperature displays with °C/°F selectable
- Perpetual Calendar from 2000/1/1 to 2099/12/31
- 12/24 hour format selectable. Default: 24-hour mode
- Max three groups of alarms, each alarm rings for 1 minute.
- Work Day (Mon-Fri) alarm setting selectable: Alarm turns on from Monday to Friday and turns off on Weekend.
- Three luminance levels: L1-L2-L3.
- Sound control mode for power-saving
- Reset key inside the battery compartment when there is abnormal display.
- DC 5V/500mAh power supplied by USB cable (or 3*AAA/4*AAA); Sound control function is recommended ON when batteries are used;

Note: For lower battery usage, we strongly suggest power supply with attached USB charging cable.

Package Contents

Following contents are included in the package:

- 1 x Digital wooden clock
- 1 x User's manual
- 1 x USB charging cable

Operating Instructions

 
Display Mode

- 1) After power on, the default display is DP2 Time/Temperature mode
- 2) Press 'SET' to switch display between DP1/DP2 mode
- 3) Press "UP" key to switch between Degree Fahrenheit and Celsius.
- 4) Press and hold "UP" key for 3 seconds to adjust the LED brightness. You can select from 3 level of brightness: L1-L2-L3. L1 is the brightest. (The brightness is half luminance between 6:00 pm-07:00 am). Press "DOWN" key for luminance decrease. Press "UP" for luminance increase. After setting, hold "UP" key for 3 seconds to exit setting.


Sound Control Mode

- 1) On normal time display, press “DOWN” key to turn on/off sound control function.
- 2) “ON:Sd” means sound control is on; “--:Sd” means sound control mode is off.

Sound Control on



Sound Control off

 

- 3) When sound control function is on, the display will only show a few seconds and then be off.
- 4) Enough DB of sound will activate the display again. This display mode is for power saving.

NOTE: If you want to see the display on as always, you just need to set the sound control function off.

Time Setting

- 1) Press and hold “SET” key for 3 seconds to enter into time setting mode. The figure to be set will be flashing.
- 2) Press “SET” key to confirm and move to next setting.
- 3) Press “UP” or “DOWN” key to change the setting when the figure is flashing. Press and hold “UP” or “DOWN” key, the number will move forward or backward by 8 steps.
- 4) The setting order is: YEAR→MONTH→DATE→12H/24H→HOUR→MINUTE→A1(ALARM)→A2→A3→--:E (work day alarm set)”

NOTE:

1. For 12H display mode, there will be a bright dot at the upper left corner to indicate PM time.
2. If there is no operation for 15 seconds, it will automatically save setting and exit to time mode.
3. For detailed alarm setting, please move to next steps.

Alarm Setting

 
- 1) Press and hold “SET” key for 3 seconds to start time setting and move to A1 setting.
- 2) Press “UP” or “DOWN” key to turn ON/OFF the alarm.

- 3) Press "SET" key to confirm and move to next setting.
- 4) The figure to be set will be flashing. The setting order is ON:A1/--:A1→ HOUR→MINUTE→ON:A2/--:A2→HOUR→MINUTE→ON:A3/--:A3→ HOUR→MINUTE→ON:E/--:E




- 5) When the screen shows "--:E", press "UP" or "DOWN" key to turn ON/OFF work day alarm set. "ON:E" means the alarm only rings on working day(Mon-Fri). "--:E" means the alarm rings every day.

Working day alarm



Every day alarm

 

- 6) There will be a bright dot to the upper right of time display to indicate that the alarm is on.



- 7) When alarming, press any other key to turn the alarm off and activate it again after 24 hours. If without any operation, the alarm will ring for 1 minute.

RESET

1. In any condition, press "RESET" key in the battery compartment, all the settings will return to default values
2. You may also need to press "RESET" key to make it work FOR FIRST USE!

PRECAUTIONS

- Do not clean any part of the product with benzene, thinner or other solvent chemicals. When necessary, clean it with a soft cloth.
- Never immerse the product in water. This can cause electrical shock and damage the product.
- Do not subject the product to extreme force, shock, or fluctuations in temperature or humidity.
- Do not tamper with the internal components.
- Do not mix new and old batteries or batteries of different types.
- Do not mix alkaline, standard or rechargeable batteries with this product.
- Remove the batteries if storing this product for a long period of time.
- Do not dispose of this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

WARRANTY

BALDR provides a 1-year limited warranty on this product against manufacturing defects in materials and workmanship.

Warranty service can only be performed by our authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to us, or our authorized service center.

The warranty covers all defects in material and workmanship with the following specified exceptions:(1) damage caused by accident, unreasonable use or neglect (including the lack of reasonable and necessary maintenance); (2) damage occurring during shipment (claims must be presented to the carrier); (3) damage to, or deterioration of any accessory or decorative surface;(4) damage resulting from failure to follow instructions contained in your owner's manual.

This warranty covers only actual defects within the product itself, and does not cover the cost of installation or removal from a fixed installation, normal set-up or adjustments, claims based on misrepresentation by the seller or performance variations resulting from installation-related circumstances.

To receive warranty service, the purchaser must contact with BALDR nominated service center for the problem determination and service procedure. Thank you for choosing BALDR products!

BALDR

www.baldr.com

service@baldr.com