



The
INDOOR
GOLF *Shop*™

SIGPRO

GOLF NET

Assembly
Guide



THANK YOU

We appreciate you choosing us for your indoor golf needs, and specifically for your purchase of the SIGPRO Golf Net. We know you will enjoy this quality product.

You will find everything you need to complete the assembly of your new net in this guide. You will also find a few helpful tips along the way that our team of experts has provided to ensure that you have the best indoor golf experience possible.

We are here for you and happy to help!



TABLE OF CONTENTS

SPECIFICATIONS	1
SAFETY INSTRUCTIONS	2
WHAT'S INCLUDED	3
FRAME ASSEMBLY	4-5
NET ATTACHMENT	6-7
SIDE NET & SANDBAG ATTACHMENT	8-9
OPTIONAL CROSSBAR & IMPACT SCREEN	10-13



SPECIFICATIONS

PRODUCT NAME	SIGPRO GOLF NET
NET DIMENSIONS	(H) 7'7" x (W) 9' TOP (W) 7'7" BOTTOM
RECOMMENDATIONS	A LADDER OR STEP STOOL IS RECOMMENDED DURING ASSEMBLY. IT IS RECOMMENDED THAT AN ADDITIONAL PERSON ASSIST IN THE ASSEMBLY OF THIS GOLF NET. LAY OUT ALL PIECES BEFORE STARTING ASSEMBLY
WEIGHT (WITHOUT CROSSBAR & IMPACT SCREEN)	40 LBS.
WEIGHT (WITH CROSSBAR & IMPACT SCREEN)	52 LBS.
COLOR	BLACK FRAME/ BLACK & GREEN NET
RECOMMENDED SPACE REQUIREMENTS	MINIMUM OF 10' WIDTH, 12' DEPTH, AND 9' CEILING HEIGHT



SAFETY INSTRUCTIONS

- Please pay close attention and make sure children, pets, and other spectators are at a safe distance when hitting golf balls into the net.
- Additionally, take every precaution to protect ceilings, walls, windows, vehicles, and neighboring homes.
- Be alert of where you stand and walk, especially when others are swinging golf clubs or hitting balls into the net.
- Make sure the setup is far from gas lines, electric heaters, fireplaces, candles, or any other source of heat or fire hazard.
- When not in use, store neatly in a cool, dry location, and protected from weather elements and direct sunlight.
- The Indoor Golf Shop is not responsible for any damage to property and/or any personal injury.
- Be mindful of disconnecting the top crossbar (if applicable) as it will fold in half.
- Do not hang items from the golf net.



WHAT'S INCLUDED



(1) SIGPRO GOLF NET

(2) SIDE BARRIER NETS

(2) SANDBAGS

(2) CARABINER CLIPS

(1) NET FRAME

(26) BUNGEE BALLS

(4) GROUND STAKES

OPTIONAL: (1) SIGPRO PREMIUM IMPACT SCREEN

OPTIONAL: (1) CROSSBAR FOR IMPACT SCREEN



FRAME ASSEMBLY

1

Unfold the frame and lay flat on the floor. Ensure the small rubber feet on the ends are on a level surface.



2

Locate the push-button elbow and extend base legs outright so that the button snaps into place. Do this for both sides to open up the frame.





FRAME ASSEMBLY

3

Raise the left and right uprights. To lock the uprights in place, the safety T-shaped clip must engage into the slot.



4

Lift the top half of the upright and locate the safety pin at the elbow. The top half of the upright will need to move up and back for the safety pin to securely lock into place.






NET ATTACHMENT

5

Unfold the net and place in front of frame. Using a ladder or stool, and starting with the green sleeve, slide the net sleeve down the onto the upright. Repeat on the other side.

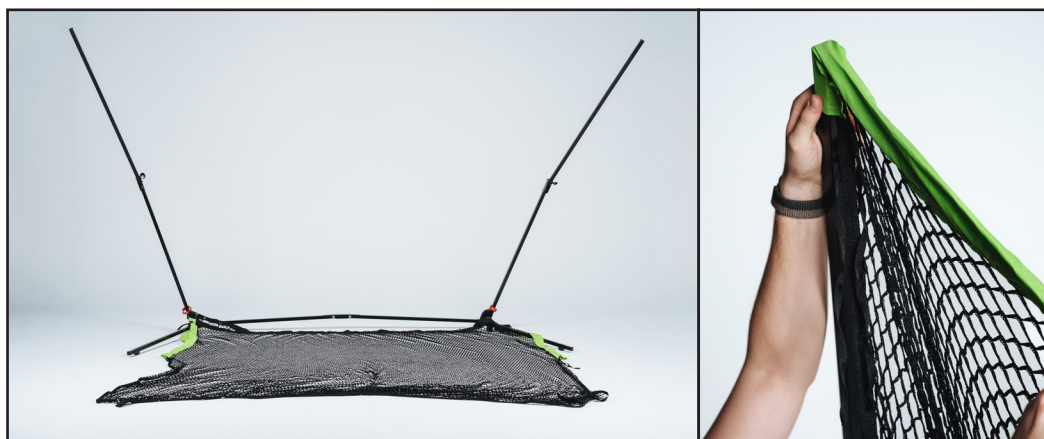

NOTE: The Indoor Golf Shop logo will be located at the top left of the frame when facing the net in the golfer position.





NET ATTACHMENT


6



The net is correctly attached to the frame when both green sleeves are fully extended to the elbows and the top of the sleeves are flush with the upright's cap.

7

Secure the bottom of the net to the left and right legs by sending the velcro strap through the designated slot. Fold the velcro strap so that it attaches to itself and secures the net to the base of the frame.

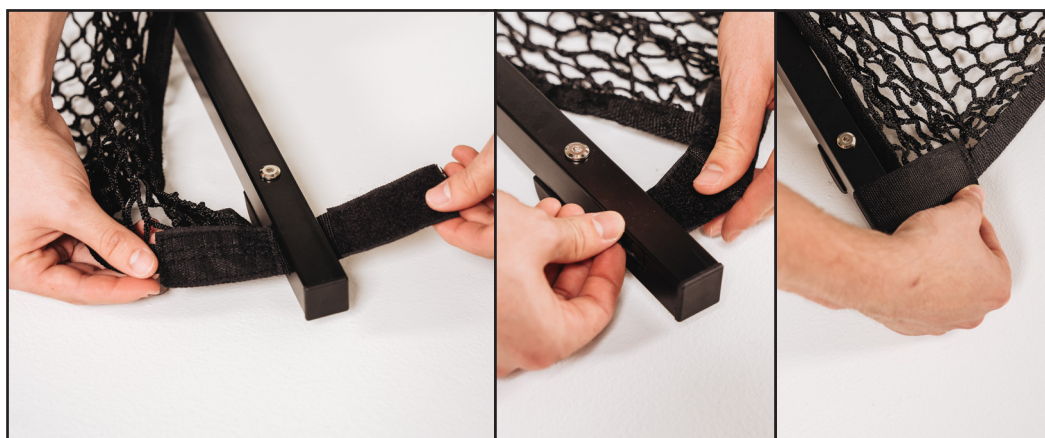



SIDE NET ATTACHMENT

8



SIDE BARRIER NET ATTACHMENT: The top of the side barrier nets will attach to the frame with the provided bungee balls. Start approximately 24 inches from the top of the frame and secure the side barrier net with 1 bungee ball around the frame. Continue with another bungee ball 10-12 inches down the frame and then tie off the side net to the frame above the elbow.






SIDE NET & SANDBAGS

9

The side nets will attach directly to the lower half of the net. Use the bungee balls and attach the side net along the side of the hitting net. Once attached, move to the lower leg and attach the side net to the outer most point of the leg.

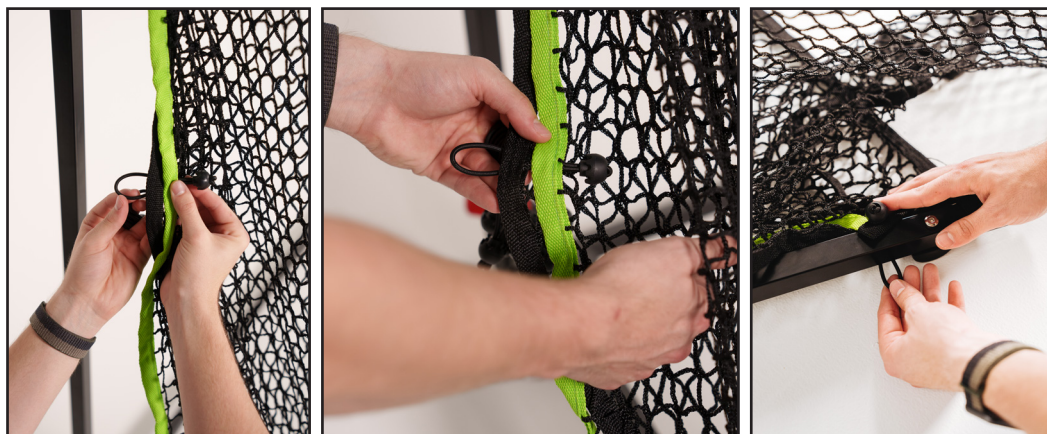

10

Fill the plastic bags with sand and seal. Place the sandbags in the logo'd carry bags that can then attach to the side nets with the provided carabiner clips.





CROSSBAR & IMPACT SCREEN

This section is only for those customers who purchased the top crossbar and impact screen for an enhanced golf simulator experience.

If you did not purchase, and would like to add this to your SIGPRO Golf Net - please contact our Sales Team at 972-848-7491 or by email sales@shopindoorgolf.com




CROSSBAR ATTACHMENT



By adding the top crossbar and attaching the impact screen, the SIGPRO Golf Net will eventually look like the photo above. Start by unfolding the crossbar.

NOTE: Use caution when extending and attaching the crossbar. It is recommended that two people assemble the crossbar and screen.

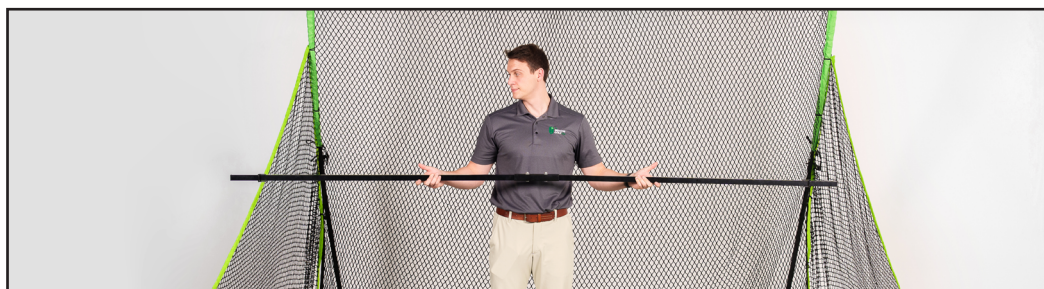




CROSSBAR ATTACHMENT

B

Find the black sleeve atop the net and slide the crossbar into the sleeve (making sure the crossbar's loop is positioned on top - this will be what the velcro strap loops around)

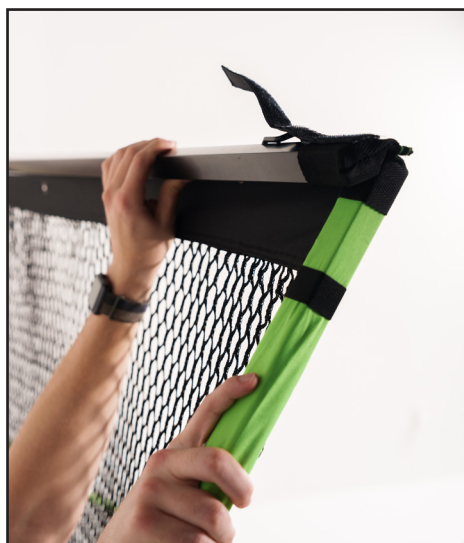

C



Slide the velcro strap through the crossbar's loop. Once the velcro is folded back on itself and secure, rotate the crossbar so that the velcro piece & loop are facing to the back of the net.



IMPACT SCREEN

D

TIP: Make sure the area around the screen is clean. Start by unfolding the impact screen and then locate and line up the grommet holes that will match the grommet holes on top of the net.



E



Thread bungee balls through the grommet holes along the screen, matching to the holes on the net and secure to frame. Rotate the bungee so the ball is facing the back of the frame.

SIGPRO

GOLF NET

ENJOY!

You have now assembled your SIGPRO Golf Net and will have, what we hope, are many years ahead of you to enjoy practicing the game we all love with your family and friends.

We stand by our products, so if you are not 100% satisfied, please contact our team so that we can try and make it right. And we're available to help with any questions that you might have about your new SIGPRO Golf Net. **THANK YOU AGAIN.**



The
INDOOR
GOLF *Shop*™

CONTACT US

972-848-7491

support@shopindoorgolf.com

LOVE THE GAME ... INSIDE & OUT