


## ► Package Contents

- SC300/Remote/USB Cable/USB Cover/User Manual
- Pouch sold separately

## ► Positioning

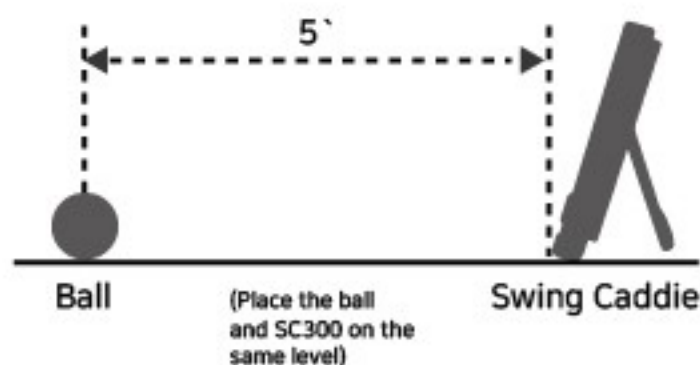

- Range: 10-370 Y

## ► Product Components



## Remote Control

Function selection button

Club selection button



- Mode: Practice/Target (Distance Control)
- Unit: Yards/Meters
- Carry/Total: Set device to show carry or total distance
- Volume: Volume levels ranging from 0-5
- Loft: Adjustable lofts to match your club specs
- Target: Set target carry distance (5 yard increments)
- Club Selection: For fairway and utility woods, press button repeatedly until reaching your desired club

## ► Terminology



## ► Basic Usage

Button	One Click	Press and Hold
Mode / Power	Mode Setting (Practice ← → Target)	Power (On / Off)
Club / Loft Angle	Club Selection	Loft Angle Setting (+ / -)
+ / Distance	Increase Volume	Practice Mode: Carry or Total Distance Target Mode: Choose target distance in 5 yard increments
- / Unit	Decrease Volume	Change between yards / meters

## ► Club Selection

- SC300 Unit: On the device, press the Loft Angle button repeatedly until you reach your desired club  
(DRIVER ► W3 ► W4 ► W5 ► W6 ► W7 ► U3 ► U4 ► U5 ► U6 ► U7 ► I3 ► I4 ► I5 ► I6 ► I7 ► I8 ► I9 ► PW ► GW ► SW ► LW)
- SC300 Remote: Select desired club (for fairway woods and utility, press button repeatedly until reaching desired club)

## ► Practice Mode

- Displays immediate feedback: Carry/Total distance, swing speed, ball speed, smash factor, apex, launch angle



- ◀ - Club: I7
- Loft Angle: 33°
- Total Shots: 144
- Bluetooth Enabled
- Carry: 152.4 yards
- Swing Speed: 78.8 mph
- Ball Speed: 104.8 mph
- Launch Angle: 27.8°
- Apex: 98.8 ft
- Smash Factor: 1.33

## ► Target Mode: Allows player to choose desired target distance

- Choose desired distance for practice between 15 and 195 yards in 5 yard increments
- Using the SC300 device, press the Mode button to place in target mode  
Then hold + button until only flag and yardage are shown  
Then use +/- button to set yardage
- Using the SC300 remote, use Mode button to choose target and  
then +/- button to set yardage



- ◀ - Club: GW
- Loft Angle: 54°
- Total Shots: 144
- Bluetooth Enabled
- Target Distance: 55 yards
- Carry: 51.4 yards
- Swing Speed: 35.1 mph
- Ball Speed: 46.2 mph
- Launch Angle: 34.8°
- Apex: 98.8 ft
- Smash Factor: 1.32

## ► Battery Maintenance

- Only charge device for recommended time
- Do not leave on charger overnight or for extended periods of time
- For storing in off season keep at 40-50% charge and periodically check for battery percentage  
(Do not store unit when battery is 100% or when completely drained to 0%)

## ► SC Setup Guide / FAQ

- Place SC300 approximately 5 feet behind ball
- If shots are not detected, place SC300 slightly further away from the ball
- For indoor net use have at least 6 ½ feet from the ball to the net
- Make sure the ball and your Swing Caddie are on the same level. 1 inch can make a difference
- Specific Ball Type: Some balls (Range balls, Limited flight, Almost golf balls or Practice balls) are made to fly shorter due to material used so readings can be inaccurate
- Factors of roll and slope and not calculated and can cause inaccuracies  
Check to see if your unit is in Carry or Total Distance