

BAIN MARIE INSTRUCTIONS (WET)

DO NOT switch on unless there is water in the Bain Marie.

DO NOT use steel wool, any metallic scouring materials, or harsh bleach containing abrasives when cleaning.

DO NOT use on uneven or metal surfaces.

- Fill bottom section which contains the element with at least 50mm (two inches) of water, till it just touches the bottom of the element. The water should not touch the bottom of the pans.
- Turn the regulator to the ON position on FULL. Allow 20-30 minutes to heat the water.
- **NOTE – A 50MM (TWO INCHES) WATER LEVEL SHOULD BE MAINTAINED IN THE BOTTOM SECTION FOR BEST RESULTS.**
- When water comes to the boil, adjust the energy regulator to its lowest setting to maintain the water at just boiling point. When water level is low, refill to required level.

CARE & MAINTAINENCE

Unplug the Bain Marie before cleaning – **DO NOT** immerse the Bain Marie or its lead in water or other liquid.

Clean after each use with soap and water using a soft cloth. Just wipe the surface with a damp cloth making sure you clean the corners and any crevices.

Empty Bain Marie after each use.

Use non abrasive cleaning material to clean the Bain Marie – **DO NOT** use steel pads.

BAIN MARIE INSTRUCTIONS (DRY)

Please Note:

Do Not leave on HIGH for extended periods. The build up of excessive heat will damage the element.

- Place all the pans in the Bain Marie.
- Turn the dial to the desired temperature and allow to pre-heat for approximately 15 minutes before placing the any food in the pans.