

## **BUBBLE MACHINE**

### **CONTROL BOX**

- **The “RED POWER” (Push button Switch)-** Is the main ON/OFF POWER switch. This needs to be pushed. The RED Light will illuminate for the bubble machine to function.
- **ON/OFF Green button-** This is the manual function operation and push this button will operate the bubble fan manually (Light will go out when this ON/OFF switch is pushed for the fan to turn on) or the light will go out when the TIMER function is operating i.e. when the fan comes on for the duration and interval timing operation.
- **Timer (Yellow push button switch)-** When this is illuminated the fan will operate for the combination of the DURATION CONTROL (how long the fan remains ON) and the INTERVAL (How long the fan remains OFF).

This timer can be adjusted by turning the knobs + or – (+ longer – shorter duration/interval)

By adjusting these two will affect how long the Auto Timer function FAN will remain ON and OFF.

Turn this function OFF by pushing the Yellow Timer button and the Light will go out.

When this is not activated (light Not On) the manual control ON/OFF Green manual switch can be operated. This is by pushing down and as long as this is pushed the fan will remain ON when released the Fan will Stop.

### **GENERAL OPERATION**

- Bubble liquid needs to be added to the tray inside for the Bubble wands to pass through.

Liquid can be added through the front of the machine, Fill to a third. Don't over fill!

Remove excess liquid prior to transport by undoing and removing the silver thumb screw on the front side and lift up the to take out tray.

Ensure the bubble machine is **UN PLUGGED before opening – ELECTRIC SHOCK HAZARD.**