

FOOD WARMER INSTRUCTIONS

- Place Food Warmer on a stable bench top or table
- Connect to power point. Do not use extension cords.(make sure no other power is being drawn from this circuit e.g. Microwaves, Elec Ovens, Kettles)
- Turn Warmer on to the highest setting and warm for around 20 – 30 minutes.
- Place dishes or food (best to have them at room temperature) evenly on the shelves.

Do Not Line Trays With Foil.

- Heat dishes on High for around 10 minutes, check they are warm enough and reduce heat setting to Low.
- Please take care when removing dishes from the Food Warmer as they will be HOT.
- Please return Food Warmer clean, shelves can be washed in Warm Soapy Water.