

AREA HEATER and MUSHROOM HEATER INSTRUCTIONS

- Visually check heater for any visible damage to heater, hose connections etc.
- Connect gas hose to the gas bottle ensure the fitting is tight.
- Turn ON gas at the bottle and check for any leaks around the bottle. Smell of gas needs to be investigated immediately. Put into gas bottle compartment and put on the door.
- There is a control knob under the heating element head. This is the heating control and igniter to light the heating element.
- To turn ON push fully in and turn anti clock wise to ignite. Keep this control knob pushed in fully, do not release. You will hear a click sound, If the pilot light does not ignite immediately turn to off position and repeat procedure. This clicking sound is the Pezo igniter operating.
- Once the pilot light is lit, keep the control knob pushed fully in for 30 seconds to heat the igniter.
- Once hot, release and turn control knob fully anti clockwise (to the left). This position is full heat. To adjust turn to desired intensity.
- To turn heater OFF- Turn the control knob fully clockwise to the off position. Turn gas bottle OFF. When OFF check for any leaks. If you smell gas investigate immediately. If the heater is not required for use again disconnect the heater hose from the bottle.



Please Note:

These gas heaters are not to be used in an enclosed space. Good ventilation is required at all times during use.

Keep away from flammable objects.

Children to be supervised, at all times around and near the heater as the caged area gets HOT and can burn.

2 PANEL FLAT FACED HEATER INSTRUCTIONS

- Connect gas hose to the gas bottle ensure the fitting is tight.
- Turn ON gas at the bottle and check for any leaks. Smell of gas needs to be investigated.
- There are 2 red gas flow regulators on each side rear of the heater face panel. These control the gas flow and heat to each panel.
- To turn ON - Turn knob to full flame symbol on top of the red knob. Push IN and hold knob IN to allow gas flow, while using a match to light the face of the face that this gas control knob controls. Once lit, release red gas flow/flame knob to adjust flame and heat release knob and adjust if necessary. Important when lighting - Stand to one side NOT IN FRONT of the heater in-case of a gas build up.
- Repeat item 4 above to light the other side heating panel.
- Adjust flame control using the red knob/s.
- To turn heater OFF turn bottle OFF. (Red knobs will not turn off the flame only adjust the intensity of the heat.)

