

## SOUP WARMER

### Use with WET HEAT ONLY

- Add water up to maximum line between the stainless steel liner and internal Aluminum container.
- Never overfill with water and under no circumstances should the stainless steel liner float up, even when empty. Remove any excess water immediately
- The temperature control should be set between 1 and 8 and always operate the kettle at the lowest setting to maintain correct serving temperature. Hold at high temperature when setting between 8 and 12
- A neon light will glow when the unit is turned on. Turn the dial to 0 to switch off. Unplug from power socket to isolate soup warmer from the electricity supply
- Always keep the removable hinged lid attached and in the closed position when not serving
- Never move or carry the soup warmer when unit is switched on, or containing hot food
- Spilled food should be removed immediately from all exterior surfaces. The stainless steel bain-marie and lid are machine washable. The painted exterior and top collar should be wiped over with a damp soapy cloth
- Ensure unit is unplugged when not in use, when filling and when being cleaned.

### **DO NOT OPERATE SOUP WARMER WHEN EMPTY!!**

