

INSTRUCTIONS FOR HOT WATER URN

- Place the urn on a level surface next to a power point
- Position the urn tap where it can be reached easily whilst in use.
- Fill the urn with fresh cold water to the desired level and replace urn lid.
- Take the water to the urn – **do not** lift or carry an urn filled with water.
- Plug in the urn and turn on
- For maximum heating, turn control knob clockwise until it stops.
- The red pilot light will signal that the power is on and the urn is heating.
- When the water has boiled, turn knob anti-clockwise until the pilot light is off.
- Urn will then cycle on and off to keep water close to boiling point.
- To re-boil the water, turn control knob to maximum position.
- After adding cold water, turn knob to maximum position.

Please Note:

When not in use, turn control knob and power outlet switch off.