

## **WOODSON BOILING PLATES and COFFEE WARMER**



### **Operating Instructions**

Use the correct cooking pans. The pan used should have a bottom which is solid and even as possible and which, at a diameter of 20cm, should have a maximum concavity of 1mm.

For smaller pan diameters the concavity will be correspondingly less. Pans with convex bottoms should not be used. The diameter of the bottom of the pan must not be smaller than the diameter of the hotplate.

### **Dial settings:**

- .5 For simmering and **for use as coffee warming plate with MEH Kilnox stainless steel bottom coffee pots**. Do not use all glass coffee pots on hot plates, as shattering may occur.
- 1 For main stages of slow cooking
- 1.5 For simmering large quantities
- 2 For frying meat and pan dishes
- 2.5 For bringing all dishes to steaming and cooking temperature
- 3 For boiling water for coffee, tea etc in a few minutes only.