




# RAVEANHEAT™ C6 SYSTEM : 12V RUGGED JACKET SETUP GUIDE

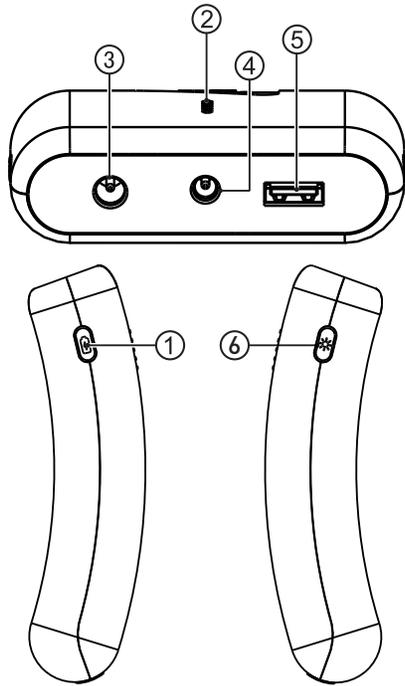


- ① POWER LEVEL BUTTON
- ② LED POWER INDICATOR
- ③ 12V OUTLET PORT
- ④ 12.6V INLET PORT
- ⑤ USB OUTLET PORT
- ⑥ FLASHLIGHT BUTTON

## CHECK BATTERY POWER

Before using your heated product, make sure your battery is fully charged. To do this, push the power level button on your battery. When the battery is fully charged, all four LED lights on the LED Power Indicator will light up (see battery manual for charging instructions).

## FLASHLIGHT OPERATION

To operate flash light press and hold the button for 3-5 seconds, to turn off, press and hold for 3-5 seconds.

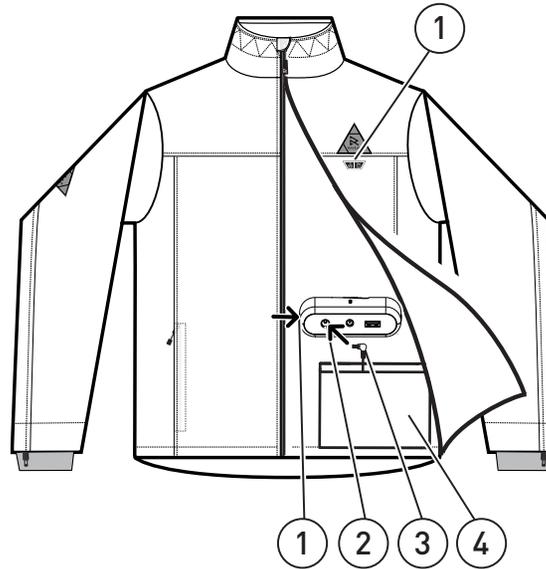


- 1. CONTROLLER BUTTONS
- 2. 12V OUTPUT POWER PORT
- 3. 12V POWER CORD
- 4. BATTERY POCKET

## CONNECTING BATTERY

Once your Ravean 12V battery is fully charged, plug the 12v power cord into the 12v output port. Then place it in the battery pocket.

## NOTE: CONTROLLER BUTTONS

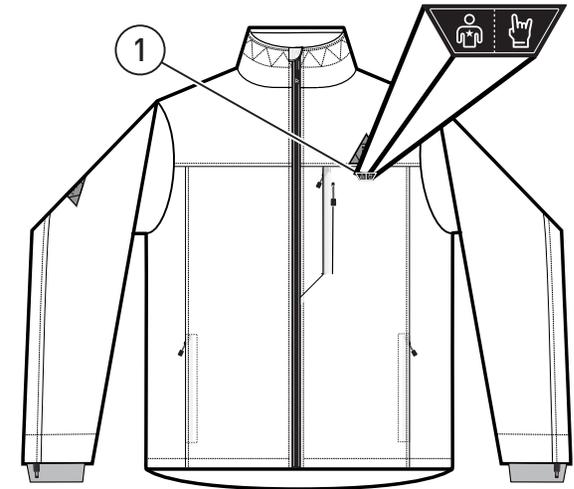

## 1. CONTROLLER BUTTONS

**TURNING ON:** Press and hold any of the controller buttons for 1-2 seconds to turn on. The button will light up and pulse red as it preheats (about 5 minutes). Then it will automatically adjust to medium heat (white led light).

**HIGH HEAT (RED LED):** To place on high heat, press button once after it turns on. The light will go solid red.

**MEDIUM (WHITE LED):** To place on medium heat, press button twice after it turns on. The light will go solid white.

**LOW HEAT (BLUE LED):** To place on low heat, press the control button three times after it turns on. The light will go solid blue.

**NOTE:** You can cycle through the various heat settings by continuing to press the button.

**TURNING OFF JACKET:** To turn off, press and hold the button until LED light turns off.

## JACKET QUICK START

Press and hold the controller buttons for the jacket or cuffs until the LED light located on the button lights up. Once the LED light is on, your garment will immediately begin warming you.