



Please check your box for accuracy.
All of these pieces should be included.

ITEM	PART NUMBER	QTY.
A	301/40-FLIGHTDECK	1
B	658/621-BLK	1



A
Flight Deck Hitting Mat (x1)

B
Adjustable Tee (x1)

SETUP ON GRASS

The Flight Deck has been designed for use primarily on grassy surfaces. To secure the Flight Deck to the ground, push conventional length golf tees through each of the four holes in the base.


SETUP ON HARD SURFACES


If you want to use your Flight Deck indoors or on a hard surface (like concrete), please note that the Flight Deck may shift, slide, or move after contact. Care must be taken to ensure your safety and the safety of those around you.

STANDARD SHOTS

To practice with wedges, irons, fairway woods or even driver off the deck, it is best to remove the Adjustable Tee from the base prior to securing the Flight Deck to the ground. This will allow you to swing down and through without restriction.

TEE SHOTS

To practice tee shots, simply insert the Adjustable Tee from underneath the Flight Deck and adjust the tee to your preferred height.

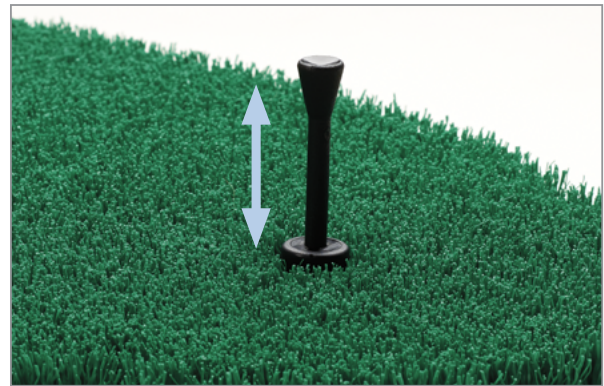

(For the best way to use the Flight Deck, consider the Fiberbuilt Practice Station for the ultimate in stability with a stance mat that is at the same height as the hitting surface.)

DOUBLE THE LIFE OF YOUR WARRANTY TODAY FOR FREE

For a free one-year extension to our standard warranty, exclusive access to insider deals, new product information and much more, register your mat today at:

FiberbuiltGolf.com/register

Be sure to select the following:

**FIBERBUILT GRASS SERIES
FLIGHT DECK**

SKU#: 301/40-FLIGHTDECK