


CLIP-ON TUNER

TGT-1


INSTRUCTIONS

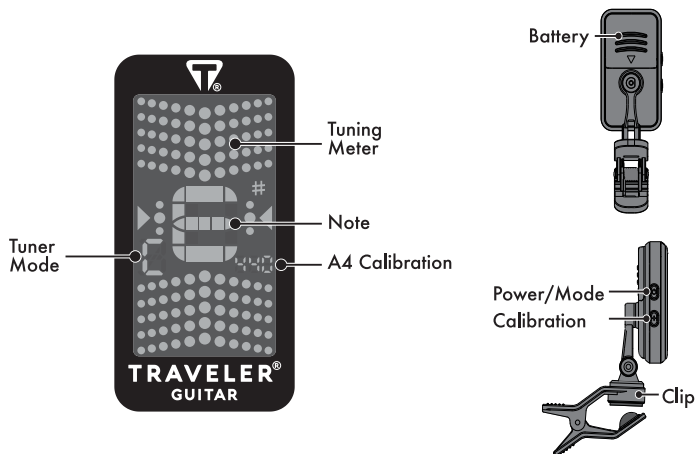

POWER ON/OFF

To switch the tuner on or off, press and hold the Power/Mode button for 1 second.

READING THE TUNER

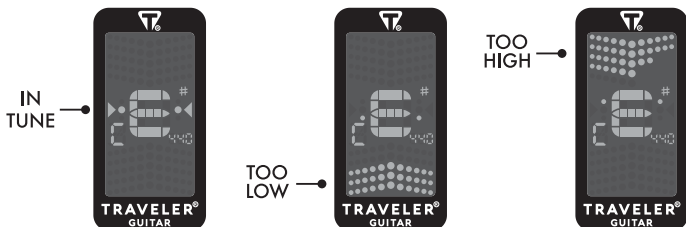

TUNER MODES

When the tuner is powered on, use the Power/Mode button to select one of the 5 tuning modes.

C = CHROMATIC For tuning all types of instruments or guitars with alternate tunings.

G = GUITAR For tuning standard tuned guitars.

B = BASS

V = VIOLIN

U = UKULELE

AUTOMATIC OFF

After 5 minutes of inactivity, the TGT-1 will turn off automatically to save power.

SPECIFICATIONS

Tuning Mode	Chromatic, Guitar, Bass, Violin, Ukulele
Tuning Range	B0-B7
A4 Calibration	430-450 HZ
Tuning Type	Automatic Clip-on Tuner
Tolerance	+ / -1 cent
Power	3V CR2032 battery
Accessories	Manual, CR2032 battery
Dimensions	W : 1" x H : 2" x D : 0.5"
Weight	1 ounce

BATTERY

Install the included battery positive (+) side up. If the screen malfunctions, try removing and reinstalling the battery.

TRAVELER GUITAR

EST. 1992 in REDLANDS, CALIFORNIA

www.travelerguitar.com

PLEASE RECYCLE

