



Console and PVS Maintenance Guide

Precor consoles and PVS displays require little maintenance once installed.

Important *The owner is responsible for maintaining Precor equipment in their facility based on the recommendations below and any accompanying material.*

We recommend that the console or display is cleaned before and after each exercise session.

To remove dust and dirt from the console or display:

- Clean the console or display using only a diluted solution of one part 91% isopropyl alcohol to one part water on a damp, lint-free cloth. You can also use a solution of 30 parts water to 1 part Simple Green (for more information, visit www.simplegreen.com). Let dry completely.
Important *DO NOT use any acidic cleaners. Doing so will weaken the paint or powder coatings and void the Precor Limited Warranty. Never pour water or spray liquids directly on the screen of the console or display.*
- Always dampen the cloth and then clean the console or display. Be sure to spray the cleaning liquid onto the cloth *first*, rather than the console, so that drips do not seep into the console or display.
- Avoid using any corrosive chemicals on the console or screen.
- Apply the cleaner with a soft, lint-free cloth. Avoid using gritty cloths.
- Use a soft, nylon scrub brush to clean grooves and textured surfaces.

For complete cardio cleaning and maintenance information, read the Cardio Maintenance Guide included with your equipment and available on www.precor.com.