NESPA Professional USERS' MANUAL [P-1]

DIMENSION: [W]: 135mm X[D]: 187mm X[H]:55mm[Including Projection]

WEIGHT: 845g [without AC Adaptor] • 160g [Standard AC Adaptor]


●POWER CONSUMPTION(AC Adaptor): AC100V~240V(50~60Hz): 600mA RMS Max

●EFFECTIVE LENGTH of Xe-Tube: 42mm

●COLOR TEMP.: 5,500K • ●LIGHT POWER: 3,000mW

BRIGHTNESS: 3,000,000 lux

*The Specifications & Appearance my be changed without notice.

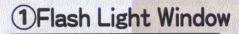

The Light Power is VERY STRONG, Don't Look at it DIRECTLY !!!]

2) Flash Light Indicator

After the Lid closed. the Flash Light can be detected with this window

3AC Adaptor

Plug In the Small Plug to the Rear Side of the Main Body of NESPA Pro & Adaptor to Wall Outlet.]

4 Pulse Frequency

Setting Switch

[After the Power Switch ON & Closing the Lid Push this Switch, to Set the Frequency: 30, 60, 120]

5 Pulse Frequency Indicator

[Yellow] 30 • [Green] 60 • [Red] 120 (Times) • Off [No Flash]

By turning the Power Switch OFF, the Pulse Frequency Setting

will be Released. For more Operation, Set the

Frequency, again.]

®Lid


Closing this Lid & Turn On the Power Switch, Set the Pulse Frequency. The Motor will start turning & the Flash will start Flashing, By Opening this Lid, every Operation will be Stopped.]

7 Disc Clamp Center

Set the CD/DVD, centering on the Clamper]

6 Power Switch

(By Turning this Switch ON. the Green LED will be Lighted on the Switch, & Every Operation will be Active.]

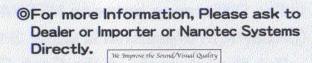


Nanotec Systems Nanotec Systems Inc. (Japan)

₹101-0026 Tokyo-to Chiyoda-ku, Kanda Sakuma gashi 78-3 Kanda NY Build. 4F TEL:+81(0)3 5825-6936 FAX:+81(0)3 5825-6717

NS

URL http://www.nanotec-systems.jp

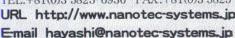



NESPA Professional USERS' MANUAL [P-2]

- 1) Set NESPA Professional on a flat(leveled) stable table or desk.
- ②Plug in the attached AC-Adaptor's Small Plug to rear side of the NESPA Pro & Adaptor its self to AC-wall outlet. [AC:100V~240V 50~60Hz(600mA Max.)]
- 30pen the Lid & set your CD or DVD at the CENTER CLAMPER Facing the Printed side UP. Close the Lid for setting the Pulse Frequency.
- **4TURN ON the Power Switch. [A Green LED will light ON on the Switch]**
- ⑤PUSH the [Pulse Frequency Setting Switch]. 1-push makes 30-times Setting[Yellow LED] 2nd-push makes 60-times[Green LED], and 3rd-push makes 120-times Setting[Red LED]. [the Pulse Frequency Indicator LED will lit indicating the Frequency.]
- *We don't reccommend to Set 120-pulse, at the beginning. Please try from 30-times & Check or Taste the Sound or Picture Quality. If you feel you need more treatment, try the additional TREATMENT again.
- 6By Pushing the [Pulse Frequency Setting Switch] the Flushing and the Motor Rotation will start. (If the ADDITIONAL Pushing of this Switch was done after some Flush, the Total Flushing Frequency will be the First Flash + Second Setting Total Amount.)
- ①After the Completion of the Flush Lighting, the Motor Rotation will be Stopped.
 Normal Pulse Interval is about 1.5-second, but after several treatment,
 the Intervals will be longer than 1.5-second.
- 80pen the Lid & take out the Disc.
- ●CAUTIONS●[Putting the NESPA Pro on a STABLE LEVELED PLACE & DON'T Shake the NESPA Pro Duaring the Operations]
- ●The Effect of the NESPA treatment will be changed by the DISC SITUATION, such as the difference of the Manufacturers, Manufacturing Lot, etc.
 So 30-pulse may be Enough for some Disc, but not Enough for the Other.
- Also, Everyone has differnt Taste for Sound & Picture. So we recommend to Try from Small No. of Pulse Treatment. After some trial, Please find your most appropriate Pulse Frequency.
- @The Difference between NESPA #1& NESPA Professional@
- ①NESPA Professional is using 3-times Stronger Flash Light than NESPA #1. But the Intervals of the Each Flashs is 1.5-second: [Pro] & 1.0-sec: [#1]. Thus, the Effect of the Treatment of Same Period of Time is 2-times Stronger with NESPA Pro than NESPA #1. [3÷1.5=2-times]
- ②The Pulse Frequency of NESPA #1 was about 120-pulse~150-pulse[about 2-minutes 10-seconds], & NESPA Pro has selectability of 30/60/120-pulses.