

# SCHOOL Watch®



## FEATURES

- ★ 6 Digits LCD Display with Hour, Minute, Second & Weekday
- ★ Hourly Chime and Daily Alarm
- ★ 12/24H selectable format, Auto Calendar
- ★ 1/100 second Chronograph with split function
- ★ LED backlight with choice of 7 colors

## LED LIGHT SETTING

In any mode, press LIGHT to light up the LED backlight for 3 seconds. To select another color, maintain pressure on LIGHT button until you reach the desired color.

## GENERAL INSTRUCTIONS

- ★ In normal mode (time display), Press ST/STP to check Month and Date
- ★ In normal mode (time display), Press RESET to check Alarm time
- ★ Press MODE to change mode:
  - Press MODE 1 time: Chronograph mode
  - Press MODE 2 times: Alarm setting
  - Press MODE 3 times: Time setting

## TIME SETTING

When the watch is in normal mode, press MODE button three times to enter into the time setting mode:

- ★ Seconds will be flashing. Press ST/STP to reset seconds to zero.
- ★ Press RESET and minutes will flash. Press ST/STP to set the correct minutes.
- ★ Press RESET and hours will flash. Press ST/STP to set the correct hours. To access the 24 hour format, press as many times as needed to display the right format.
- ★ Press RESET and day date will flash. Press ST/STP to set the correct date.
- ★ Press RESET and month will flash. Press ST/STP to set the correct month.
- ★ Press RESET and weekday will flash. Press ST/STP to set the correct weekday.
- ★ Press MODE to exit the time setting and to get back to normal mode.

## CHRONOGRAPH FUNCTION

When the watch is in normal mode, press once MODE

- ★ **Regular chronograph:** press ST/STP to start and ST/STP to stop, use RESET to reset, exit the mode by pressing MODE.
- ★ **Split function:** press ST/STP to start, to record the first time, press RESET, to get back to the chronograph, press RESET and press RESET to record the second time and so on for the other times. To stop the split function: first, get the chronograph going, then stop the chronograph by pressing ST/STP. To exit the mode, press MODE.

## ALARM SETTING

When the watch is in normal mode, press twice MODE

- ★ The hour is flashing, press ST/STP to set the correct hour for your alarm. A letter P below the hour means PM, the letter A means AM.
- ★ Press RESET to access the minutes setting, press ST/STP to set the correct minutes for your alarm.
- ★ Exit the alarm mode by pressing MODE

## ALARM SOUND ON/OFF

In normal display mode press ST/STP and RESET together to set ON/OFF the alarm. When the alarm sound is on, the 🔊 appears in the corner. When the 🔊 is not visible, the alarm sound is OFF.

## CHIME SOUND ON/OFF

In normal display mode press MODE and RESET together to set ON/OFF the chime. If all the week icons (MO/TU/WE/TH/FR/SA/SU) are visible when you press MODE and RESET, the chime sound is ON.

If all the week icons (MO/TU/WE/TH/FR/SA/SU) are not visible when you press MODE and RESET, the chime sound is OFF.

Your School Watch is 3 ATM water resistant. It's safe to wash your hands or play with water but it's not water resistant enough to swim or bath.

BY

**PRESCHOOL**  
Collection®