

**Kambrook - Australia**

Ground Floor, Suite 2, 170-180 Bourke Rd  
Alexandria NSW 2015, Australia

Locked Bag 2000  
Botany NSW 1455  
Customer Service Line 1300 139 798  
Customer Service Fax 1800 621 337

**[www.kambrook.com.au](http://www.kambrook.com.au)**

**Kambrook - New Zealand**

Private Bag 94411  
Botany, Manukau  
Auckland 2163  
New Zealand  
Customer Service Line/  
Spare Parts 0800 273 845  
Customer Service Fax 0800 288 513

**[www.kambrook.co.nz](http://www.kambrook.co.nz)**

# KAMBROOK

THE SMARTER CHOICE



**INSTRUCTION BOOKLET**

Suits models KEB415/  
KEB435/KEB445/KEB535

# Important

Please retain your instruction book for future use.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 0800 273 845 (New Zealand). Alternatively, visit us on our website at [www.kambrook.com.au](http://www.kambrook.com.au) or [www.kambrook.co.nz](http://www.kambrook.co.nz)

# Contents

Kambrook Recommends Safety First	p4
Your Kambrook Dream Collection Fitted Heated Blanket	p6
Using Your Kambrook Heated Blanket	p7
Care, Cleaning and Storage	p10

## Kambrook Recommends Safety First

# IMPORTANT: Please retain your instruction book for future use.

At Kambrook, we believe that safe performance is the first priority in any consumer product, so that you, our valued customer can confidently use and trust our products. We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

## Important Safeguards For Your Kambrook Dream Collection Fitted Heated Blanket

- Carefully read all instructions before operating the Kambrook heated blanket and save for future reference.
- Remove any packaging material and promotional stickers before using the heated blanket for the first time.
- Use the heated blanket only with the detachable controller CTL152 supplied. Refer to the markings on the heating unit for the model number of the controller.
- Connect only to 230V or 240V power outlet.
- Use this blanket as an under blanket only.
- Not recommended for futons or similar folding bedding systems.
- This blanket is not recommended to be used on an adjustable bed. If used on an adjustable bed, check that the blanket or cord cannot become caught, creased, kinked or damaged in any way.
- Make sure that the heating area (wire element) on any side of the bed does not hang over the edge of the mattress and that the following instructions are read carefully before using the blanket.
- Do not attempt to expose the internal wires.
- Do not use this blanket with an infant, an infirm person or anyone insensitive to heat.
- Use only for human use, not for pets.
- Overly extended application at a high setting can result in skin irritation or burns.
- Children under the age of three are not to use this heating blanket due to their inability to react to overheating.
- Avoid sharp objects. Do not insert pins or any sharp objects into the heated blanket as they may damage the electrical wiring.
- Do not use the heated blanket when folded, rucked or rolled.
- Do not tuck in blanket itself - only fitted skirt should be tucked in under mattress.
- Do not use when creased or damaged in any way.
- Keep control unit away from an open window.
- Be sure that this blanket is used only on an alternating current supply circuit of correct voltage.
- The flexible power supply cord and controller must, as far as practicable, be kept outside the bed.
- Be sure that the heated blanket is installed so that at all times the flexible supply plug is adjacent and accessible to the main power outlet.
- Do not use the heated blanket if it is wet.
- Switch off at the power outlet and remove plug when this blanket is not in actual use.
- This blanket must be kept in the fully spread condition at all times during use to avoid overheating. It is imperative that the blanket be frequently inspected to ensure that this condition is being maintained.
- Regularly inspect the heated blanket, power supply cord, plug and controller for any wear, damage or misuse. If signs of these are detected, immediately cease use of the appliance and return the entire unit to your nearest Kambrook Service Centre for examination, replacement or repair.

- Bed clothes should not be folded back when the blanket is switched on. Do not leave heavy objects on the bed when the unit is switched on.
- Arrange the blanket so that the heating wires are not beneath pillows and/or bolsters.
- Person suffering from bed-wetting should only use product specifically designed for this condition.
- The blanket must not be used over or under a waterbed.
- If any abnormality or defect in operation of this blanket is observed, discontinue its use immediately and consult the manufacture or a licensed electrician.
- There are no customer serviceable parts inside. The heated blanket is fitted with a specially designed controller and no attempt should be made to repair it or to replace the protective fuse. Have the heated blanket serviced only by a qualified service agent at your nearest Kambrook Service Centre.
- When storing the heated blanket, allow it to cool down before folding
- When storing, fold neatly but not tightly (or roll) in the original packaging without sharp bends in the heating element and store where no other objects will be placed upon it.
- Do not dry clean this blanket. Cleaning liquids may have a deleterious effect on the insulation covering of the heating unit. It is recommended to follow instructions for localized soiling or washing if soiling occurs. Please refer to Care, Cleaning and Storage instructions within this booklet.
- This heated blanket is for domestic use only. Not intended for medical use in hospitals.
- Avoid pressing creases into the heated blanket.
- It is recommended that a qualified and registered person inspect the heated blanket after each 3 years of use.


## Important Safeguards For All Electrical Appliances

- Fully unwind the power cord before use.
- Connect only to a 230V or 240V power outlet.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid or allow moisture to come in contact with the part, unless it is recommended in the cleaning instructions.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard, do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Kambrook Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Kambrook Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. **Misuse may cause injury.**
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.

# Your Kambrook Dream Collection Heated Blankets

Model	Mattress	Size WxL (approx)	Removable Cover	Skirt Size
KEB415	Single / King Single	1050 x 2000mm	No cover	400mm
KEB435	Double / Queen	1460 x 1880mm	No cover	450mm
KEB445	King	1780 x 2000mm	No cover	450mm
KEB535	Double / Queen	1460 x 1880mm	Fleecy cover	450mm

- Machine washable heated blanket
- Fully fitted skirt
- Removable fleecy cover for easy cleaning (KEB535 model only)
- Detachable heat setting controller (Note: Dual controllers for all Double/Queen/King size models)
- Simple slide switch operation
- 3 heat settings for your comfort (OFF/LOW/MED/HIGH)
- ON/OFF indicator light
- Controller plug can be removed from controller socket for storing
- Controller socket attached to blanket (dual sockets for Double/Queen/King models)

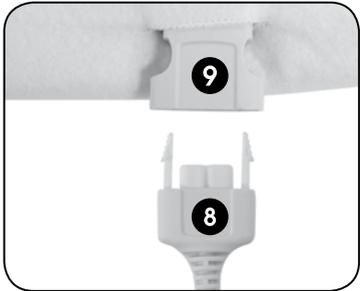

**Not Shown:**

- Quality heating wire
- Safety overheat protection



# Using Your Kambrook Heated Blanket

## Before First Use


Remove any promotional material and packaging from the heated blanket.

## Securing Your Fitted Heated Blanket

Unfold the heated blanket and lay flat on the mattress ensuring that the skirt is aligned with the corresponding edges and that the controller socket(s) is facing up and positioned at the top end of the mattress.

Ensure that the heating wire section on the heated blanket is clear of the pillow and does not hang over the sides of the mattress.

Pull the elastic inside the fitted skirt over the ends of the mattress (See Fig. 1). Ensure to pull the middle of the blanket so that it is evenly stretched and distributed over the entire mattress, ensuring there are no creases or rucking.

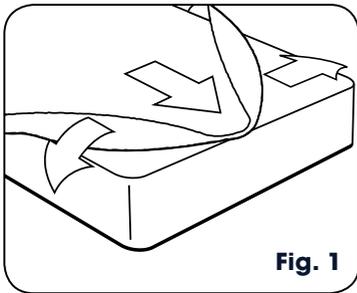

**NOTE:** The heated blanket must not be wider than the mattress with which it is to be used such that the heating wire hangs over the sides of the mattress. It is normal for a small section of the fitted skirt to be showing on top of a larger sized mattress.


No heating wire must be trapped or tucked into any part of the bed. Ensure the elastic of the fitted skirt is completely tucked under the entire mattress and secure.

**NOTE:** Ensure that the blanket is stretched completely flat when placed on the mattress and creases or rucking is not evident.



**CAUTION:** No heating wire must be trapped or tucked into any part of the bed.

When fitted to the mattress correctly, the controller socket(s) should be positioned at the top end of the mattress, near occupants shoulder area (See Fig.2).

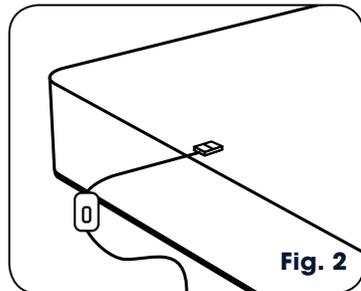

Ensure that when the blanket is fitted onto the mattress the controller(s) and flexible power supply are outside of the bed coverings and located in a position that will prevent accidental damage to the controller housing and cords.

Use this blanket only as an under blanket and do not use above the occupant of the bed.

# Using Your Kambrook Heated Blanket Continued...

## Fixing The Removable Cover (For KEB535 Model only)

Ensure the heated blanket is correctly fitted to the mattress before fitting the removable cover (if applicable).

When fixing the removable cover to the heated blanket, ensure the fleecy side of the cover is facing upwards.

Secure the removable cover to the heated blanket using the studs provided. Ensure all studs are fastened to prevent the cover from moving.

No other cover other than that supplied with the blanket should be used with the heated blanket.

## To Connect The Controller

Ensure the heated blanket controller is in the 'OFF' position and not connected to the power outlet.

To connect your controller, insert the controller plug into the controller socket (See Fig. 3).

Ensure that the plug is securely fastened in the socket so that the locking clips are fully inserted.

**NOTE:** The controller plug is designed to only fit the socket correctly one way - if the plug does not push in fully, turn the plug around.

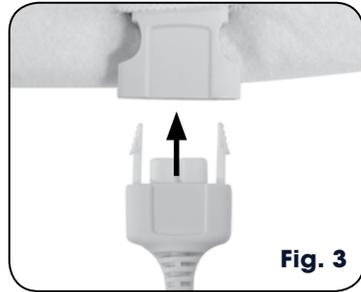


Fig. 3

Ensure that the plug is securely fastened in the socket so that the locking clips are fully inserted and no gap between the plug and socket (See Fig. 4)



Fig. 4

## To Detach The Controller

Ensure the heated blanket controller is in the 'OFF' position and disconnected from the power outlet.

Push inwards on the locking clips on the controller plug to release and withdraw the plug from the controller socket (See Fig. 5).

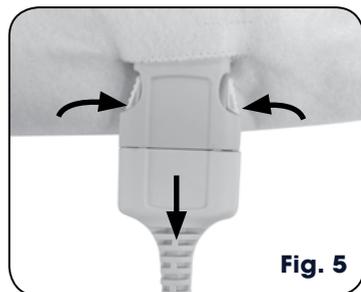


Fig. 5

## Storing Your Controller(s)

Remove the controller(s) when laundering your blanket. Store your controller(s) during summer months while your blanket remains on the bed as a comfortable under blanket.

## Dual Control Units

Your Double/Queen/King size heated blanket features two controllers for individual left and right side heating comfort.

## Turning Your Fitted Heated Blanket On

Ensure the heated blanket controller is switched to the 'OFF' position. Plug the cord into a 230V or 240V power outlet and switch the power on.

The Dream Collection heated blanket range has 3 heat settings and features an easy to use slide control (See Fig. 6).



To switch the blanket on, move the switch in an upward direction to the desired 'LOW', 'MED' or 'HIGH' temperature setting. The On/Off indicator light will illuminate while the heated blanket is 'ON' in any of the three heat settings.

The 3 settings allows you to choose the right balance of heat depending on your personal requirements:

- LOW
- MEDIUM
- HIGH (recommended for preheating only)

**NOTE:** Use the HIGH heat setting to preheat only.

## Turning Your Fitted Heated Blanket Off

To switch the blanket off, slide the switch to the 'OFF' setting. The On/Off indicator light will not illuminate when the heated blanket is 'OFF'.

**NOTE:** On initial use, it is recommended that the blanket be set on HIGH for 3 hours before sleeping on the bed.

This will assist in drying out any moisture which has been accumulated in the mattress.

You may notice an odour when using the heated blanket for the first time due to the insulation material. This is harmless and will subside quickly.

It is not recommended that you sleep with the heated blanket switched on. Should you choose to leave your blanket on all night, however, the 'LOW' heat setting should be used.

# Care, Cleaning and Storage

## Cleaning The Heated Blanket

**NOTE:** Do not dry clean.  
Do not iron.

Use only the following instructions when cleaning the heated blanket.

Before cleaning, ensure that the controller(s) is unplugged from the power supply and detached from the blanket.

## Spot Cleaning

Sponge the affected area using a lukewarm neutral detergent or mild soapy solution, then sponge using clean water.

Remove any excess water by compressing the wet area between absorbent towels.

## Hand Washing

Immerse the heated blanket with controller(s) removed in a soapy solution of lukewarm water and mild, neutral detergent.

Soak for five minutes then gently squeeze the solution through the blanket.

Rinse thoroughly in clean, lukewarm water, then gently squeeze any excess water from the heated blanket.



**WARNING:** The controller must be removed from the heated blanket before washing. Never immerse the detachable controller in water or any other liquid.

## Machine Washing

The heated blanket can be washed in a domestic washing machine (size permitting) or by a commercial laundry.

To wash your blanket in a washing machine, wash on the WOOL or DELICATES setting using a neutral wool detergent or mild soapy solution.

DO NOT wash on a HOT cycle; the temperature must be kept below 30°C.

DO NOT use high speed or extra spin cycles.

DO NOT machine wash with the controller connected to the blanket.

## Air Drying

Drape the heated blanket across a clothesline and allow to drip dry.

DO NOT use pegs to secure the heated blanket in position.

DO NOT dry with a hair dryer or heater.

DO NOT twist or wring dry.

DO NOT tumble dry the heated blanket as may damage the internal heating wires.

DO NOT use moth balls or sprays.



**WARNING:** DO NOT use the heated blanket if it is wet.



**WARNING:** DO NOT tumble dry the heated blanket as this may cause damage to the heating wires.

## **Cleaning the Removable Cover (for KEB535 model only)**

If the heated blanket has a removable fleecy cover, remove and wash separate to the heated blanket.

Once removed from the heated blanket, this cover can be either hand washed or machine washed.

This cover can be washed in a domestic washing machine (size permitting) or by a commercial laundry.

To wash this cover in a washing machine, wash on the WOOL or DELICATES setting using a neutral detergent or mild soapy solution.

If hand washing the cover, use lukewarm water and a mild soapy solution only.

DO NOT wash on a HOT cycle; the temperature must be kept below 30°C.

DO NOT use high speed or extra spin cycles.

DO NOT iron the cover.

Once washed, ensure to stretch the cover into its original shape whilst damp to prevent distortion during drying.

Dry naturally by draping over a clotheslines or tumble dry on LOW setting only.

## **Storage**

When not in use, pack the heated blanket in its original packaging for best protection and store in a cool, clean and dry location.

Avoid pressing sharp creases into the blanket and store where no objects will be placed upon it.

Detach the controller(s) from the blanket when storing.

Kambrook recommends to store your controller(s) during the summer months while the heated blanket remains on the bed as a comfortable under blanket.