

# KAMBROOK



**INSTRUCTION BOOKLET**

Suits all  
KFA210/KFA211/KFA213  
models

# Contents

Kambrook Recommends Safety First	p3
Your Kambrook Arctic Desk Fan	p5
Using Your Kambrook Arctic Desk Fan	p6
Care and Maintenance	p7

## Important

Please retain your instruction book for future use.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 0800 2738 45 (New Zealand). Alternatively, visit us on our website at [www.kambrook.com.au](http://www.kambrook.com.au) or [www.kambrook.co.nz](http://www.kambrook.co.nz)

# IMPORTANT: Please retain your instruction book for future use.

At Kambrook, we believe that safe performance is the first priority in any consumer product, so that you, our valued customer can confidently use and trust our products. We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

## Important Safeguards For Your Kambrook Arctic Desk Fan

- Carefully read all instructions before operating the Kambrook Arctic Desk Fan for the first time and save for future reference.
- To protect against electric shock, do not immerse the fan, cord or plug in water or any other liquid
- This fan is intended for household use only and not for commercial or industrial use.
- Disconnect the power plug before dismantling, assembling or before cleaning and when the fan is not in use.
- Avoid touching mobile parts of the fan.
- Ensure the fan is on a dry and even surface.
- Never insert fingers, pencils or any other objects through the guards whenever the power plug is connected, in particular while the fan is switched on.
- The fan must not be used if the guards are not fastened correctly, according to these instructions.
- Do not operate in the presence of explosives and/or flammable fumes or liquids.
- Never leave the fan unattended when in use.
- Do not unplug the fan by pulling on the cord.
- Never carry the fan by the cord or yank to disconnect from an outlet; instead, grasp the cord and pull to disconnect. Do not pull the cord around sharp edges or corners.

# Important Safeguards For All Electrical Appliances

- Carefully read all instructions before operating the appliance and save for future reference.
- Remove and safely discard all packaging material and promotional labels before using the appliance for the first time.
- Fully unwind the power cord before use.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid, unless it is recommended in the cleaning instructions.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance, by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to inspect the appliance regularly. Do not use the appliance if the power supply cord, plug, connector or appliance becomes damaged in anyway. Return the entire appliance to the nearest authorised Kambrook Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Kambrook Service Centre.
- This appliance is for household use only. Do not use this appliance for other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.  
**Misuse may cause injury.**
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.

 
# Your Kambrook Arctic Desk Fan

1. Fan blade size:
  - KFA210 23cm
  - KFA211 30cm
  - KFA213 40cm
2. Choice of speed settings:
  - KFA210 2 settings
  - KFA211/KFA213 3 settings
3. 80° oscillation to disperse the air throughout the room
4. Easy to use controller switch (KFA210 only)
5. Easy twist controller switch (KFA211 and KFA213 only)
6. Tilt adjustable head to control the direction of the air

7. Metal grille and plastic blades
8. Convenient carry handle for easy portability

## Parts List

9. Front grille with securing clips and screw
10. Rear grille
11. Guard locking nut and blade cap (KFA211 and KFA213 only)
12. Plastic fan blade
13. Motor head
14. Base
15. Three base screws (not shown)

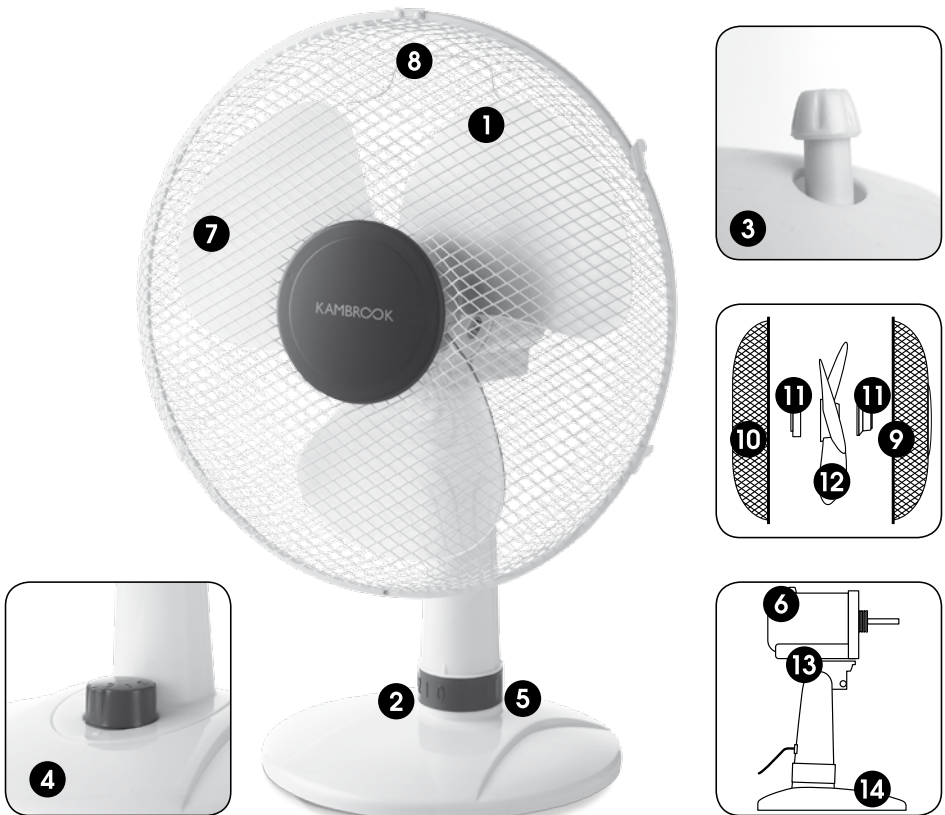

# Using Your Kambrook Arctic Desk Fan

## Before First Use

Remove any promotional material from the fan.

 


**IMPORTANT:** When unpacking the fan, check to see you have received all the items listed in the Parts List, before discarding the packaging.

## Assembling Your Arctic Desk Fan

### Base Assembly (KFA211 and KFA213 Only)

1. Turn the motor head housing upside down.
2. Locate the bottom of the housing onto the base so that it sits securely into place.
3. Using the 3 supplied base screws, securely fasten the base to the motor head housing.

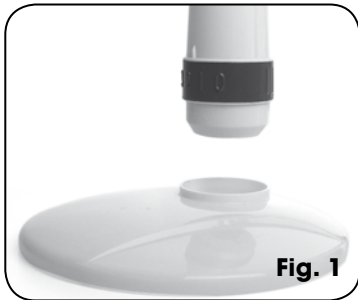

**NOTE:** The KFA210 base is already connected with the motor housing.

## Fan Head Assembly

1. Remove the Blade Cap (KFA211 and KFA213 only) from the Motor shaft by turning it clockwise, and then remove the Guard Locking Nut by turning it anti-clockwise.
2. Thread the Motor shaft through the centre hole of the Rear Grille, placing the Rear Grille into position. Make sure that the carry handle, on the back of the Rear Grille is located above the motor housing. Ensure the Rear Grille is aligned with the locating pins and fix the grille into position by replacing the Guard Locking Nut. Make sure that the Rear Grille has not slipped off the locating pins before tightening. This should be done by hand. Do not force.

 
**NOTE:** When positioning the Rear Grille on the Motor shaft, always ensure the carry handle on the grille is positioned in the upright position.

3. Insert the Plastic Blade onto the Motor shaft, and match the pin slots in the blade with the Motor shaft pin.
4. Fix the blade into place by tightening the Blade Cap (KFA211 and KFA213 only) onto the Motor shaft in an anti-clockwise direction. This should be done by hand. Do not force.

**NOTE:** Ensure the fan blade engages fully onto the shaft. Please note this may require some force to ensure it is fully engaged.

5. Unlatch the Securing Clips on the Front Grille and unscrew the small screw located at the bottom of the front guard.
6. Press together the Front and Rear Grille, and secure by snapping shut the Securing Clips over edges of both grilles. Make sure that the small holes at the bottom of both grilles are aligned. Tighten the Securing Clips by hand.

7. Thread the screw through the small holes of both the front and back grilles, and tighten using the nut provided.

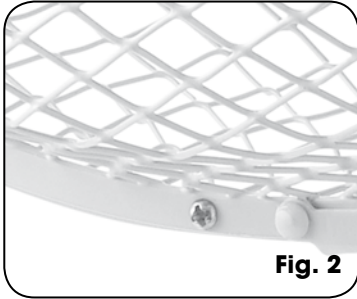

## To Operate the Arctic Desk Fan

Plug the cord into a 230V or 240V power point and switch on.

**NOTE:** To avoid an electrical circuit overload, it is recommended that no other appliances are plugged into the same circuit as your fan, when it is in use.

Use the Controller Switch to select the desired air flow speed setting.

- 0 – The fan is in the 'OFF' position
- 1 – Low
- 2 – Medium
- 3 – High



(KFA210 only offers 2 settings)

## Setting the Oscillation

The oscillation function works in all air flow settings.

Press down the Oscillation button to activate. The fan will begin to oscillate from side to side.

Lift the Oscillation button to stop the fan from oscillating.

**NOTE:** The Oscillation button is located behind the Rear Grille, on the Motor head housing.

## Adjustable Tilting Head

The Arctic Desk Fan incorporates an Adjustable Tilt Head for greater air coverage.

To adjust the angle of the head on the KFA210, loosen the Control Knob located beneath the Motor head housing, select the required tilt angle, then tighten the Control Knob.

To adjust the angle of the head on the KFA211 and KFA213, while securely holding the shaft of the fan body, simply lift or lower the Motor head housing, the head will click as it is being adjusted.

## Care and Maintenance

Always switch the Arctic Desk Fan off, prior to cleaning the housing, base, grilles and blades.

To clean the outside of the fan, wipe the exterior with a soft, damp cloth. Never use an abrasive cleaner.

When not in use, store the fan (preferably in its original box) in a cool, clean and dry location.

**Kambrook - Australia**

Ground Floor, Suite 2, 170-180 Bourke Rd  
Alexandria NSW 2015, Australia

Locked Bag 2000  
Botany NSW 1455  
Customer Service Line 1300 139 798  
Customer Service Fax 1800 621 337

**[www.kambrook.com.au](http://www.kambrook.com.au)**

**Kambrook - New Zealand**

Private Bag 94411  
Botany, Manukau  
Auckland 2163  
New Zealand  
Customer Service Line/  
Spare Parts 0800 273 845  
Customer Service Fax 0800 288 513

**[www.kambrook.co.nz](http://www.kambrook.co.nz)**

Due to continual improvement in design or otherwise, the product you purchase may differ slightly from the illustration in this book. Issue B17