 


# KAMBROOK

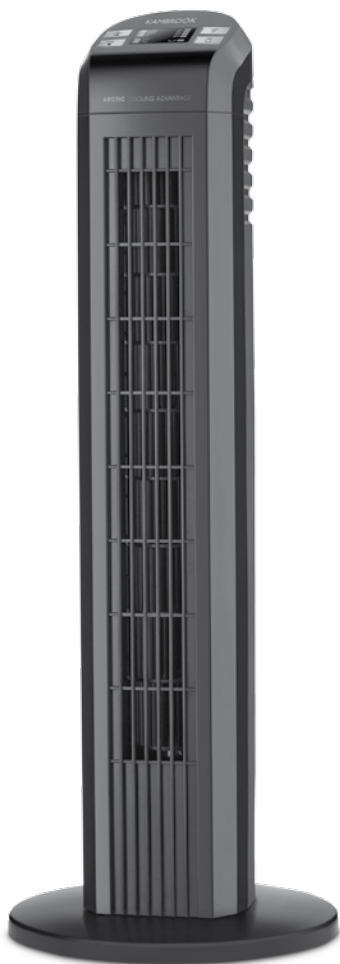

**INSTRUCTION BOOKLET**

Suits all KTF816 models

# Important

Please retain your instruction book for future use.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 0800 2738 45 (New Zealand). Alternatively, visit us on our website at [www.kambrook.com.au](http://www.kambrook.com.au) or [www.kambrook.co.nz](http://www.kambrook.co.nz)

# Contents

Kambrook Recommends Safety First	p4
Your Kambrook Arctic Tower Fan	p6
Using Your Kambrook Arctic Tower Fan	p7
Care, Cleaning and Storage	p11

# IMPORTANT: Please retain your instruction book for future use.

At Kambrook, we believe that safe performance is the first priority in any consumer product, so that you, our valued customer can confidently use and trust our products. We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

## Important Safeguards For Your Kambrook Arctic Remote Controlled Tower Fan

- Carefully read all instructions before operating the tower fan for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the fan for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this fan.
- When unpacking the fan, check to see you have received all the items listed in the parts list, before discarding the packaging.
- Do not place the fan near the edge of a bench or table during operation. Ensure that the surface is level, stable, clean and free of water and other substances.
- Always ensure the fan is properly assembled before use. Follow the instructions provided in this book.
- This fan is intended for household use only and not for commercial or industrial use.
- Disconnect the power plug before assembling, dismantling or before cleaning and when the fan is not in use.
- Avoid touching moving parts of the fan.
- Never insert fingers, pencils or any other objects through the grille guards whenever the power plug is connected, in particular while the fan is switched on.
- The fan must not be used if the base is not fastened correctly, according to the instructions provided in this book.
- Do not operate in the presence of explosives and/or flammable fumes or liquids.
- Never leave the fan unattended when in use.
- Do not unplug the fan by pulling on the cord.
- Never carry the fan by the cord or yank to disconnect from an outlet; instead, grasp the cord and pull to disconnect. Do not pull the cord around sharp edges or corners.
- Always switch off at the power outlet, and then unplug the fan from the outlet:
  - Before leaving it unattended
  - Before attempting to move the fan
  - Before cleaning and maintenance unless otherwise specified in this booklet
  - Immediately after use.

- To prevent damage to the fan do not use alkaline cleaning agents when cleaning, use a soft cloth and mild detergent.
- Do not place anything, on top of the fan when assembled, when in use and when stored.
- Store the unit out of reach of children.
- Keep the fan clean. Follow the cleaning instructions provided in this book.

## Important Safeguards For All Electrical Appliances

 
- Fully unwind the power cord before use.
- Connect only to a 230V or 240V power outlet.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid or allow moisture to come in contact with the part, unless it is recommended in the cleaning instructions.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard, do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorized Kambrook service centre for examination and / or repair.
- Any maintenance other than cleaning should be performed at an authorised Kambrook Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. **Misuse may cause injury.**
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.

# Your Kambrook Arctic Tower Fan

1. 77cm tower fan
2. Oscillating body to circulate air throughout the room
3. Control panel featuring;
  - FAN Off/Speed button (Includes 3 speed settings; low, medium and high)
  - MODE button (includes 2 cooling modes; nature and reduction mode)
  - TIMER button (Max. 8 hours)
  - OSC button to set oscillation
4. Base stand (two fitted pieces)
5. Remote Control with soft touch buttons

## Not Shown

- Convenient carry handle for easy portability
- 5 base stand fastening screws

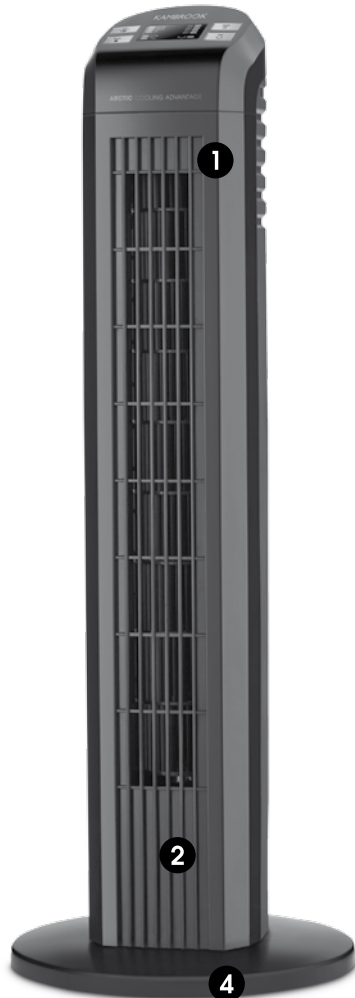

# Using Your Kambrook Arctic Tower Fan

## Before First Use

Remove your tower fan from its carton and associated protective wrapping.

Ensure that all parts listed are accounted for before discarding the packaging.

Unwind the cord to its full length and remove any promotional labels and or packaging materials from the tower fan.

Place the tower fan on a firm, level surface in a stable position. Visually inspect the air inlet and outlets to ensure no foreign materials are blocking these areas.



 
**WARNING:** When unpacking the fan, check to see you have all the items listed in the parts list, before discarding the packaging.

**NOTE:** Assembly of the fan requires a Phillips head screwdriver (not supplied).


## Assembling Your Arctic Tower Fan

To assemble the base stand:

1. The tower fan base stand comes in two separate pieces; piece (a) and piece (b) that must be fixed together before being fitted to the fan body (see Fig.1).

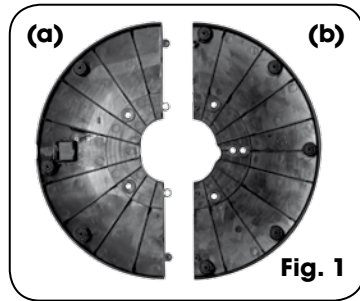


 2. To assemble the base stand, first carefully place the tower fan body on its side. Holding base stand piece (a), align the four locating posts on piece (b) with the corresponding slots found in base stand piece (a) and firmly push downwards until the base stand is securely fixed together (see Fig. 2).

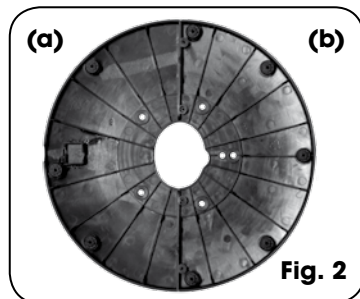


## Using Your Kambrook Arctic Tower Fan continued

 3. Thread the power cord through the circle cord opening, once the power cord is pulled through, align the base stand with the tower fan body being sure that the power cord is situated to sit on top of the groove found on base stand piece (a). Press the power cord into the cord clip to secure it into place (See Fig. 3).

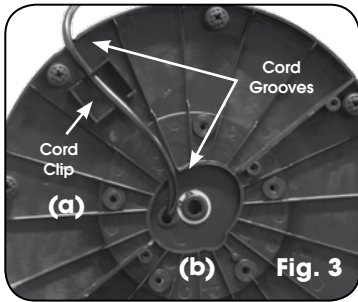

 4. Fit the base stand on to the stem located on the base of the tower fan, using the 5 fastening screws supplied, screw the base stand to the tower fan body and fasten until tightened (see Fig. 4).

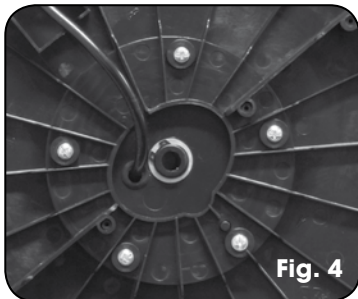

5. Return the tower fan to its upright position. It is now ready for use.



**WARNING:** Do not operate the tower fan without the base stand fitted.



**WARNING:** Never insert fingers, pencils or any other objects through the guards whenever the power plug is connected, in particular while the fan is switched on.

**NOTE:** Ensure the power cord is not caught or trapped between the tower fan base and the floor flat surface at all times.



## Operating Your Tower Fan


To operate the tower fan, plug the power cord into a 230V or 240V electrical outlet and switch on. Be sure that the plug fits tightly as a loose fit will cause overheating and damage the plug.

**NOTE:** To avoid an electrical circuit overload, it is recommended that no other appliances are plugged into the same circuit as your fan, when it is in use.

**NOTE:** To avoid infrared interference that may trigger the operation of the cooling fan, ensure the fan is positioned away from other infrared remote controlled appliances.

## Fan Speed Settings

The tower fan has three fan speed settings; (LOW), (MED) and (HIGH).

To start the tower fan, turn the tower fan on by pressing the 'FAN'  button once; the unit will be in NORMAL fan mode, at LOW speed setting.

Pressing the 'FAN' button a second time will set the tower fan into MEDIUM speed setting. Pressing the 'FAN' button a third time will set the tower fan into HIGH speed setting.

To turn the tower fan OFF, press the 'FAN' button continuously until none of the indicator lights are illuminated on the control panel display and the fan is no longer running. Then turn off at the power outlet and remove the plug from the power outlet.

## Setting the Nature and Reduction Mode

The tower fan has a NATURE and REDUCTION setting.

Both the NATURE and REDUCTION modes can be used on any fan speed. The LED screen will indicate what mode the fan has been set in.

### Nature Mode

The NATURE mode simulates the natural rise and fall of the wind over time.

Once a fan speed setting is selected, press the 'MODE' button once to activate the NATURE setting. The fan will now alternate between the pre-selected setting, all lower settings and OFF.

To switch the NATURE mode off, press the 'MODE' button twice, until the indicator light disappears.

### Reduction mode

The REDUCTION mode allows you to decrease the fan speed over time.

Once a fan speed setting is selected, press the 'MODE' button twice to activate the REDUCTION setting. After 30 minutes, the selected setting will drop to the next lowest setting.

For example if the fan speed is set at MED, after 30 mins it will drop down to LOW, and remain on LOW until the unit is turned off.

To switch the REDUCTION mode off, press the MODE button once. The fan will now be in normal operation

### Setting the Oscillation

This function will work in any mode. Pressing the 'OSC' button once will allow the tower fan to oscillate from side to side. To stop the unit oscillating, press the 'OSC' button once more.

# Using Your Kambrook ArcticTower Fan continued

## Setting the Timer ⌚

The timer function works in all operating modes and switches the unit into standby mode after the selected number of hours have elapsed.

The Tower Fan incorporates an eight hour, count down timer, which allows the fan to switch itself off after 1, 2, 4 or 8 hours.

Press the TIMER button once to activate the timer setting. The timer will then be set to turn off the fan in 1 hour and the 1h indicator will illuminate on the control panel display.

Press the TIMER button again, to set the fan to switch itself off after 2 hours, and the 2h indicator will illuminate on the control panel display.

Similarly, pressing the TIMER button a 3rd or 4th time will set the fan to switch itself off after 4 or 8 hours, and the relevant setting will illuminate on the control panel display.

To cancel the TIMER press the timer button continuously until none of the timer indicator lights are illuminated on the control panel display (See fig.5).

## Using the Remote Control

The remote control buttons operate in the same way as those on the fan control panel.

Your remote control takes 2 x AAA Batteries.



## Care, Cleaning and Storage

1. Ensure that the tower fan is switched OFF and disconnected from the power outlet before cleaning.
2. Use a clean, dry cloth to clean the external surfaces of the tower fan. If the tower fan has collected dirt inside the unit, have the unit cleaned by a qualified service agent. Do not operate the tower fan in this condition.
3. Do not attempt to open the case of the tower fan at any time as there are no customer serviceable parts inside.
4. When not in use, remove the base stand and screw connection ring to the stem on the base. Store the tower fan (preferably in its original box) in a cool, clean and dry location.

**Kambrook - Australia**

Ground Floor, Suite 2, 170-180 Bourke Rd  
Alexandria NSW 2015, Australia

Locked Bag 2000  
Botany NSW 1455  
Customer Service Line 1300 139 798  
Customer Service Fax 1800 621 337

**[www.kambrook.com.au](http://www.kambrook.com.au)**

**Kambrook - New Zealand**

Private Bag 94411  
Botany, Manukau  
Auckland 2163  
New Zealand  
Customer Service Line/  
Spare Parts 0800 273 845  
Customer Service Fax 0800 288 513

**[www.kambrook.co.nz](http://www.kambrook.co.nz)**

**KAMBROOK**

Due to continual improvement in design or otherwise, the product you purchase may differ slightly from the illustration in this book. Issue B17