

**Kambrook** 461 Plummer Street, Port Melbourne 3207, Australia  
Customer Service Line (free call) 1800 800 634 Customer Service Fax 1800 621 337  
**Kambrook** New Zealand, Private Bag 94411, Greenmount, Auckland, New Zealand  
Customer Service Line/Spare Parts 09 271 3980 Customer Service Fax 0800 288 513

# 8 Litre Urn



## **KAMBROOK SAFETY**

Welcome to Kambrook and your new 8 Litre Urn. At Kambrook, we believe that the safe performance is the first priority in any consumer product so that you, our valued customer, can confidently use and trust our appliances. We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

### **IMPORTANT SAFEGUARDS FOR YOUR KAMBROOK 8 LITRE URN**

Carefully read all instructions before operating and save for future reference.

Remove any promotional stickers before using the urn for the first time.

This appliance is designed for the boiling of drinking quality water only, never use it to heat or boil any other liquids or food.

This appliance is for household use only. Do not use this appliance for other than its intended use. Do not use outdoors.

Unwind the cord before use.

This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure they can use the appliance safely.

Young children should be supervised to ensure that they do not play with the appliance.

Do not leave the appliance unattended when in use.

Do not touch hot surfaces. Use handles for lifting and carrying the appliance.

Always use the appliance on a dry, level surface. The urn is not intended for use on water craft or other non-stationery vehicles.

Do not operate the urn on an inclined surface.

Do not move the urn while it is switched on.

Keep clear of walls, curtains and other heat or steam sensitive materials. Minimum 200mm distance.

Do not place the urn on or near a hot gas or electric burner, or where it could touch a heated oven.

Do not let the cord hang over the edge of a table or counter, touch hot surfaces or become knotted.

Do not immerse urn cord or power plug in water or any other liquid.

Always switch appliance to 'OFF', switch off at the power outlet and then remove the plug from the power outlet before attempting to move the appliance, when the appliance is not in use and before cleaning or storing.

The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

## Features of your Kambrook 8 Litre Urn



1. Safety locking lid

2. Cool touch carry handles

3. Water window

4. Power 'on' light

5. Variable temperature control

6. Non-drip tap with two way flow lever

7. 1800 watt concealed element

8. Boil dry cut out protection

9. Safety reset button (under the base)

Regularly inspect the power supply cord, plug and actual appliance for any damage. If found damaged in any way, immediately cease use of the appliance and return unit to the nearest authorised Kambrook centre for examination, replacement or repair.

## **OPERATING YOUR KAMBROOK 8 LITRE URN**

Remove any promotional and packaging materials before use.

It is recommended that before the first use, the urn is filled to the maximum level, boiled and water discarded.

1. Fully unwind power cord.
2. Place the urn on a dry, level surface.
3. To fill with water, turn the locking lid anti-clockwise and remove.



Use a small container to fill the urn. Do not fill above the maximum 8 litre mark on the external water window as boiling water may splash out from the urn.

4. After filling the urn, ensure that the lid is replaced and locked firmly into position.
5. Plug the power cord into a 230/240v power outlet and switch on.
6. Turn the variable heat control to '5' for fast boiling. The red power 'on' light will illuminate.

When the unit has boiled, select the desired setting from 'MIN' to '4' to maintain temperature (recommend setting '2' or '3' for tea or coffee).

To pour hot water, place a cup below the non-drip tap and push the tap down. For continuous pouring, lift the tap in the vertical position.

After use, switch the appliance to 'OFF', switch the power off at the power outlet and then remove the plug when appliance is not being used and before cleaning.

*NOTE: The lid should always be fitted and locked into position when in use.*

Use caution when pouring water from the urn, as boiling water will scald. Do not pour the water too quickly.

Do not open the lid when in operation as steam may escape from the top.

Steam may escape from the steam holes on top of the urn. Exercise caution at all times.

When the urn is in use, please do not place the urn under any objects such as a cupboard, as the escaped steam may cause damage to the overhead object due to heating or water condensation

Always empty the urn before moving to a new position/location.

Never carry the urn when in operation.

Always use the handles to carry the urn.

## **SAFETY BOIL DRY PROTECTION**

The urn is fitted with a safety device which protects against overheating should the appliance be operated with insufficient water or has boiled dry. If this occurs, the urn will stop heating. The red power 'on' light will turn off.

Switch the appliance to off, switch the power off at the power outlet and allow the urn to cool. Press the safety reset button under the base before refilling the urn. The safety device will then be reset and the urn will be ready for use.

## **CARE AND CLEANING**

Always switch the appliance to 'OFF', switch the power off at the power outlet and then remove the plug before cleaning. Never immerse the urn controls or cord in water, or allow moisture to come in contact with these parts.

### **Removal of mineral deposits**

Mineral deposits in tap water may cause the urn element plate to discolour. This may be removed by using a commercial kettle descaler which is available from most leading supermarkets, department and hardware stores. Alternatively;

1. Fill the urn until 2/3 full with 1 part vinegar and 2 parts water. Boil and allow to stand overnight.
2. Empty the solution from the urn. Fill the urn with clean water, bring to boil and discard the water. Repeat and the urn will be ready for use.

### **To clean the exterior**

The outside of the urn may be wiped over with a damp cloth and polished with a soft, dry cloth.

*NOTE: Do not use chemical, steel wool, or abrasive cleaners to clean the urn.*

## Notes

---



## KAMBROOK 12 MONTH REPLACEMENT WARRANTY

Kambrook warrants the purchaser against defects in workmanship and material for a period of 12 months from the date of purchase (3 months commercial use).

Guarantee and purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the Kambrook guarantee.

Kambrook reserves the right to replace or repair the appliance within the warranty period,

Warranty does not apply to any defect, deterioration, loss, injury or damage occasioned by, or as a result of the misuse or abuse, negligent handling or if the product has not been used in accordance with the instructions. The guarantee excludes breakages and consumable items such as kneading blades.

This warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced. In the event of Kambrook choosing to replace the appliance, the guarantee will expire at the original date, i.e. 12 months from the original date of purchase.

In Australia, this KAMBROOK Guarantee is additional to the conditions and guarantees which are mandatory as implied by the Trade Practises Act 1974 and State and Territory legislation.

For service, spare parts or product information in Australia, please call KAMBROOK on the Customer Service Line; 1300 139 798.

For service, spare parts or product information in New Zealand, please call KAMBROOK New Zealand; 0800 273 845. For spare parts phone 0800 273 845.

If claiming this guarantee the product must be returned freight prepaid.

YOUR PURCHASE RECORD (Please complete)

Attach a copy of the purchase receipt here.

DATE OF PURCHASE \_\_\_\_\_

MODEL NUMBER \_\_\_\_\_

SERIAL NUMBER \_\_\_\_\_

PURCHASED FROM \_\_\_\_\_

(Please don't return purchase record until you are making a claim.)



### **Kambrook - Australia**

461 Plummer Street, Port Melbourne, 3207, Australia

Customer Service Line 1300 139 798

Customer Service Fax 1800 621337

### **Kambrook - New Zealand**

Private Bag 94411, Greenmount, Auckland, New Zealand

Customer Service Line/Spare Parts 09 271 3980

Customer Service Fax 0800 288 513