

 
# Important!

Keep this important information  
for future reference

- TREAT MISSY KISSY® GENTLY AND LOVINGLY.
- Feed water only.
- Do not place doll in water.
- Do not turn doll head all the way around.
- Use Missy Kissy® accessories only.
- Wipe clean only.

## To Install/Replace Batteries:

Requires 3 x 1.5V size AA batteries.  
To install or replace batteries, use a  
Phillips screwdriver to loosen screw on  
battery compartment top located on the  
back of the doll. Lift top and replace  
batteries. Once batteries are replaced,  
close top and tighten screw.

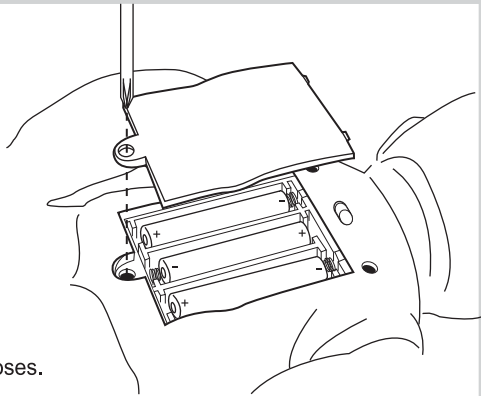

Batteries included for demonstration purposes.  
Non-rechargeable batteries are not to be recharged.  
Rechargeable batteries are to be removed from the toy before being charged.  
Rechargeable batteries are only to be charged under adult supervision.  
Different types of batteries or new and used batteries are not to be mixed.  
Only batteries of the same or equivalent type as recommended are to be used.  
Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.  
Batteries are to be inserted with the correct polarity.  
Exhausted batteries are to be removed from the toy.  
The supply terminals are not to be short-circuited.

# Missy Kissy®

Designed by Berenguer®

## Missy Kissy® Care Guide

Keep this information for future reference.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



For questions or comments, visit [www.jctoys.com](http://www.jctoys.com)  
or contact us at [info@jctoys.com](mailto:info@jctoys.com)

## On/Demo/Off

(install batteries before play)

Switch doll on and let the fun begin.

 
(On/Demo/Off switch is located on doll's back)

♪ Song and phrase will play once doll is switched on! ♪



## Feeding Time:


**"I'm hungry... can I have my bottle please?"**

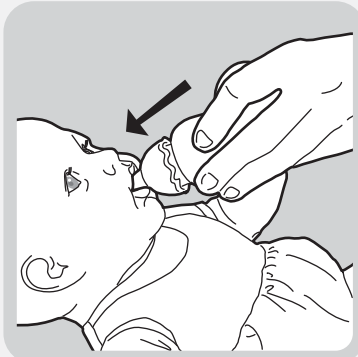

2

When Missy Kissy® is hungry feed her with her special baby bottle. (Use water only). Place bottle tip in doll's mouth and gently squeeze to feed her. When finished eating, Missy Kissy® will burp.

 Align Missy Kissy's back so that it is touching the potty in order for the potty function to start.

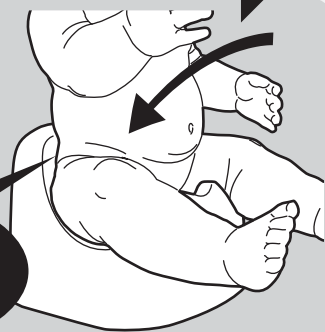

## Potty Time:

**"Mommy I need to go potty!"**

3

 
♪ Once you have patted her back, Missy Kissy will ask to go potty. Remove doll's clothing and seat her correctly on the potty (see photo). Once positioned, doll will begin to tinkle and a cute sing-a-long song will play. ♪

## Kissy time:

**"I love you mommy... give me a kiss!"**

1

When doll is switched on she will ask for a kiss. Kiss the doll's face and Missy Kissy® will ask mommy for different activities. So much fun!

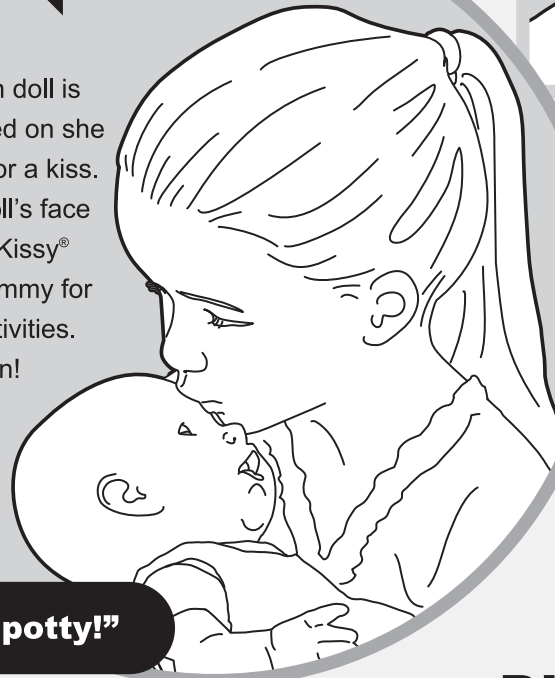

## Sleepy Time:

6

**"(Yawn). I'm sleepy. Don't forget to give me a kiss!" "Good night mommy."**



Babies need to rest. When Missy Kissy® asks for bedtime, gently place pacifier / dummy in mouth to hear a sweet lullaby. Lay her down to rest and she looks like she is really sleeping. Sweet dreams!

5

## Play Time:

**"Thanks mommy! Press my hand and let's play!"**



♪ After changing Missy Kissy's® diaper, press her left hand and a cute song will play! ♪

## Diaper Time:

**Mommy I'm such a good baby... give me a kiss and change my diaper!**

4

Gently dry Missy Kissy® and dress her in her diaper and outfit.

