

KAMBROOK®



INSTRUCTION BOOKLET

Suits all KKE690 models

Contents

Kambrook Recommends Safety First	p4
Your Kambrook 1.7L BPA Free Stainless Steel Kettle	p7
Using Your Kambrook Kettle	p8
Care, Cleaning and Storage	p10

Important

Please retain your instruction
book for future use.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 0800 273 845 (New Zealand). Alternatively, visit us on our website at www.kambrook.com.au or www.kambrook.co.nz

Kambrook Recommends Safety First

IMPORTANT: Please retain your instruction book for future use.

At Kambrook, we believe that safe performance is the first priority in any consumer product, so that you, our valued customer, can confidently use and trust our products. We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

Important Safeguards For Your Kambrook 1.7L BPA Free Stainless Steel Kettle

- Carefully read all instructions before operating the Kambrook kettle for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the kettle for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this kettle.
- This kettle has been designed specifically for the purpose of boiling drinking quality water only. Under no circumstances should this product be used to boil any other liquids or foodstuffs.
- Do not place the kettle near the edge of a bench or table during operation. Ensure that the surface is level, clean and free of water and other substances.
- Do not operate the kettle on a sink drain board.
- Always ensure the kettle is properly assembled before use. Follow the instructions provided in this book.
- The kettle must be used only with the power base supplied.
- The kettle is not intended to be operated by means of an external timer or separate remote control system.
- Do not touch hot surfaces. Use the handle for lifting and carrying the kettle.
- Do not place anything on top of the lid.
- Do not release the lid while the water is boiling. Ensure the lid is closed whilst boiling.
- Always ensure the On/Off switch is set to Off, then turn the power off at the power outlet and remove the power plug from the power outlet before attempting to move the kettle, when the kettle is not in use and before cleaning and storing.
- Use caution when pouring water from the kettle, as boiling water and steam will scald. Do not pour the water too quickly.
- To protect against electric shock, do not immerse the kettle base, power base, power cord or power plug in water or allow moisture to come in contact with these parts.
- Do not remove the kettle from the power base during operation. Ensure the kettle has switched off after the water has boiled or reached the selected temperature, before removing the kettle from the power base. If the kettle is removed from the power base during the boiling cycle, the kettle will automatically switch off.

- Always fill the kettle with water between the minimum (MIN) and maximum (MAX) marks on the water window on the kettle. Too little water will result in the kettle switching 'OFF'. Filling above the maximum mark (MAX) may result in boiling water splashing from the kettle.
- The lid should always be locked firmly in place in the closed position before and during use. Do not open the lid during operation as this may result in boiling water splashing from the kettle. Pour all the hot water from the kettle before opening the lid to refill.
- Do not place the kettle in direct sunlight. Colour fading and discolouration may occur when the kettle is consistently exposed to sunlight.
- When using the kettle, avoid spillage of water on the kettle base and connector as this may cause damage to the kettle.
- Care should be taken when handling the kettle during use, ensuring that the kettle body and parts are not touched as these may still be hot due to residual heat after boiling. Always ensure to use the kettle handle when removing the kettle or pouring water after kettle has boiled.
- Do not use chemicals, steel wool, or abrasive cleaners to clean the outside of the kettle.
- The filter could become damaged with time, please check regularly and replace if found damaged.
- Ensure the kettle has cooled down before attempting to clean the filter and kettle.
- To prevent damage to the kettle do not use alkaline cleaning agents when cleaning, use a soft cloth and mild detergent.
- Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed. Do not move while the kettle is switched on.
- Keep the kettle clean. Follow the cleaning instructions provided in this book.

Important Safeguards For All Electrical Appliances

- Fully unwind the power cord before use.
- Connect only to a 230V or 240V power outlet.
- The appliance must be used on a properly grounded outlet. If it is not sure, please consult a qualified electrician.
- Do not, under any circumstances, modify the power plug or use a power plug adapter.
- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. **Misuse may cause injury.**
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid or allow moisture to come in contact with the parts, unless it is recommended in the cleaning instructions.
- Any maintenance other than cleaning should be performed at an authorised Kambrook Service Centre.
- It is recommended to regularly inspect the appliance. To avoid a hazard, do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorized Kambrook Service Centre for examination and/or repair.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See a qualified electrician for professional advice.
- During electrical storms, the appliance should be disconnected from the power source at the wall socket to prevent any electrical surges that may arise during the storm and which may inadvertently cause damage to the appliance and its electronic componentry.

Your Kambrook 1.7L BPA Free Stainless Steel Kettle

1. Wide hinged lid pops open for easy filling and cleaning. Lid locks into place when pressed closed for additional safety
2. One touch pop-up lid button
3. On/Off boil switch with automatic shut-off
4. Illuminated 'ON' light indicates power on when boiling
5. BPA Free* plastic water level indicator – 1.7 litre capacity water window for visible reference to water level
6. Cool touch stylish open handle
7. Cord-free kettle easily detaches from power base for ease of use, filling and cleaning

Not Shown

- Safety Boil Dry Protection ensures that the kettle automatically switches off if the kettle boils empty



KKE690 model shown

**BPA
FREE
MATERIALS***

*Laboratory tests show water not containing BPA that is boiled in this kettle will be BPA free to a resolution of 1 part per million.

Using Your Kambrook 1.7L BPA Free Stainless Steel

Before First Use

Remove any packaging material and promotional labels before using your kettle for the first time.

It is recommended before the first use to fill the kettle to the maximum level with cold tap water, bring to the boil and then discard the water. Your kettle will only operate when positioned on the power base with the ON/OFF switch in the 'ON' position. The kettle will automatically switch off once the water has boiled.

Operation Of Your Kettle

1. To fill the kettle with water, remove it from the power base and open the lid by pressing the button on the handle of the kettle and the lid will lift upwards. Fill with the desired amount of water. Do not operate the kettle without water. Always fill the kettle between the minimum and the maximum marks on the water window. Too little water will result in the kettle switching off.
2. Ensure that the lid is closed before placing the kettle on the power base.
3. Place the kettle firmly onto the power base and plug the power cord into a 230V or 240V power outlet and switch on.
4. Press the ON/OFF switch on the kettle to the 'ON' position. The power 'ON' light will illuminate.

NOTE: Never operate the kettle dry - too little water will result in the kettle switching 'OFF'.

Do not overfill the kettle - filling above the maximum mark on the water window may result in boiling water splashing from the kettle.

NOTE: This kettle must only be used with the power base supplied. Use caution when pouring water from your kettle, as boiling water will scald. Do not pour the water too quickly.

NOTE: Do not remove the kettle from the power base during operation. Ensure the kettle has switched to the 'OFF' position after the water has boiled before removing the kettle from the power base.

5. The kettle will automatically switch 'OFF' once the water has boiled. Lift the kettle from the power base and pour the water. Take care to hold the kettle level, especially when filled to the maximum level. To re-boil it may be necessary to wait for a few seconds to allow the control to reset.
6. The kettle should be stored on its power base when not in use. The power outlet should be switched off and the power cord unplugged from the power outlet when not in use.



CAUTION: Do not operate the kettle on an inclined surface. Do not move the kettle while it is switch on.



CAUTION: This kettle is designed for the boiling of drinking quality water only; never use it to heat or boil any other liquids or foodstuffs. The lid should always be firmly in place and locked closed before use.



CAUTION: Do not release the lid while the water is boiling. Ensure the lid is closed whilst boiling.



CAUTION: Do not open the lid while water is boiling.

Safety Boil Dry Protection

The kettle is fitted with a safety device, which protects against overheating should the kettle be operated with insufficient water. If this occurs the kettle will stop heating and automatically switch 'OFF'.

Should this occur, switch off at the power outlet and unplug. Allow kettle to cool before refilling. Remove the kettle from the power base and add water. Return the kettle to the power base. The safety device will automatically reset.

Care, Cleaning and Storage

Always switch off at the power outlet and then unplug the kettle from the power outlet before cleaning.

Cleaning the Kettle Exterior

The outside surface of the kettle may be wiped over with a damp cloth and polished with a soft, clean dry cloth.

Cleaning the Removable Filter

The filter fitted inside the kettle over the spout is removable for cleaning.

To remove for cleaning, slide the filter upwards out of the bracket. Clean with soapy water, rinse and dry or lightly clean using a soft bristle brush or soft damp cloth for built-on deposits. Once clean and dry, slide the filter back into the filter bracket before using.

TIP: The filter could become damaged with time, please check regularly and replace if found damaged.

NOTE: Ensure the kettle and water has cooled down before attempting to clean the filter.

NOTE: Do not use chemical, steel wool, or abrasive cleaners to clean the inside or outside of the kettle.

NOTE: Exposure to cooking oils and cleaning chemicals may cause colour fading and discolouration to the kettle. If the kettle is exposed to oils or chemicals, turn off and unplug the kettle and use a damp cloth to clean the surface of the kettle. Dry thoroughly before use.



CAUTION: To prevent damage to the appliance do not use alkaline cleaning agents when cleaning; use a soft cloth and mild detergents.



WARNING: Never immerse the kettle base, switch area, power base or power supply cord in water or allow moisture to come in contact with these parts.

Mineral Deposits and Discolouration

Due to the large surface area of the immersed element (interior base), discolouration due to mineral deposits from tap water may appear more obvious by leaving a brown stain on the base. THIS IS NOT RUST.

To remove the discolouration, follow the instructions "Removing Mineral Deposits".

Removing Mineral Deposits

Mineral deposits in tap water may cause the kettle interior and water window to discolour over time. This may be removed by using a proprietary kettle descaler which is available from most leading supermarkets, department stores and hardware stores.

Alternatively:

1. Fill the kettle until $\frac{2}{3}$ full with 1 part vinegar (or a few slices of lemon) and 2 parts water, bring to the boil and allow to stand overnight.
2. Empty the solution from the kettle. Fill the kettle with clean water, bring to boil and discard the water. Repeat and the kettle will be ready for use.

Storage

Ensure the kettle is switched off, cleaned and dried before storing. Ensure that the lid is closed and locked firmly into place. Wrap the power cord around the cord storage under the power base. Stand the kettle upright on the power base. Do not store anything on top.

Kambook - Australia

Ground Floor, Suite 2, 170-180 Bourke Rd
Alexandria NSW 2015, Australia

Locked Bag 2000

Botany NSW 1455

Customer Service Line 1300 139 798

Customer Service Fax 1800 621 337

www.kambook.com.au

Kambook - New Zealand

Private Bag 94411

Botany, Manukau

Auckland 2163, New Zealand

Customer Service Line/

Spare Parts 0800 273 845

Customer Service Fax 0800 288 513

www.kambook.co.nz

KAMBROOK

Kambook and the Kambook logo are trademarks of Breville Pty. Ltd.
A.B.N 98 000 092 928.

All other brand names may be trademarks of their respective owners.

Made in China to our exact specifications.

Due to continual improvement in design or otherwise, the product you purchase may differ slightly from the illustration in this book. Issue C20