

KAMBROOK®



INSTRUCTION BOOKLET

Suits all KTA290 models

Important

Please retain your instruction book for future use.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 0800 2738 45 (New Zealand). Alternatively, visit us on our website at www.kambrook.com.au or www.kambrook.co.nz

Contents

Kambrook Recommends Safety First	p4
Your Kambrook 2 Slice Toaster	p7
Using Your Kambrook Toaster	p8
Care, Cleaning and Storage	p10

Kambrook Recommends Safety First

IMPORTANT: Please retain your instruction book for future use.

At Kambrook, we believe that safe performance is the first priority in any consumer product, so that you, our valued customer can confidently use and trust our products. We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

Important Safeguards For Your Kambrook 2 Slice Toaster

- Carefully read all instructions before operating the Kambrook 2 slice Toaster for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the toaster for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this toaster.
- Do not place the toaster near the edge of a bench or table during operation. Ensure the surface is level, clean and free of water and other substances.
- Do not operate the toaster on a sink drain board.
- Do not place the toaster on or near a hot gas or electric burner, or where it could touch a heated oven.
- Keep the toaster clear of walls and other heat sensitive materials such as cloths and curtains.
- Always ensure the toaster is properly assembled before use. Follow the instructions provided in this book.
- The toaster is not intended to be operated by means of an external timer or separate remote control system.
- Bread may burn, therefore this toaster must not be used near or below curtains or other combustible material and it must be supervised at all times when in use.
- Ensure that bread to be toasted is the correct size for the toaster and does not protrude above the bread slice opening. Ensure the bread is not too thick or long that it will jam or wedge in the bread carriage.
- Never cover the toaster when it is plugged into the power outlet or while hot.
- Do not place cold toast directly on top of toasting slots to warm toast as this may prevent correct air circulation and damage the toaster.
- Do not move the toaster whilst in operation or when hot.
- The temperature of accessible surfaces may be high when the toaster is in operation and also for some time after use.
- Never operate toaster on its side. Never add any food substance to the bread, muffins or crumpets as this can lead to electrocution or fire. This toaster is for toasting bread, crumpets and muffins only. Placing other items in the toaster can lead to electrocution or a fire.

- Do not leave unattended when in use as toast may jam or wedge in the bread carriage. Never attempt to extract toast or any other item that has jammed or wedged in the toaster with a knife or any other object as contact with live elements may not only damage the element but cause electrocution.
- Do not touch hot surfaces. Use side areas and oven mitt for lifting and carrying the toaster.
- Do not leave the toaster unattended when toasting.
- Always turn the power off at the power outlet and then remove the plug from the power outlet before attempting to move the toaster, when the toaster is not in use and before cleaning or storing.
- Do not operate the toaster without the removable crumb tray in place.
- The crumb tray should be regularly cleaned. Do not allow breadcrumbs to accumulate in the bottom of the toaster. Failure to clean the crumb tray regularly may result in a fire hazard. To clean any additional crumbs, turn the toaster upside down over a sink and shake crumbs free.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts creating an electric shock hazard.
- Do not place the toaster in direct sunlight. Colour fading and discolouration may occur when the toaster is consistently exposed to UV light.
- Keep the toaster clean. Follow the cleaning instructions provided in this book.

Important Safeguards For All Electrical Appliances

- Fully unwind the power cord before use.
 - Connect only to a 230V or 240V power outlet.
 - The appliance must be used on a properly grounded outlet. If it is not sure, please consult a qualified electrician.
 - Do not, under any circumstances, modify the power plug or use a power plug adapter.
 - Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
 - Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.
 - Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
 - This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
- Misuse may cause injury.**
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with the appliance.
 - Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
 - Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
 - To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid or allow moisture to come in contact with the parts, unless it is recommended in the cleaning instructions.
 - Any maintenance other than cleaning should be performed at an authorised Kambrook Service Centre.
 - It is recommended to regularly inspect the appliance. To avoid a hazard, do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Kambrook Service Centre for examination and/or repair.

Important Safeguards For All Electrical Appliances continued

- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See a qualified electrician for professional advice.
- During electrical storms, the appliance should be disconnected from the power source at the wall socket to prevent any electrical surges that may arise during the storm and which may inadvertently cause damage to the appliance and its electronic componentry .

NOTE: This Kambrook 2 Slice Toaster is electronically controlled and will not operate until the toaster is plugged into a 230V or 240V power point, switched on and the lever latched down.



WARNING: Never operate toaster on its side. Never add any food substance to the bread, muffins or crumpets as this can lead to electrocution or fire. This toaster is for toasting bread, crumpets and muffins only. Placing other items in the toaster can lead to electrocution or fire.

Your Kambrook 2 Slice Toaster

1. Wide, self-centring toasting slots
2. 6 browning settings from 1 lightest to 6 darkest
3. Extra Lift for easy removal of toast
4. Cancel, reheat and defrost settings
5. Stylish matte finish with scandi accents

Not Shown

- Removable crumb tray (rear side of base)
- Cord wrap (under base)
- Sturdy non-slip feet



Using Your Kambrook Toaster

Before First Use

Before first use, remove any packaging material and promotional labels before using your toaster for the first time.

1. Place the toaster on a dry, level heat resistant surface.
2. Fully unwind the power cord and insert power cord into a 230V or 240V power outlet and switch on at the power outlet.
3. Place 1 slice of bread into each toasting slot.
4. Select the desired browning setting using the variable browning control dial. Settings range from '1' being the lightest to '6' being the darkest. It is recommended for first time use, that the control is to be set to setting number '3'. If toasting less than 2 slices of bread, the browning setting may need to be reduced to avoid burning the toast.
5. Press the carriage control lever down, ensuring it is locked in position.
6. Once the browning process is complete and desired toast colour is achieved, the carriage control lever will automatically raise the toast.

NOTE: The toasting process can be stopped at any time by pressing the CANCEL button or switching off at the power outlet.

NOTE: Depending on personal preference and bread types, a different browning setting may be required. For light-textured breads such as raisin toast and white breads this may require a lighter setting, whilst heavier textured breads such as rye bread may require a darker setting.



WARNING: The toaster is electronically controlled and will not lock down in the toasting position until the toaster is plugged into a 230V or 240V power outlet, switched on and the control lever is latched down in the locked position.

Cancel Button

The CANCEL button can be selected during operation to cancel the toasting process. The CANCEL button illuminates when the carriage control lever is locked down into position and the toasting process is in operation.

Pressing the CANCEL button any time during operation will cause the carriage lever to raise the toast and cancel the toasting process.

Defrost Button

The DEFROST button is used to toast frozen bread. Place the frozen bread into the bread slots, select the desired browning setting and press the carriage control lever down and lock into position, then press the DEFROST button. The DEFROST button illuminates during the toasting process.

Reheat Button

The REHEAT button can be selected at the beginning of the toasting process to reheat the toast, if required. Place the toast into the bread slots and press the carriage control lever down, ensuring it is locked into position. Press the REHEAT button; the REHEAT button illuminates during toasting process.

NOTE: The DEFROST button and REHEAT button cannot be selected at the same time.

Extra Lift

The toaster carriage control lever features EXTRA LIFT. EXTRA LIFT is ideal for removing smaller items such as crumpets or English muffins. Once the browning process is complete, the lever will automatically raise the toast. For easier removal of toasted items, lift carriage control lever upwards approximately 10mm from the lever starting position.



WARNING: Do not leave toaster unattended when in use as toast may jam or wedge in the bread carriage. Never attempt to extract toast or any other item that has jammed or wedged in the toaster with a knife or any other object, as contact with live elements may not only damage the elements, but cause electrocution.

Care, Cleaning and Storage

1. Before cleaning the toaster, switch the power OFF at the power outlet and remove the power plug from the power outlet.
2. The crumb tray will need to be cleaned regularly to avoid breadcrumbs, dried fruits, crusts etc. accumulating in the bottom of the toaster.
3. To remove the crumbs from the toaster, slide the crumb tray out from under the toaster carriage by pulling outwards away from the toaster.
4. Discard the crumbs and wipe tray over with a soft, damp cloth and dry thoroughly.
5. To remove any additional crumbs that have accumulated in the toasting carriages, turn the toaster upside down over a sink or bin and shake crumbs free.
6. Ensure crumb tray is dried thoroughly. Place crumb tray back into position by sliding the tray back and push in until completely locked into place.
7. The stainless exterior of the toaster can be wiped over with a soft, damp cloth and dried thoroughly.
8. To store the toaster, always switch off at the power outlet, remove the power plug from the outlet and allow to cool completely before storing. Store the toaster in the upright position on a flat surface on your bench top or in a cupboard. Do not store anything on top of the toaster.



WARNING: Do not immerse the toaster or power cord in water or any other liquid.



WARNING: Do not operate the toaster without the removable crumb tray in place. The crumb tray should be regularly cleaned. Do not allow crumbs to build up in the crumb tray.

NOTE: Exposure to cooking oils and cleaning chemicals may cause colour fading and discolouration to the toaster. If the toaster is exposed to oils or chemicals, turn off and unplug the appliance and use a damp cloth to clean the surface of the toaster. Dry thoroughly before use.

Kambrook - Australia

Ground Floor, Suite 2, 170-180 Bourke Rd
Alexandria NSW 2015, Australia

Locked Bag 2000

Botany NSW 1455

Customer Service Line 1300 139 798

Customer Service Fax 1800 621 337

www.kambrook.com.au

Kambrook - New Zealand

Private Bag 94411

Botany, Manukau

Auckland 2163, New Zealand

Customer Service Line/

Spare Parts 0800 273 845

Customer Service Fax 0800 288 513

www.kambrook.co.nz

KAMBROOK

Kambrook and the Kambrook logo are trademarks of Breville Pty. Ltd.
A.B.N 98 000 092 928.

All other brand names may be trademarks of their respective owners.

Made in China to our exact specifications.

Due to continual improvement in design or otherwise, the product you purchase may differ slightly from the illustration in this book. Issue D19