



Honey-Can-Do 50L Sensor Trash Can

Instructions

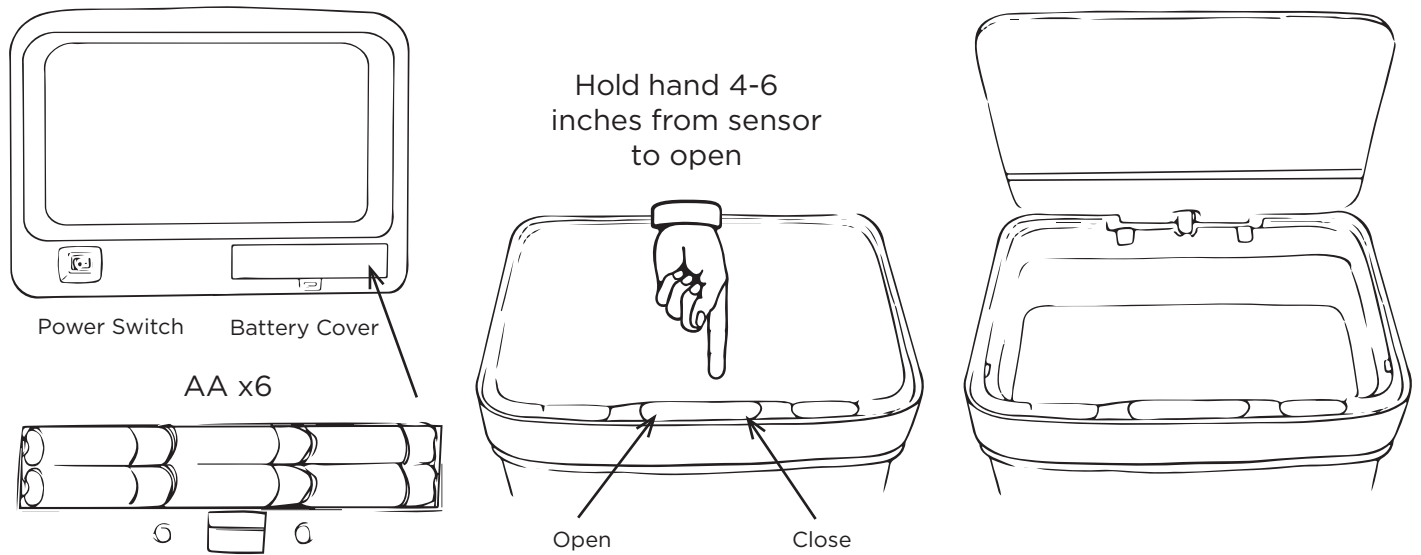

- 1) Open the battery cover, and insert 6 AA batteries (not included).
- 2) Turn on the power switch close to the battery cover, and the indicator will turn red for 3 seconds. When it starts to flash every 3 seconds, it means the motion sensor is working.
- 3) When you need to open the trash can, hover your hand 4-6 inches from the sensor. It will close after 5 seconds of inactivity.
- 4) If you need to leave your trash can open for a longer period of time, simply press the 'open' button, and 'close' when you're done.

Trash Bag Install

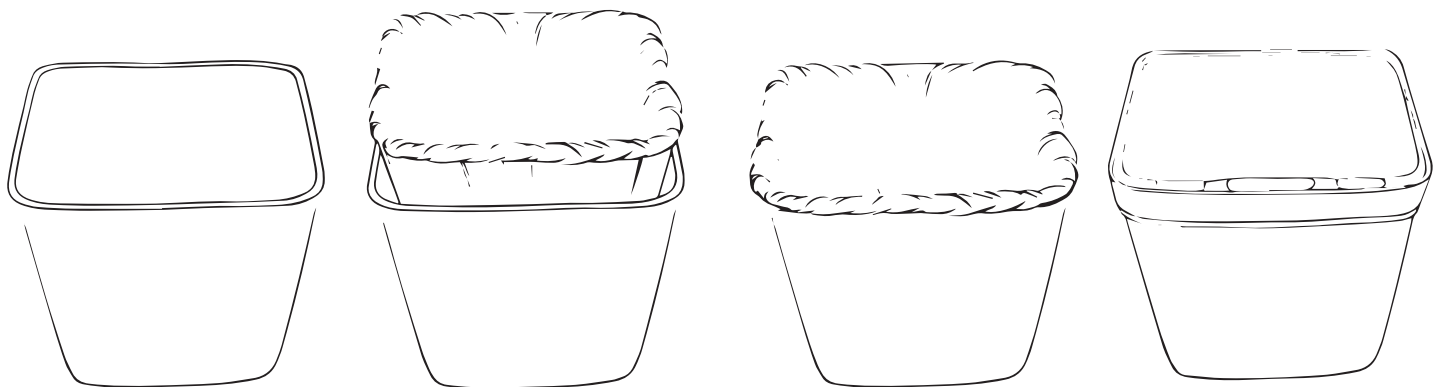

- 1) Open lid.
- 2) Pull out inner ring.
- 3) Place empty bag in empty can, twisting around the inner ring.
- 4) Place inner ring back into the can over the bag, and pull the bag taut from inside the can to keep bag invisible from the outside.

Limited Lifetime Warranty

Honey-Can-Do International, LLC (HCD) warrants its products will be free from defects in materials and workmanship when used for normal personal or household use, except as provided below. HCD, at its option, may offer a comparable product or offer a replacement part or request that the item be returned to the place of purchase.

This warranty DOES NOT apply to damage caused by negligence, misuse, excessive use, improper cleaning, improper assembly, or any circumstance not directly attributable to manufacturing defects. Proof of purchase is required in the form of a receipt (copy or original) to validate warranty. HCD provides this limited lifetime warranty in lieu of all other warranties either express or implied.

In no event shall HCD, its affiliates, or subsidiaries be responsible for consequential or incidental damages arising out of a claim of defective product. Some states or provinces do not allow some exclusions or limitations, so the above statement may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary by state or province.

Warning

Keep bags and plastic sheeting away from babies and children. Do not use in cribs, beds, carriages or playpens. The plastic may cling to the nose and mouth and prevent breathing.

Do's & Don'ts

- Don't flush with water due to the trash can's electrical components. Use wet wipes or a damp cloth on the surface.
 - Don't close with force while the trash can is in the process of opening.
 - Don't allow direct sunlight on the trash can's induction receiver window.
 - Don't dismantle, repair, or alter the trash can.
 - Don't put anything heavy on the trash can's cover.
-
- Do replace the batteries as soon as they run out.

Product Info

Stainless Steel
50L Sensor Trash Can
Item #: TRS-08414

Black Stainless Steel
50L Sensor Trash Can
Item #: TRS-08415

