

Instructions to install firmware update to EDGE X

1. Download the firmware update to your desktop from provided link
2. Copy the firmware into a MicroSD card by dragging and dropping the downloaded update file from your desktop (Do not try to open “firmware.bin” file on your desktop)
3. Insert card with update file into your EDGE X camera that has a **fully charged** battery.
4. Turn camera ON
5. Then message “firmware update?” should appear



6. Choose “yes” (actually it is the circle) by pressing the UP button
7. Press OK button to confirm
8. You will see the update progress in “%”



9. When progress is complete, you will see either **“firmware update success”** or **“stage 7/8 100%”**



OR



10. If **“firmware update success”** then press OK button. Camera will turn OFF.
11. If **“stage 7/8 100%”** then remove battery to turn camera OFF and then reinsert battery.
12. Remove MicroSD card
13. Turn on the camera
14. **Please wait for the camera to automatically power OFF and then power back ON (important step)!**
15. Go into camera’s SYSTEM menu and perform a “DEFAULT SETTING”.
16. Firmware update installation is completed
17. Please be sure to delete firmware update file from Micro SD card.

© 2015 Intova, LLC • All Rights Reserved
1100 Alakea St., 18th Floor Honolulu, Hawaii 96813 USA
www.intova.net

For questions or customer service please call:
(808) 837-0074 or (877) 837-0074 toll free USA only