

To format your microSD card when it is inserted in the DUB camera:

****Please be sure to save/transfer any files you need to your computer before formatting****

1. Press MENU button
2. Press SHUTTER button to toggle to SETTINGS menu (gear icon)
3. Press UP button 2 times to highlight "Format..."
4. Press OK button to enter format function.
5. With "Yes" highlighted in blue, press OK button to perform format.
6. After format is complete, press MENU button to exit menu.