

### Instructions to install firmware update into ConneX and NOVA HD cameras

1. Download firmware to desktop.
2. Transfer firmware update file to a blank Micro SD card.
3. Place card into camera's Micro SD card slot: **camera must be off and have a fully charged battery.**
4. Turn camera on.
5. On LCD screen message "FIRMWARE UPDATE?" will appear.
6. Highlight "YES" in red by pressing UP button and then press OK button to start firmware update.
7. Update file is installing while LCD shows a rotating circle of dots.
8. When firmware update installation is successful, a message "PRESS OK BUTTON AND REBOOT SYSTEM" will appear.
9. Press OK button
10. Camera will turn off.
11. Remove Micro SD card from camera and delete firmware update file.
12. Install another card or the same card with firmware update removed and turn on camera to use.