 
 


To download full user manual go to <http://www.intova.net/support/intova-manuals/>

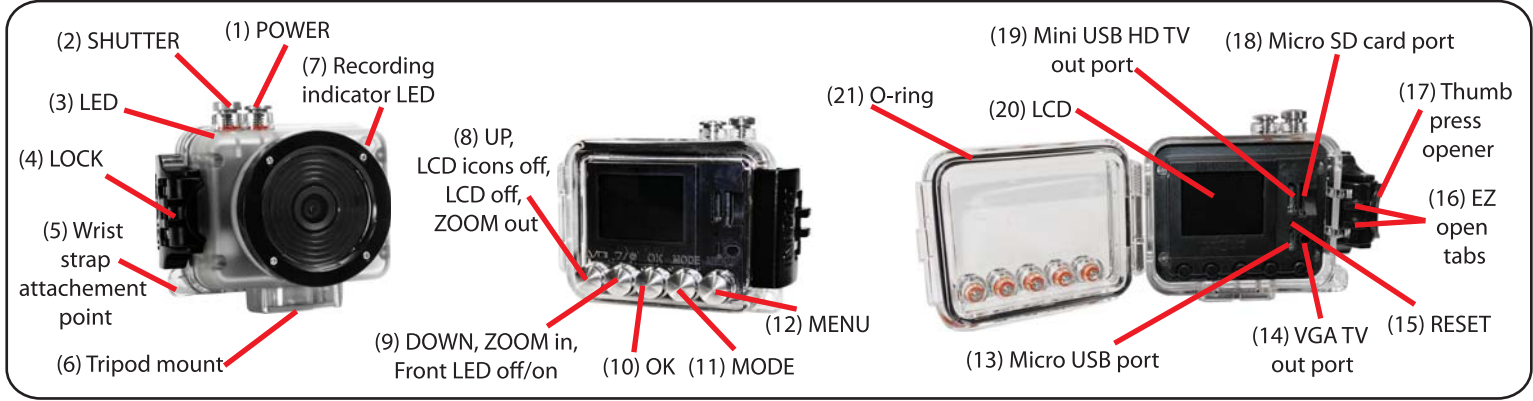


Opening the camera:

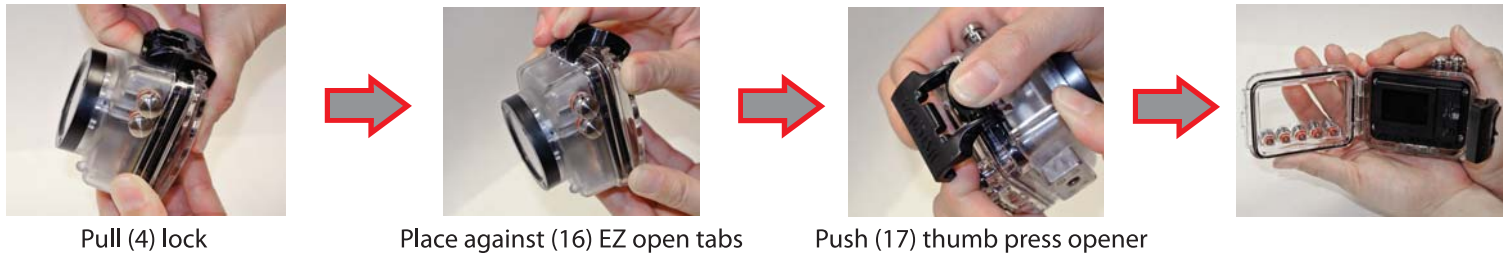

Charging the Li-ion battery:

1. Insert USB cable into (13) Micro USB port.
2. Insert other end of cable into a computer USB port.
3. LCD should show MSDC, CHARGE and OPEN.
4. Scroll down to select CHARGE and press (10) OK.
5. When charge is complete, red LED (3) will turn off.

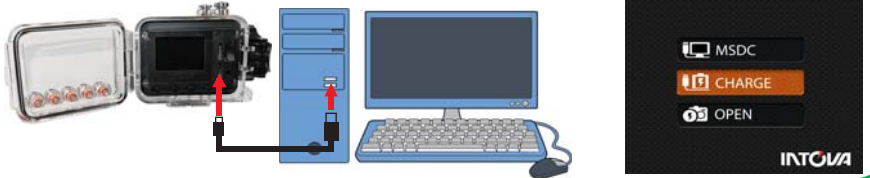

Preparations:

1. Prior to use, with camera off, insert Micro SD card up to 32 GB (class 10) into (18) card port with gold contacts towards LCD.
2. Turn on camera and select appropriate TV SYSTEM (NTSC or PAL) in SETTING menu.
3. Format SD card as necessary by pressing MENU, UP button, OK, UP button 6 times, OK, UP button, and OK. **WARNING:** Format will erase all data from card. Save any data before formatting.

Video:

1. Press (2) SHUTTER button to start. Move camera smoothly.
2. Press (10) OK button to take photo while recording video.
3. Press (2) SHUTTER button to stop.

Photos:

1. Press (11) MODE button to switch to photo mode.
2. Press (2) SHUTTER button and release while holding camera as steady as possible.

Zoom:

1. In either photo or video mode (except 1080p), press and hold (9) ZOOM in or (8) ZOOM out button.
2. 4x is the maximum zoom.

Video view mode:

1. In video mode, press (10) OK button.
2. Press (9) DOWN or (8) UP buttons to select file.
3. Press (10) OK 2 times to start video and OK again to stop.
4. Press (11) MODE 2 times to go back to main screen.

Photo view mode:

1. In photo mode, press (10) OK button.
2. Press (9) DOWN or (8) UP buttons to select file.
3. Press (10) OK to view photo.
4. Press (11) MODE button 2 times to go back to main screen.

Deleting files:

1. In either video or photo view mode, select file to delete and press (12) MENU button.
2. Press (8) UP button to choose "YES" or "ALL".
3. Press (10) OK button to confirm and press (11) MODE to exit.

WARNING: Do not attempt to take apart the camera-there are high voltage parts and dangerous electric shock can occur.

Self Capture mode:

1. In photo mode, press (12) MENU button.
2. Press (10) OK button.
3. Press (9) DOWN button 2 times and press (10) OK button.
5. Select OFF, 5, 10, 30 or 60 seconds and press (10) OK.
6. Press (12) MENU button 2 times to go back to main screen.
7. LCD screen should show self timer icon. Press (2) SHUTTER to activate.

2.4G Remote Control Operation:

1. To start/stop video, press button with video icon.
2. To take a photo, press button with camera icon.
3. To turn camera off, press the OFF (center) button for 3 seconds.
4. To change batteries, unscrew back cover and replace with CR2016, 3V batteries.
5. **IMPORTANT NOTE:** Wireless transmission will not work underwater. Wireless remote is for above water use only.

Important:

Before each use, clean and maintain all O-rings for parts that have been opened by removing any dirt, sand and other debris and lightly lubricating with silicone grease as needed to prevent drying and cracking. Make sure to remove all excess grease before use. Excess grease can cause leakage and failure of seal.

FCC STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.