

Here are the steps to format a microSD card inserted into our Intova HD2 camera

1. Press MENU/OK button (middle button on side of camera).
2. Press UP button (top button on side of camera) to highlight SETTINGS menu icon.
3. Press MENU/OK button to enter settings menu.
4. Press DOWN button (bottom button on side of camera) 4 times to highlight FORMAT.
5. Press MENU/OK button to enter function.
6. Press UP button to highlight OK.
7. Press MENU/OK button
8. Warning message appears. With OK highlighted, press MENU/OK button to perform format.
9. After format is complete, "Format successful!" appears.
10. Press MENU/OK button to return to video recording mode.