


## Operation process of SD Card maintenance

It is recommended to back up the data of the SESSION folder to the computer every 2 to 3 months. Format the SD card regularly gives the SD card better read/write stability.

SD card formatting steps:

1. Download “SD Memory Card Formatter” from the link below.


<https://www.sdcard.org/cht/downloads/formatter/index.html>

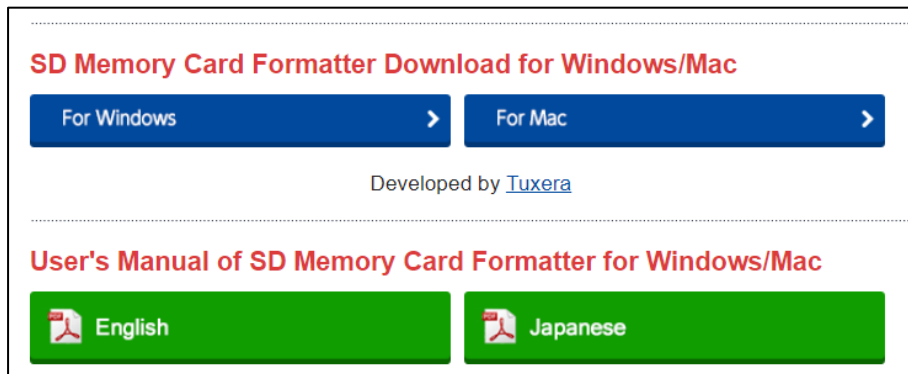


2. Click “Accept”




3. Unzip the downloaded file “SDCardFormatterv5\_WinEN.zip”

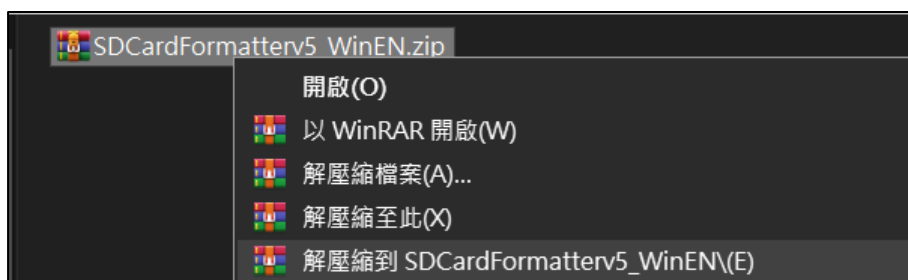


4. Install “SD Card Formatter 5.0.1 Setup.exe”

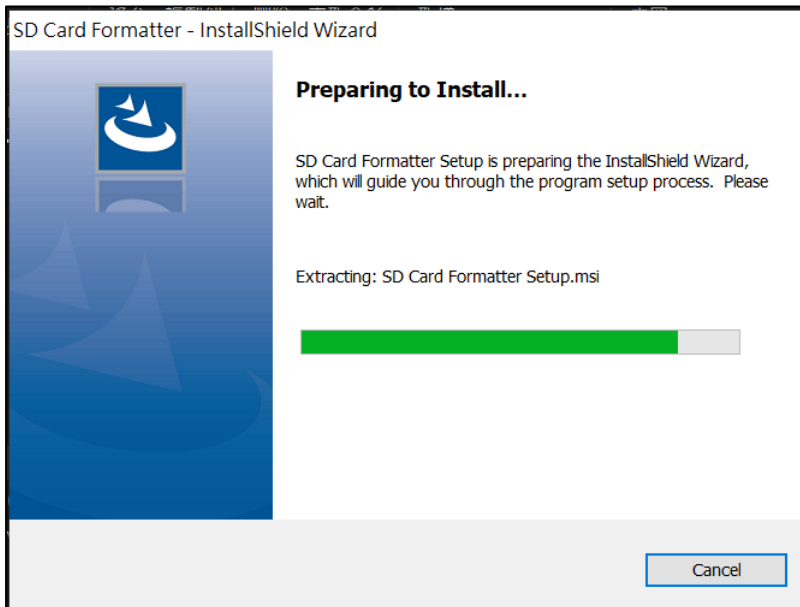


5. Click "Next"

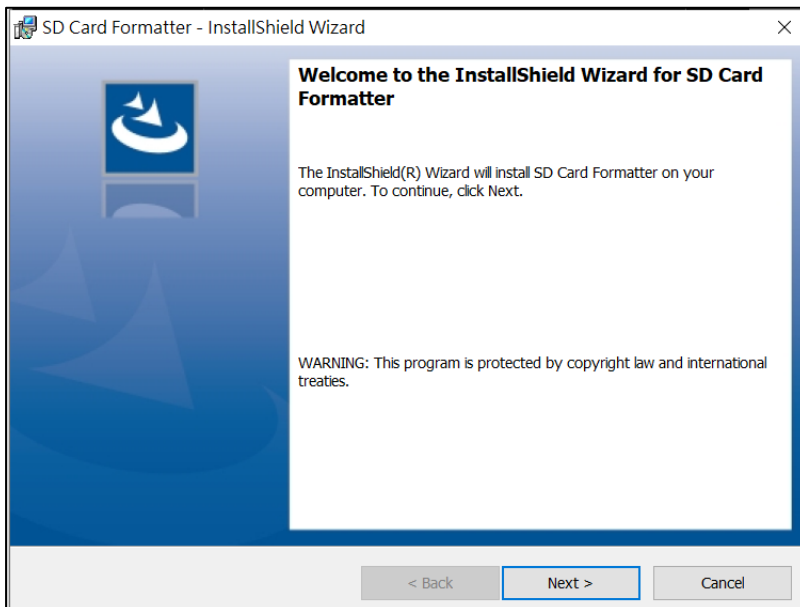


6. Select "I accept..." and click "Next"

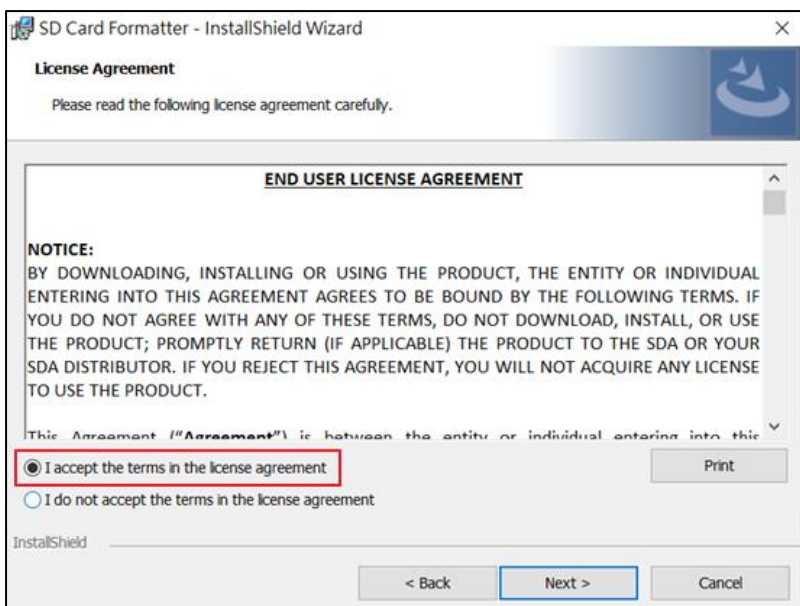


7. Click **"Next"**

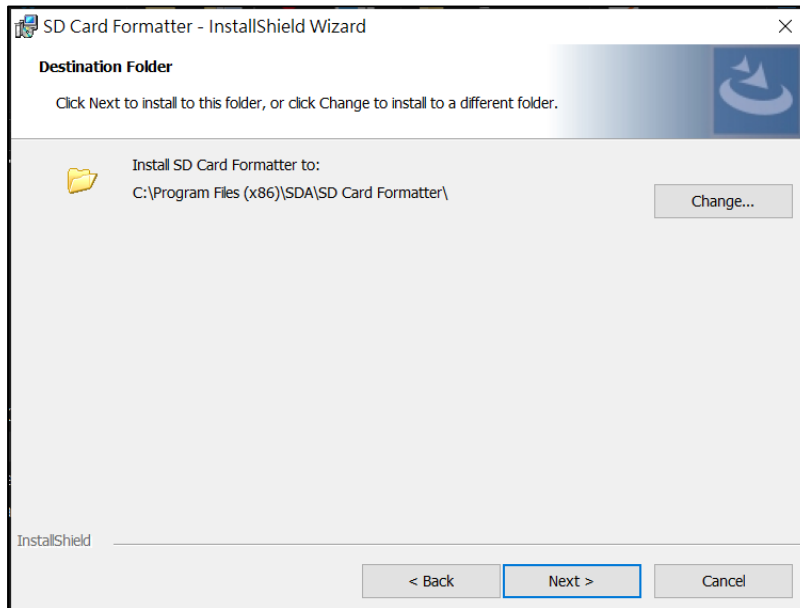

8. Click **"Install"**

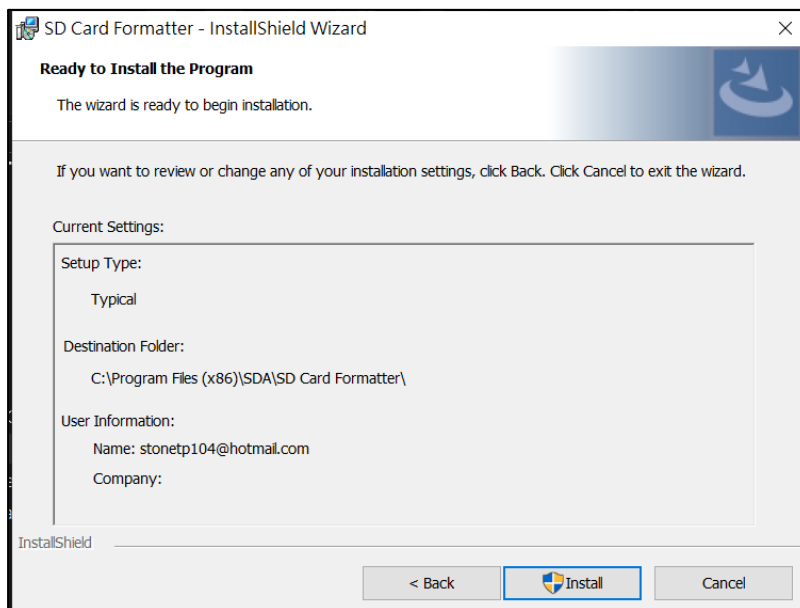


9. Click **"Finish"**

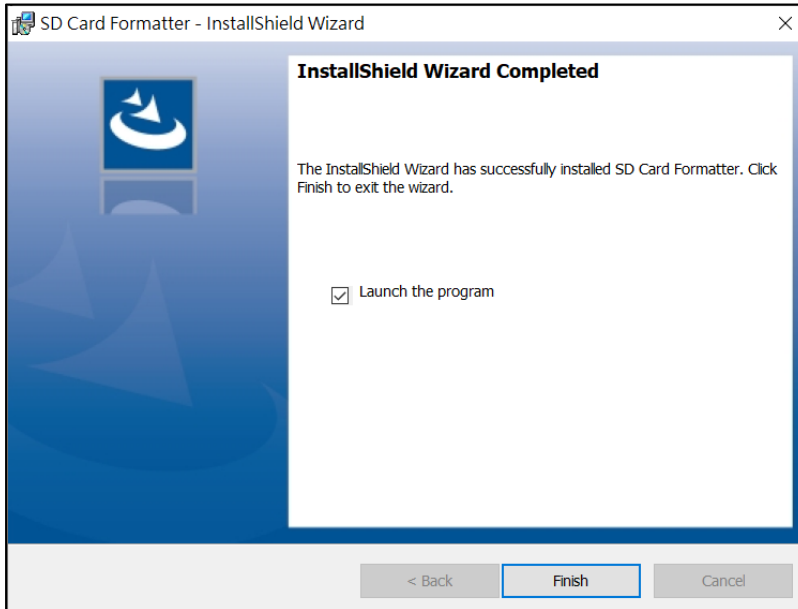


#### 10. Start SD Card Formatter


- Select SD Card
- Select **Overwrite format**
- Volume label input **QSTARZ**
- Click "**Format**" to start

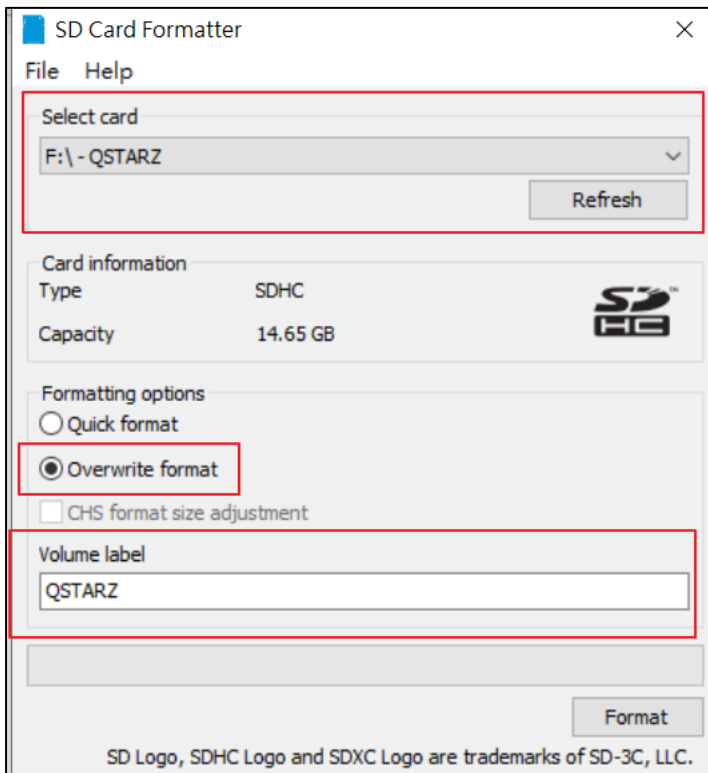

#### 11. Click "Yes"

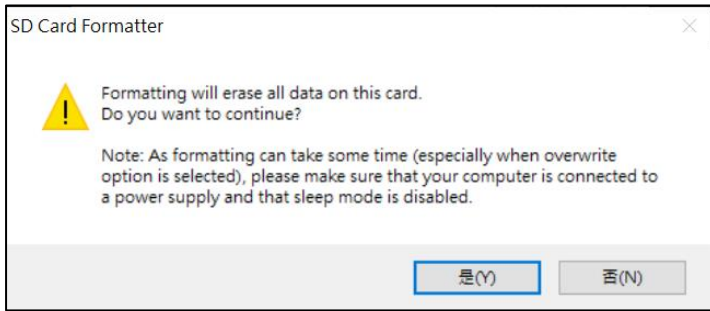


12. After formatting completed, click to finish.

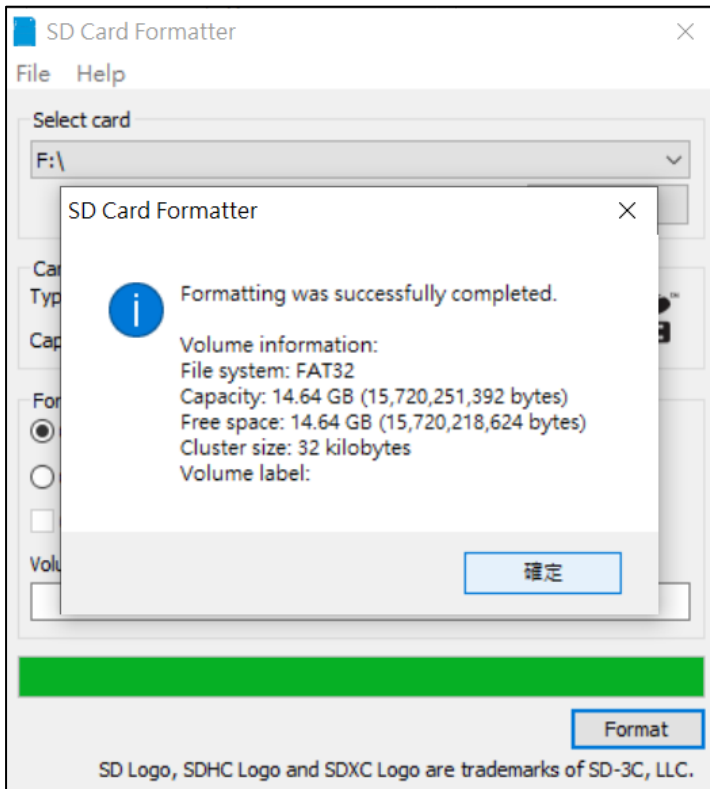

13. Restore backup data to SD card

14. Safely Remove Hardware and Eject media

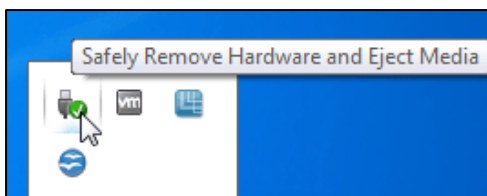

15. 14. Put the SD card back to the device and power on. The device will run the initialization automatically.