



Quality Wooden Children's Furniture and Accessories  
Made in America • Established 1987

www.littlecolorado.com

**! WARNING: ADULT ASSEMBLY REQUIRED**

**WARNING: Assembly kit contains parts with sharp edges.**

**WARNING: Assembly kit contains parts with sharp points.**

**WARNING: Package contains plastic bags that present suffocation risks for children.**

**WARNING: Assembly kit contains small parts that present choking hazards for children.**

**Assembly Instructions for Child's Picnic Table Item # 144**

|                            |                  |
|----------------------------|------------------|
| Contents: 1 -Seat Assembly | 16 -1 3/4" Bolts |
| 1 -Table Top Assembly      | 16 -Cap Nuts     |
| 4 -Legs                    | 16 -Flat Washers |
| 2 -Braces                  | 4 -1 1/4" Screws |

You will need a standard phillips and a flat screwdriver and a pair of pliers to complete assembly.

**1.** Please inspect the parts for damage during shipping and for any missing items. If you suspect that there may be damage or a shortage, call us to send replacement parts if needed. At this time, visualize how the components fit together per the drawings and make sure that you have everything identified.

**2.** Stand seat assembly on it's side. Position legs as shown on outside of seat assembly and install bolts through both parts. Start washer and then a cap nut on each bolt until hand tight.

**3.** Place Table in an upright position and lower table top into position as shown. Install the remaining 8 bolts through the legs and into the table top. Now add a washer and a cap nut to each bolt and hand tighten.

**4.** Using a screwdriver on the bolt head and pliers or an adjustable or a 7/16" wrench on the cap nut, completely tighten all bolts until the bolt head begins to be pulled slightly into the wood.

**5.** Turn table upside down and fit the two braces into the four slots. Adjust the bottoms of the braces so that all four fit as flat as possible into the bottoms of the slots. Make sure that they fit correctly. From the outside of the seat assembly, install a 1 1/4" wood screw into each brace and tighten.

**6.** Turn table upright and install two 1 1/4" wood screws through the top of the table and into the brace until tight.

If you have any problems in assembly, please call us for help.

**Care and Cleaning:**


If this Children's Picnic Table is unfinished, it must be totally protected by an outdoor/exterior rated stain or house paint BEFORE being used outside. If this product is finished in the natural or clear lacquer finish it is for inside use only. Exposure to weather or sun will quickly damage products in the unfinished or natural laquer finish.

If this Children's Picnic Table is painted, the finish is designed to provide long lasting protection when exposed to the harshness of weather. But no matter how durable, painted wooden furniture should not be left outdoors continually. It is best to store it inside when not in use. Even in mild conditions, painted wood furniture left outdoors will eventually fade and show the effects of exposure to weather. To clean your painted furniture, use a mild detergent such as a dishwashing liquid and a soft cloth. Never use any type of abrasive cleanser.


All of us at Little Colorado, LLC hope that you and your little ones enjoy this Picnic Table for many years. Please call us if you have any questions.

Manufactured in America by:


Little Colorado, LLC 4450 Lipan Street Denver, Colorado 80211  
Phone 303-964-3212 Fax 303-964-3213 info@littlecolorado.com

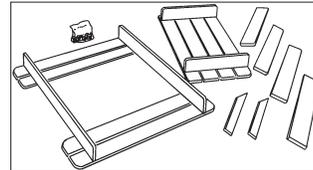


1

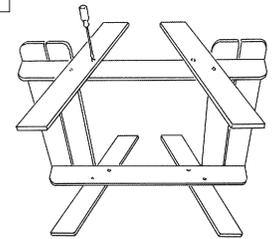


2

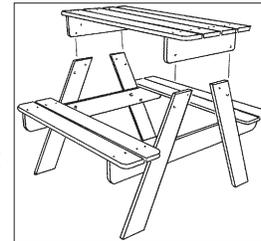


3

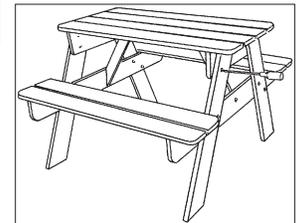

4

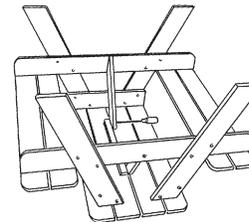

5

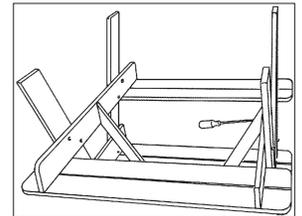

6