HV1494-REM WIRING INSTRUCTIONS





Important Safety Issues;

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of
 installation material that does not belong to the system.
- All o-rings and seals must be in place correctly to maintain warranty

Steps for Installation;

- 1. Make sure that the electrical circuit is free of voltage (master switch off)
- 2. Connect the cable from controller to driver -
 - Cut the plug off Controller from the 5-12v Input side.
 - Connect the BLACK cable from controller to BLUE cable from LED Driver
 - Connect the RED Cable from controller to Red cable from LED Driver
 - o attached the plug from the Controller into the plug from RGB Pond light
 - Make sure all connections are waterproof using an adhesive lined heat shrink and connections are not placed under water.
- 3. Attach RGB Pond light in desired location with appropriate screws for application.
- 4. Plug in LED Driver into power and switch power on.
- 5. Remove tab from LED Remote Controller an press power button to turn on Pond light.
- 6. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

