



# INSTRUCTION GUIDE

## Commercial Wall Washer

Model No. SLDWW-3W



### FEATURES

1. Day/Night Sensor
2. Adjustable LED Tube and Bracket
3. 2 Lighting Modes;  
Mode 1 - 100% brightness for 6 hours then 15% brightness until dawn  
Mode 2 - 100% brightness for 5 hours then 15% brightness for 6 hours
4. Surface Mounted Base

### INSTALLATION METHOD

1. Remove contents from packaging
2. Switch your light fitting "ON" by pressing the "ON/OFF" button for 3 seconds, to turn "OFF" repeat this 3 second press and your light will switch off

**NOTE:** Before continuing, we recommend you put your solar panel in direct sunlight (with the switch in the "OFF" position) for 2 days before installation

3. Locate a position where your light will receive maximum direct sunlight throughout the day
4. Using 4 screws, fix the surface mounted bases in your desired location
5. To adjust the direction of the lamp, simply unscrew the Torx screws on each side of the fitting and adjust the light within 90 degree in your desired direction. Once you have chosen your light angle, re-tighten the Torx screws.

### LIGHT MODES

The fitting has 2 light modes;

- **Mode 1** - 100% Brightness for 6 Hours, then 15% Brightness until dawn
- **Mode 2** - 100% Brightness for 5 Hours, then 15% Brightness for 6 Hours

To choose your desired mode, press the "ON/OFF" button once, when in **Mode 1** a **RED** indicator light will flash, press again and once in **Mode 2** a **GREEN** indicator light will flash.

### IMPORTANT NOTES

- Please ensure you place your Solar Panel in a location where it can achieve a minimum of 6HRS DIRECT SUNLIGHT
- Be aware that on overcast/cloudy days, the solar panel will still charge. However, not as efficiently as a sunny day, so the battery may not reach full capacity. Therefore, your light may turn off earlier than specified.
- It's best not to install the fitting underneath a street light, porch light etc. because this may stop the automatic day-night sensor triggering and result in your lights not turning on.

### TROUBLE SHOOTING

| Phenomenon   | Cause                        | Inspection Method  | Solution  |
|--|------------------------------|--|---|
| Light won't turn on                                | Switch hasn't been turned on | Determine what position the switch is in   | Turn the switch on  |
|  | Battery has run flat         | Period of rainy or cloudy weather or installation site doesn't provide enough direct sunlight                                  | Charge the light in direct sunlight for 1-2 days then check again   |
| The light only stays on for a short amount of time | Low Battery                  | 1. Bad installation site for the solar panel<br>2. Dust or leaves are covering the panel<br>3. Long period of overcast weather | 1. Charge the battery in direct sunlight for 1-2 days with the switch off, then check again<br>2. Clean the solar panel |
|  |                              | Battery Failure  | 1. Access the light and & replace battery<br>2. Battery has matured   |

