



## WHITE NOISE MACHINE


USER MANUAL

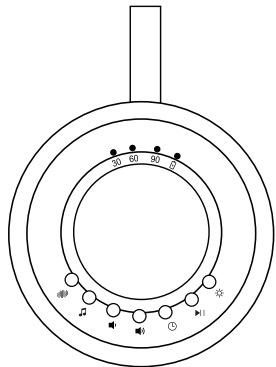


## BUTTON INDICATION

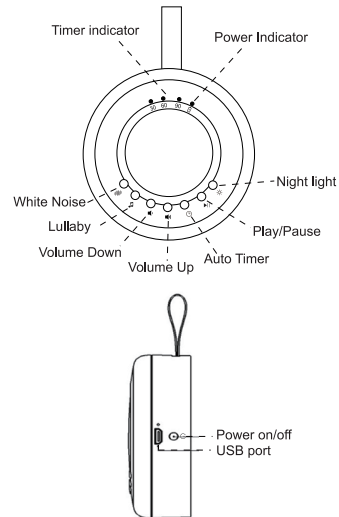


## QUICK TIPS

 Connect the power cable to the power port and a USB adapter(not included) ,the power indicator lights up red when charging, and turns green to indicate that product is fully charged.


 Press the power button to turn the unit ON. A green light will illuminate when ON. Press the power button a second time to turn the unit OFF. The green light will be OFF,when the unit is OFF.

 Press to Pause/Play music

 Press to play white noise sounds.  
Press repeatedly to cycle through the different sounds.

**NOTE: When the sound machine is turned on, it will always default to the last sound used.**

 Press to increase or decrease the volume

 Using the Auto-Timer: When you are listening to a sound you may set a timer 30,60,90 minutes as your desire.  
So the machine will automatically turn off as the time you set.  
Press the timer button once for 30 minutes, a second time for 60 minutes, a third time for 90 minutes and a fourth time to turn the timer OFF. An indicator light will show the timer setting.  
If the timer indicator is OFF, the timer is OFF.

**The timer can only be set when sound is playing.**

 Light button. First press for lighting up, second press making the light brighter, third press turning the light off.

### Features:

Night Light  
16 sound :4 white noises, 4 fan sounds, 8 natural sounds (ocean, lullaby, running water, bonfire, bird calls, thunderstorm, train, heartbeat)  
Timer : 30, 60, 90 minutes  
Memory Function

### Product Specifications:

Model: GM -02  
Speaker :28mm,4Ω3W  
Input Power :DC5V=1A  
Battery Model/Capacity :103048-1500mAh  
Use time :7h-20h  
Product size: 3.15X3.15X 1.14inch (LXWXH)

### Package Included:

1x White Noise Machine  
1x USB cable  
1x Instruction  
1x Hook

### ATTENTION:

Please don't disassemble or repair the product by yourself to avoid damaging the product;  
Keep it away from the water source to avoid product damage caused by the influent;  
Keep it away from the high temperature and fire source  
Don't use corrosive washing aid for cleaning;  
Please use a soft wet cloth towel to wipe the surface  
Unplug the power adapter from the outlet when the unit is unused for long periods