## To open the filter chamber



Turn over the Airnura

 


Remove the 4 retaining screws





Take off the cover



Position the Prefilter inside the filter



Place a felt gasket at the bottom of the filter chamber



Place the HI-C filter around the Hepa filter and Attach the HI-C filter with the elastic bands



Unfold the filter slider (Supplied with replacement filters or on request Part#6F 001)



 
Remove

the gasket

Roll it into a spiral



Insert the tube into the filter chamber inside the Prefilter



Let the spiral open to fill the opening



Open the top of the spiral to make a slight funnel



Carbon canister into the funnel and hold it straight



slide down thefilter slider





Pull the filter slider up out of the cavity using both hands and let the canister slide to the bottom of the cavity



Remove the filter slider and fold it for further use





Slide in the Hepa filter

# 

**OPERATING** FILTER REPLACEMENT DIRECTIONS

### To close the filter chamber



Replace the gasket



Position the indentation in the cover into the center of the HEPA filter



Replace the 4 screws and tighten



Turn the Airpura back on casters

## TO BEGIN USING YOUR

## **AIRPURA**

**Inspect the exterior of your Airpura** to verify there is no damage from shipping. If any damage is noted, please follow the instructions from the distributor returns policy.

Wipe the unit with a damp cloth to remove any dust from packaging

Plug the unit into a regular grounded 110 volt outlet

Turn on the unit to MAX and allow it to run for at least 30 minutes

Set the variable speed control to the level you wish

The most efficient way to use your Airpura for regular air quality maintenance is to run it at a low speed **24 hours a day 7 days a week.** 

Always maintain a humidity level of 40% or less in your home to ensure the unit is operating at optimal levels. Overly humid conditions can have an adverse effect on the performance of the carbon. When using purifier with a dehumidifier, please keep dehumidifier at least 6 feet away.



## FILTER MAINTENANCE AND REPLACEMENT

#### The Prefilter

 
Can be vacuumed from the exterior of the unit once a month or more often. Should be replaced at least after 12 months of use

#### To vacuum the Prefilter


Use the brush attachment on your vacuum cleaner Vacuum slowly around the mesh surface of the filter chamber

## **IMPORTANT SAFETY NOTE**

Please ensure air purifier is turned OFF when plugging into a power source. Failure to do so may result in motor potentially stalling and/or burning.



12 months

 



HEPA 600RVHU Filter (99.97% efficient @ 0.3 Microns) 3 to 5 years

## **Technical specifications**

## Odor, airborne chemical control

18 lbs German carbon Filter carbon 13"H x 13.25"OD x 9"ID

#### Carbon bed

570 in<sup>2</sup> x 2 in deep

#### **Particle removal** 40 sq ft true HEPA

(Measured 1 side only)
7-12 pleats per inch
Pleats warm rolled with separators

#### Air flow 560 cfm

More cfm than any other home unit available

#### Pre-filter

570 in<sup>2</sup> x 1 in deep

#### Size

23 in x 15 in

#### Weight

45 lbs total

#### **Voltage options**

110 or 220 volts

#### Watts

120 on high / 40 on low

#### Sound level at 6 feet

34.2 db on low 57.2 db on high (Room level 25.1 db)









## Air purifiers models and filter configurations

	Prefilter	Particule	Carbon
Alternates	Cotton Prefilter TarBarrier Prefilter		