

BONECO W300
INSTRUCTION FOR USE

TABLE OF CONTENTS

Items included	21	Cleaning the AW200 evaporator mat	29
		About the AW200 evaporator mat	29
Overview and part names	22	Cleaning in the washing machine	29
		Cleaning by hand	29
Technical data	23		
Important notes	23	Fan cleaning	30
		Cleaning the fan	30
Start-up	24		
Operation	25	Replacing the accessories	31
Operating modes	25	A7017 Ionic Silver Stick®	31
		Availability of accessories	31
Fragrance container	26		
Basics	26		
Use	26		
Notes on cleaning	27		
About cleaning	27		
Recommended cleaning intervals	27		
Cleaning the appliance	28		
Disassembly and cleaning	28		

ITEMS INCLUDED


DEAR CUSTOMER,

Congratulations on your purchase of the BONECO W300. The high-performance air washer keeps humidity at a comfortable level at all times and improves the well-being of people and pets – especially during the dry winter months. At the same time, dust and dirt particles get caught in the AW200 evaporator mat, resulting in a significant improvement in air hygiene.


Cleaning the BONECO W300 is as easy as handling it: Many parts can be conveniently cleaned in a washing machine or dishwasher.

**Regardless of whether it is summer or winter:
You will not want to go without your newly
gained comfort.**

ITEMS INCLUDED

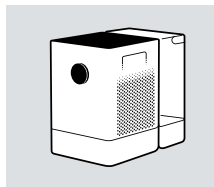

BONECO W300

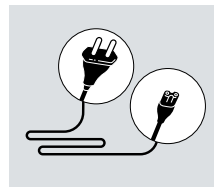

Power cord



Quick Manual



Safety instructions

OVERVIEW AND PART NAMES



- 1 On/Off, performance level
- 2 Fan
- 3 Cover / air inlet
- 4 Fragrance container*
- 5 Drum*
- 6 AW200 evaporator mat**
- 7 Water tank
- 8 Air outlet
- 9 A7017 Ionic Silver Stick®
- 10 Water base*
- 11 Water tank cover

* Washable in the dishwasher up to 50 °C

** Washable in the washing machine up to 40 °C


TECHNICAL DATA*

Type designation	BONECO W300	
Power supply voltage	220–240 V ~ 50/60 Hz	
Power consumption	Standby	0 W
	Level 1	12.2 W**
	Level 2	22.8 W**
Humidity output up to	350 g/h**	
Recommended for rooms up to	50 m ² / 125 m ³	
Water capacity max.	12 liters	
Dimensions L × W × H	400 × 280 × 412 mm	
Weight (empty)	6.4 kg	
Operation noise level	Level 1	27 dB(A)**
	Level 2	43 dB(A)**

* Subject to change

** At 230 V ~ 50 Hz

IMPORTANT NOTES

-  Production-related residue on the water base may lead to foaming, and thereby to water escaping. For this reason, before the first use, the water base must be cleaned with warm water and dish detergent. Then thoroughly rinse the water base under running water.

START-UP



OPERATION

OPERATING MODES

The BONECO W300 has two operating modes that can be switched between using the knob.




- In position ●, the BONECO W300 works with normal performance (day mode).
- In position ●, the BONECO W300 works quietly (night mode).

A green LED indicates that the BONECO W300 is operating correctly. The LED is red if the water tank is empty.


FRAGRANCE CONTAINER

BASICS

Commercially available fragrances and essential oils can be inserted into the fragrance container on the rear side.

 Never mix any fragrances or essential oils into the water base itself, since doing so can decrease the performance of the BONECO W300 and even cause damage. This damage is not covered by the warranty.



 The fragrance container can be cleaned in the dishwasher. The temperature may not exceed 50 °C.

USE

1. Remove the water tank.



2. On the rear side, press down on the fragrance container to take out the drawer.



3. Sprinkle the felt insert in the drawer with the fragrance of your choice.



4. Reinsert the fragrance container.



5. Reinsert the water tank.




NOTES ON CLEANING


ABOUT CLEANING

Regular maintenance and cleaning are necessary for trouble-free and hygienic operation.

Recommended cleaning and maintenance intervals vary depending on air quality, water quality and operating time.

A soft cloth, dish detergent and a scrub brush are recommended for cleaning by hand.

 Always unplug the BONECO W300 from the power outlet before you begin cleaning! Failure to do so can result in electric shock and fatal injury!

 In the case of cleaning the drum and the water base in the dishwasher, a temperature of 50 °C may not be exceeded, as temperatures higher than this can cause the plastic parts to deform.

RECOMMENDED CLEANING INTERVALS

Interval	Action
After the third day without operation	Empty water base and water tank and fill with fresh water
Every 2 weeks	Clean water base, drum, water tank and AW200 evaporator mat
Annually	Replace A7017 Ionic Silver Stick®
	Clean the fan and the inner area of the appliance

CLEANING THE APPLIANCE

DISASSEMBLY AND CLEANING

1. Take off the upper part of the BONECO W300.



2. Remove the drum with the AW200 evaporator mat.



3. Take out the A7017 Ionic Silver Stick®.



4. Turn both drum discs to release them. In doing so, note the markings on the outer side of the disc.



5. Remove the AW200 evaporator mat from the drum.



6. Clean the water base and the drum either by hand or in the dishwasher at a max. temperature of 50 °C.



7. Clean the inside of the water tank by hand or with a suitable cleaning brush using a commercially available dish detergent.



8. Clean the water tank cover with a commercially available dish detergent and a cleaning brush.



9. Put the BONECO W300 back together by following the steps in reverse order.

CLEANING THE AW200 EVAPORATOR MAT

ABOUT THE AW200 EVAPORATOR MAT

The AW200 evaporator mat can be cleaned in the washing machine. Commercially available detergents can be used.


It is recommended to put the AW200 evaporator mat in a laundry bag or wash it separately as the AW200 evaporator mat might collect loose fibers from other fabric.


When stretching the AW200 evaporator mat on the drum after cleaning, take note of correct positioning:



CLEANING IN THE WASHING MACHINE

The AW200 evaporator mat can be cleaned in the washing machine. Commercially available detergents can be used.

 The AW200 evaporator mat must not be washed at a temperature higher than 40 °C.

 Do not dry the AW200 evaporator mat in the clothes dryer.



CLEANING BY HAND

1. Add a little detergent to warm water and tumble the AW200 evaporator mat in it thoroughly to get dish detergent on all of it.



2. Rinse out the AW200 evaporator mat repeatedly in clean, hand-warm water until suds no longer form.
3. Allow the AW200 evaporator mat to dry before you stretch it on the drum again.

FAN CLEANING

CLEANING THE FAN

To clean the fan blades, remove the screen using the fragrance container.

! Clean the fragrance container thoroughly in case there is any fragrance residue left over (see section "Notes on cleaning"). It only takes a few drops to discolor or even damage the housing of the BONECO W300.

1. Remove the fragrance container.



2. Use the key for the openings provided in the screen.



3. Turn the key around 90 degrees and carefully lift the cover. Repeat this step in all corners until the screen can be completely removed.



4. Clean the fan and the inner area with a damp cloth.



5. Replace the cover. Carefully press down on all four corners until they audibly click into place.

! Do not operate the appliance without a protective cover!

REPLACING THE ACCESSORIES

A7017 IONIC SILVER STICK®

The A7017 Ionic Silver Stick® uses the antimicrobial effect of silver for a significant improvement of water hygiene. It is effective as soon as water comes into contact with it – even if the BONECO W300 is switched off.

Replace the A7017 Ionic Silver Stick® annually to guarantee antimicrobial effectiveness.



The used A7017 Ionic Silver Stick® can be thrown out with your regular household waste.

AVAILABILITY OF ACCESSORIES

Replacements for the used A7017 Ionic Silver Stick®, the AW200 evaporator mat and further accessories are available from the following sources:

- Your BONECO specialist dealer,
- At www.shop.boneco.com or
- Directly via the “BONECO healthy air” app.