


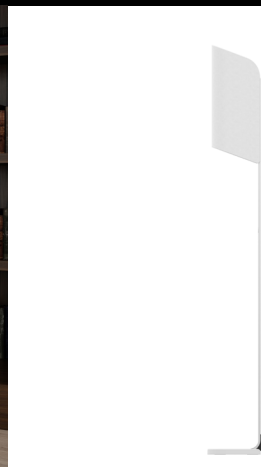

BROOKLYN FLOOR

www.luxledlights.com · support@luxledlights.com · 805.883.6866



FAQs

The base's holes don't line up with the extrusion. How can I assemble this?

Sometimes during shipping, the plate in the base with the holes that attach the base to the extrusion get stuck towards the end of the base. This sturdy plate can actually be unjammed with a screw driver, Allen wrench, or similar tool. The plate is quite sturdy and should hold up when unjamming.

Where does the shade go?

To attach the shade, place the two mounting pins into the top of the extrusion pole. Position the clip in front of the extrusion, with the word LUX facing as shown. The clip should rest below the LED panel, in front of the extrusion, as shown in the above left image.

What are the washers for?

These are included just in case you'd like to use them if the kickstand is not desired and are optional.