



HIGHLINE

LED Task Light

User Guide

ASSEMBLY INSTRUCTIONS

- Remove the protective plastic film from the base of the lamp to reveal the stabilizing pad.
- Clean the intended installation surface to remove dust or particulates. If bottom of lamp loses its stickiness, it can be cleaned with a wet cloth.
- A tripod screw mount is also included, for a more permanent installation.
- Install the included power cord to rear of lamp and then plug into any wall outlet.

USING YOUR LUX HIGHLINE LED LAMP:

- Turn the light on by touching the power button on the front of the lamp.
- Press the power button again to cycle through the three brightness levels (1,000, 400, 60 lumens).
- The light head will rotate horizontally, but is not intended to bend up or down. Do not push or pull the light head upwards or downwards.
- When using the lamp to charge your devices, unplug or remove the devices once batteries are full.

SAFETY INFORMATION:

- The flexible external power supply cable cannot be replaced; if the cable is damaged the entire power supply must be replaced.
- For indoor use only; do not use outdoors or in damp locations.
- Switch the lamp off before disconnecting the power.
- Do not look directly at the LEDs when they are illuminated.



CUSTOMER SERVICE:

For questions and assistance please contact us at:
800.922.3233 • customerservice@mightybright.com



Visit us at:
www.luxledlights.com