

## ATTENTION:

- Disconnect power before installing fixture.
- Installing, wiring and maintenance must be performed by a licensed electrician or qualified persons and in accordance with the National Electrical Codes and all local codes.
- Always disconnect power before installing or replacing bulbs and before cleaning or other maintenance.
- Do not install this fixture closer than six inches from any combustible material.
- Do not look directly into the LED bulb. As with other high intensity light sources, eye damage may occur.

## ASSEMBLY STEPS


1. Disconnect power from all circuits at the electrical panel (circuit breaker) before beginning installation.
2. Remove the LED bulb (included) from the fixture to prevent damage.
3. Prepare for mounting:
  - a. Unscrew the Lower Cable Grip and slide down the cable a few inches.
  - b. Unscrew the Upper Cable Grip from the Threaded Nipple and slide down the cable a few inches.
    - i. If the height at which the Shade is to be hung must be adjusted, slide the cable through the Threaded Nipple to the desired length.
    - ii. If the cable must be cut, ensure that the cord is properly stripped to expose the copper conductors.
  - c. Slide the Canopy away from the Crossbar a few inches.
4. Mount the Crossbar to the ceiling junction box with the included screws.
5. Ensure that the Jam Nut on the Threaded Nipple is tight against the crossbar.
6. Make appropriate electrical connections using wire nuts. It is good practice to cover the wire nuts with electrical tape to strain relieve and further insulate the connections.
  - a. Connect the live (black) wire to the live wire in the junction box.
  - b. Connect the neutral (white) wire to the neutral wire in the junction box.
  - c. Connect the ground (green) wire to the appropriate grounding point in the junction box. If no ground is present in the junction box, connect the fixture's ground wire to the green screw (included) on the crossbar. Ensure grounding meets all local and national codes.
  - d. Carefully position the wires in the ceiling junction box.
7. Position the Canopy flush to the ceiling with the Threaded Nipple protruding ¼" through the hole in the Canopy.
8. Tighten the Upper Cable Grip to the protruding Threaded Nipple. The Canopy should be snug to the ceiling and the Upper Cable Grip should be snug to the Canopy.
9. Tighten the Lower Cable Grip.
10. Reinstall the LED bulb (included) or any other 20W (MAX) bulb in the fixture.
11. Restore power to the fixture by reenergizing the circuit breaker.

## OPERATING INSTRUCTIONS:

- The LED bulb (included) may be dimmed using a dimmer switch suitable for dimming LED bulbs.

## CLEANING INSTRUCTIONS:

- Dust with a clean, dry cloth only.
- To protect the finish of the fixture, avoid using any abrasive cleaners.

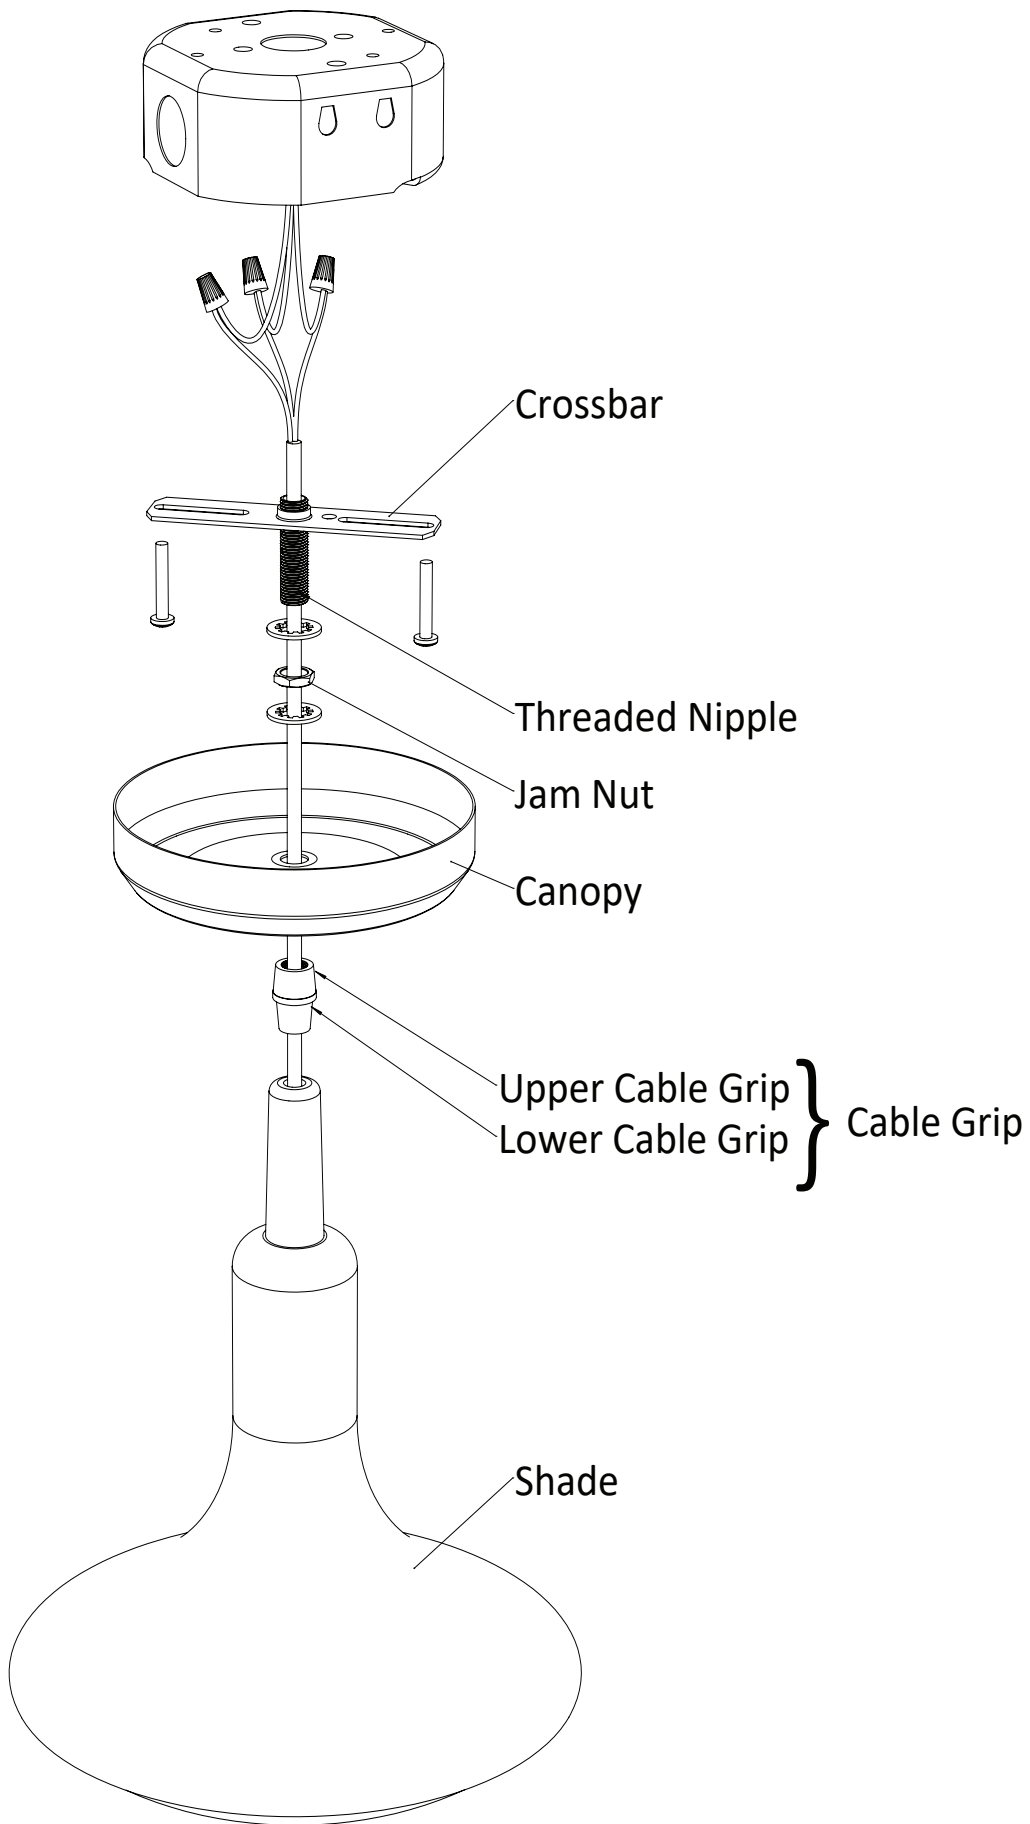



Visit us at:  
[www.luxledlights.com](http://www.luxledlights.com)  
REV101