



# Filter Replacement

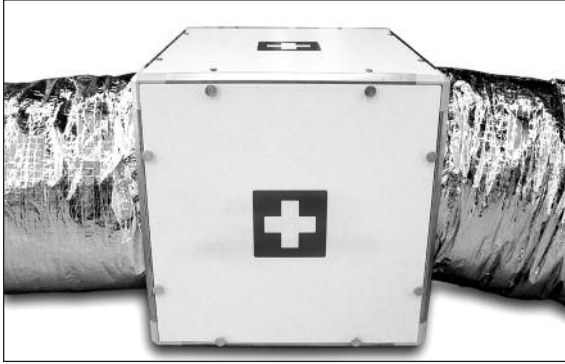


1. Access to replace filters is gained from the side panel with the finger screws attached to it.



2. Remove all eight finger screws.

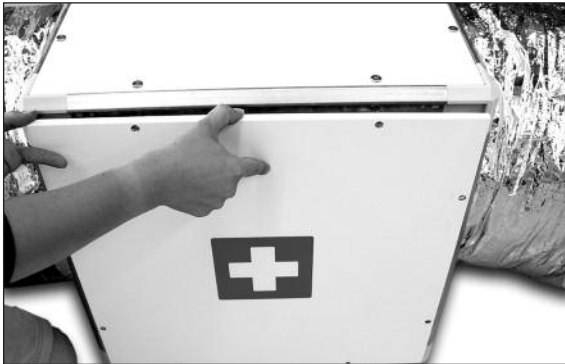

3. Remove access panel.

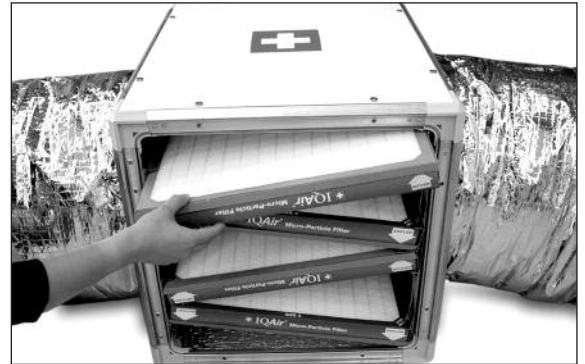

4. Remove filters starting from the top.



5. Insert new filters starting from the bottom.



6. Ensure that you align the filters with the airflow arrows matching the airflow arrows on the cabinet.



7. Double check that all filters have been inserted correctly and replace access panel with screws.



8. Fill out filter replacement label with scheduled date of next filter replacement. This should be no later than 3 years from current date, and affix on outer panel.