

NETUM PDA Upgrading Guide



1.OTA Upgrading

Premise

1.Paste OTA Upgrading package to PAD internal storage or SD Card.

2.Make sure battery volume > 30% during the updating.



L (D)

OTA Upgrading Procedures

Enter PDA setup and follow below steps to upgrade OTA.

08:06	1 🕪 💼	08:06 🗖	1 🕩 🗎	08:07		1 🔍 🗎	08:07	
٩	Search in Settings	← System	٩	\	System	۹	System upgrade	
	Storage 44% used - 8.97 GB free	Languages & Android Keyboa	input ard (AOSP)	-9	Off Reset options Network, apps or dev	rice can be reset	Local upgrade Select local upgrade package	
	Security & location Screen lock	Date & time GMT+08:00 Ch	ina Standard Time	Do	Multiple users Signed in as Owner			
	Accounts No accounts added	🚗 Backup		¥	System updates			
	Accessibility Screen readers, display, interaction	Off Advanced		₩	Scanner settings Scanner settings			
•	DuraSpeed	Reset options,	Multiple users, Syste		Advanced settings Advanced settings	3		
	System Languages, time, backup, updates			(j)	About device			



If you paste OTA upgrading package in SD card, click SD card in this step



NETUM®

Check version after upgrading

1.Once upgraded, it will boot automatically. Check the version to see if it's upgraded successfully.

08:24		1 🕩 🗎
~	About device	Q
	867636040207196	
	Android version	
	Hardware Config	
	IP address Unavailable	
	Wi-Fi MAC address 02:00:00:00:00:00	
	Bluetooth address Unavailable	
	Build number M01.02.05G.20210113	



2.Upgrading via USB cable

- · Premise
- $\cdot\,$ Install the latest Flash Tool
- · Install "Driver auto installer" to your PC
- $\cdot\,$ Unzip the upgrading package.



m71-aosp-ota-M01.02.05G.202 10113.zip



Upgrading procedures via USB cable

3.3.Click "Download". Turn off PDA. Connect PDA with your PC via USB cable.

Smart Phone Flash Tool(Runtime	Trace Mode) - 🗆	
File Options Window Help		I.Click "Choose", then click
	Welcome Format Download Readback Memory Test	
		"MIK_AllnOne_DA.bin" from
вм		
-	Jownicad Stop	"Flash tool" File.
	Download-Agent R:\Flack Toole\SP Flack Tool v5 1916 Win\\MTK AllTnOne DA hin	
	Scatter-loading File D:\release\M71\DMGS\MT6765_Android_scatter.txt	→ 2.Click "Choose" then click
	Authentication File 🔤 choose	
MT6765	Townland Only.	"MT6765 Andriod scatter.txt"
	✓ Name Begin Address End Address Region Location	
	Preloader 0x00000000000000 0x0000000038707 EMMC_BOOT1_BOOT2 D:\release\M71\IMGS\preloader_m	
	✓ recovery 0x0000000108000 0x00000002107fff EMMC_USER D:\release\M71\IMGS\recovery.img	
	✓ factory 0x00000002188000 0x00000002188fff EMMC_USER D:\release\M71\IMGS\factory.img	
	✓ enterprise 0x00000002189000 0x0000000219a063 EMMC_USER D:\release\M71\IMGS\enterprise.img	
	md1img 0x000000011500000 0x0000000127619bf EMMC_USER D:\release\M71\IMGS\md1img-verif	
(E	✓ md1dsp 0x000000017900000 0x000000017f9031f EMMC_USER D:\release\M71\IMGS\md1dsp.img	
	✓ spmfw 0x000000018900000 0x00000001890cb6f EMMC_USER D:\release\M71\IMGS\spmfw-verifie	
	✓ scp1 0x000000018a00000 0x000000018a8b4bf EMMC_USER D:\release\M71\IMGS\scp-verified.i	
	scp2 0x000000018b00000 0x000000018b8b4bf EMMC_USER D:\release\M71\IMGS\scp-verified.i	
	✓ sspm_1 0x000000018c00000 0x000000018c6993f EMMC_USER D:\release\M71\IMGS\sspm-verified	
h.	✓ sspm_2 0x000000018d00000 0x000000018d6993f EMMC_USER D:\release\M71\IMGS\sspm-verified	
	Ik 0x00000001ee00000 0x00000001eeac5af EMMC USER D:\release\M71\IMGS\Ik-verified.img ▼	
	0 B/s 0 Bytes High Speed 0:00 USB; DA Download All(high speed auto detect)	-
	· · · · · · · · · · · · · · · · · · ·	



Smart Phone Flash Tool(Runtin	ne Trace Mode) — 🛛						
e Options Window Help							
	Welcome Format Download Readback Memory Test						
м —	Download Stop						
	Download-Agent E:\Flash Tools\SP_Flash_Tool_v5.1916_Win\\MTK_AllInOne_DA.bin						
	Scatter-loading File D:\release\W71\TWGS\WT6765 Android scatter txt						
MT6765	Authentication File						
	Download Only						
	✓ Name Begin Address End Address Region Location ^						
	✓ preloader 0x00000000000000 0x0000000038707 EMMC_BOOT1_BOOT2 D:\release\M71\IMGS\preloader_m						
	✓ factory 0x00000002188000 0x00000002188fff EMMC USER D:\release\M71\IMGS\factory.img						
	✓ enterprise 0x000000002189000 0x00000000219a063 EMMC_USER D:\release\M71\IMGS\enterprise.img						
	✓ md1img 0x000000011500000 0x0000000127619bf EMMC_USER D:\release\M71\IMGS\md1img-verif						
Ц. Т.С.	_ md1dsp 0x000000017900000 0x000000017f9031f EMMC_USER D:\release\M71\IMGS\md1dsp.img						
nip info	_ spmfw 0x000000018900000 0x00000001890cb6f EMMC_USER D:\release\M71\IMGS\spmfw-verifie						
Name: MT6765	✓ scp1 0x000000018a00000 0x000000018a8b4bf EMMC_USER D:\release\M71\IMGS\scp-verified.i						
p Version: Dx0000ca00	scp2 0x000000018600000 0x00000001868646f EMMC_USER D:\release\M71\IMGS\scp-verified.i						
Clock: EXT_26M	sspm 2 0x000000018d00000 0x000000018d6993f EMMC USER D:\release\M71\IMGS\sspm-verified						
ern RAM Type: DRAM	Ik 0x00000001ee00000 0x00000001eeac5af EMMC USER D:\release\M71\IMGS\lk-verified.img						
ern RAM Size: Dx80000000							
EMMC Flash	- [vendor] Download Flash 50%						

Wait for the progress bar to complete



Smart Phone Flash Tool(Runtime Trace Mode) -						
File Options Window Help						
Welcome Form	at Download Readback Memory Test					
Download	© Stop					
Download-Agent	E:\Flash Tools\SP_Flash_Tool_v5.1916_Win\\M	TK_AllInOne_DA.bin	🚞 choose			
Scatter-loadin	g File D:\release\M71\IMGS\MT6765_Android_scatter.t	txt	🗸 🧮 choose			
Authentication	File		🗸 🧮 choose			
MI6765 Download Only	Download Ok X					
☑ Name	Begin Ac	Region Locatio	n ^			
✓ preloader	0x0000000	BOOT1_BOOT2 D:\release\M71\IMGS	\preloader_m			
recovery	0x0000000	_USER D:\release\M71\IMGS	\recovery.img			
☐ factory	0x00000000	_USER D:\release\M71\IMGS	\factory.img			
enterprise	0x0000000	_USER D:\release\M71\IMGS	\enterprise.img			
✓ md1img	0x00000000	_USER D:\release\M71\IMGS	\md1img-verif			
md1dsp	0x000000017900000 0x000000017f9031f EMM0	_USER D:\release\M71\IMGS	\md1dsp.img			
🔄 Chip Info 🖂 🗹 spmfw	0x000000018900000 0x00000001890cb6f EMM0	C_USER D:\release\M71\IMGS	\spmfw-verifie			
Chin Name: MT6765	0x000000018a00000 0x000000018a8b4bf EMM0	C_USER D:\release\M71\IMGS	\scp-verified.i			
Chie Kunsient Du0000.00	0x000000018b00000 0x000000018b8b4bf EMM0	C_USER D:\release\M71\IMGS	\scp-verified.i			
Chip version. Dx0000ca00 ✓ sspm_1	0x000000018c00000 0x000000018c6993f EMM0	C_USER D:\release\M71\IMGS	\sspm-verified			
Ext CLock: EXT_26M Sspm_2	0x000000018d00000 0x000000018d6993f EMM0	C_USER D:\release\M71\IMGS	\sspm-verified			
Extern RAM Type: DRAM	0x00000001ee00000 0x00000001eeac5af EMM0	CUSER D:\release\M71\IMGS	\lk-verified.img			
Extern RAM Size: Dx80000000						
[userdata] Download Flash 100%						
🗊 EMMC Flash 17.87M/s	860.26K KIRC High Speed	0:53 MediaTek PreLoader USB	VCOM (Android) (COM3)			

Firmware has been flashed once "Download OK" popped out from the window. Open PAD to check the firmware version to see if it's been upgrading successfully.