

IN THE BOX:



PRODUCT PARTS:





- 7) USB-C Charging Port
- 9) Phone Mount Attachment Grooves

2) Clip-on Mount 8) Battery Level Indicator 3) Power/Mode Button

5) Brightness Down Button 10) Clip-on Mount Release Button

6) Micro-usb Charging Port 11) Camera Hole

HOW TO USE:

Using the Phone Mount:

Remove the Clip-on Mount from the light panel by pressing the Clip-on Mount Release Button, Attach the Phone Mount to the back of the light panel by aligning the 3 hooks to the 3 grooves on back of the light panel, and press in until your hear a click. Extend top part of the Phone Mount and insert your phone. Phone Mount opens up to 3.1" to fit most phones.



The Phone Mount mounts to tripods, light-stands, and more by 1/4" standard screw thread located on the top and bottom.

HOW TO USE:

Clips on to monitors, phones, tablets:



Specification:

- » Lamp Beads White Light 30 + Warm Light 30 pieces (60 total)
 » Color temperature: 3000-6500K
- » Lumen: «240lm
- » Color rendering index: ≈80Ra » Battery: 2000 mAh
- » Built-in: 4.2V1A
- » For side charging: 5V1.1A » Input charge: 5V1A
- » Power: 4W
- » Endurance warm/white light: 3 hrs(max brightness)» Charging time: 2.5-3 hrs
- » Size: width: 3", height: 6.5", depth: 1.3"
- » Gross weight of product: 0.18kg

LIMITED One (1) Year Limited Warranty

4) Brightness Up Button

S. Bower Inc.™ One (1) Year Limited Warranty: This warranty gives you specific legal rights and you may have other rights which vary from state to state.

The S. Bower Inc. **Limited Warranty is a voluntary manufacturer's warranty provided to the consumer. This warranty provided sprovided by consumer law, including but not limited to those relating to non-conforming goods. S. Bower Inc. **One-Year Limited Warranty benefits are in addition to, and not instead of, rights provided by consumer law and it does not exclude, limit or suspend a buyer's rights. arising from consumer law. Consumers have the right to choose whether to claim service under the S. Bower Inc.™ One-Year Limited Warranty or under their consumer law rights, The S. Bower Inc.™ One-Year Limited Warranty terms and conditions shall not apply to consumer law claims, contact your local consumer organization.

Please note: All claims made under the S. Bower Inc.™ One-Year Limited Warranty will be governed by the terms set out in this warranty document. S. Bower Inc.™ warrants to the product owner that this product will be free against defects in materials and workmanship for a period of ONE (1) YEAR from the date of original retail purchase when used in accordance with S. Bower Inc.™ 's user manual. Under this warranty, you will be able to send your claims and defective product to S. Bower Inc.™, via freight prepaid, along with proof of purchase, and will be repaired or replaced, based on S. Bower Inc.™ sole discretion. Repair and/or replacement may be made with new or refurbished product components at S. Bower Inc.™ sole discretion. This limited warranty does not cover failures due to abuse, accidental damage or when repairs have been made or attempted by anyone other than S. Bower Inc. TM personnel. A defective product meeting the warranty conditions set forth herein will be replaced or repaired at no charge in either of two ways: The first, which will result in exchanges only, is to return the product to the retailer from whom it was purchased (provided that the store is a participating retailer). Returns should be made within the time period of is a participating retailer). Returns should be made within the time period of the retailer's policy for exchanges. Proof of purchase may be required. Please check with the retailer for its specific return policy regarding time limits for returns or exchanges. The second option is to send the product (prepaid freight) to S. Bower Inc. **M corporate offices located at S. Bower Inc. **M corporate offices located at S. Bower Inc. **S -09 437 d Avenue Ist Floor Long Island City, NY IIIIOI for repair or replacement at S. Bower Inc. **M so ption. Proof of purchase is required. Include name, return address, and issues that you are experiencing with S. Bower Inc. **M products. All other guarantees, express or implied, are hereby disclaimed.

This warranty does not apply to products sold in countries sold out of the United States.

HOW TO USE:

Turn on/off light:

Press and hold the Power/Mode Button(long press) for about 3 seconds and the light will turn on. To turn off the light press and hold the Power/Mode Button (long press) again for about 3 seconds and the light will

Switching Light Modes:

Press the Power/Mode Button(short press) repeatedly to cycle through the 3 White Light Modes(warm, natural, and white).

Adjusting Brightness:

Simply press Brightness Up Button or Brightness Down Button to find the desired brightness. The light-panel has up to 8 levels of adjustable brightness.

Charging the Device:

Simply connect the provided USB-C cable to any USB port (computer, powerbank, USB wall charger) to begin charging. The moving Blue light on the Battery Level Indicator indicates charging is in progress. Once the Blue light is no longer moving charging is complete.

©2023 S. Bower, Inc. All rights reserved.

All brand names and trademarks belong to their respective owners

S. Bower, Inc. LIC. NY 11101 www.BowerUSA.com