

PRODUCT INTRODUCTION PARTS VLOGGER PRO KIT

# INSTALLATION VLOGGER PRO KIT SETTING UP YOUR RIG A. Remove everything from the packaging. B. Ensure everything is fully charged. C. Attach the Microphone and LED Light to the cold shoe mounts on the top of the RIG

by sliding them into the shoe and gently turning the knob to tighten


clockwise on the backside of the RIG to secure your phone into place


\* NEVER FORCE ACCESSORIES OR OVER TIGHTEN ANY OF THE KNOBS


D. Place your cell phone into the phone mount on the RIG and gently turn the knob

\* PHONE, LED LIGHT AND MICROPHONEE SHOULD ALL FIT SNUG BEFORE YOU BEGIN

(see images below). You can mount each on either shoe.

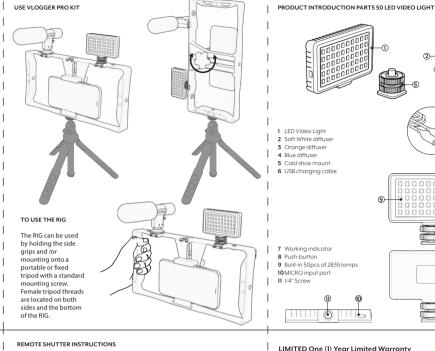

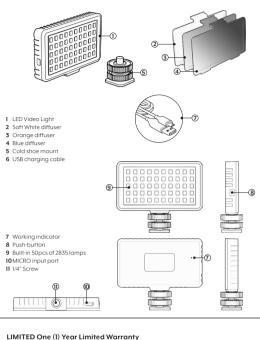

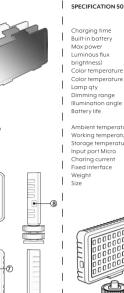

# SPECIFICATION 50 LED VIDEO LIGHT

Approx. 120 minutes 3.7V 500mAh 3 5W >350lm (4.2V) (Battery is 4.2V, third level 6500K (±500K)

Color temperature Color temperature Dimming range

Approx. 40 minutes with continuously working in third rating

-10-35, -10-60

-10°C-35°C

-10°C-60°C

5V0 5A

1/4 Screw

About 30 8a

73 x 42 x 10.5mm

Screw the shoe mount adapte

to the bottom of the light.

Resure it is secure

Micro input port

Ambient temperature Working temperature is Storage temperature is Input port Micro Charina current Fixed interface

Ra>80

Long press the 'On/Off' button for about 2 seconds to turn LED light on or off Three level brightness Adjusting the light temperature

OPERATION

Turn On / Off

Important: Please only attach diffusers on to led light in "off" mode. Adjust the light temperature with detachable diffusers (Soft White, Orange, Blue.) Attach the diffusers to the front of the LED light by placing them on to the front of the light

Cooling, warming and diffusing plates for adjustable color temperature

Perfect for creating professional videos, as well as, still photography

\* Do not force diffuser to front of LED light. It should click on easy


Super-thin (0.4"), lightweight and pocket-size design

## Colors achieve the below effects: Achieve softer light with the Soft white diffuser

FEATURES 50 LED VIDEO LIGHT High-power 50-LED smartphone light Provides powerful light for increased luminance

Increase the warming effect with the Orange diffuser Increase the cooling effect with the Blue diffuser

Connect the micro USB charging cable to the LED body. Charge via USB port on wall charger (not included) or portable battery (not included.)

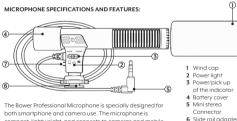

compact lightweight and connects to cameras and mobile devices that have a standard 3.5mm auxiliary / audio input. The phone / camera microphone is a high-quality shotgun condenser microphone designed to capture clear audio while reducing background noise

with built-in, high-quality electronic components, to enhance sound while in use. PRODUCT FEATURES:

## . The Bower Professional Microphone is an ultra-high sensitivity microphone with a wide

range of uses. Use the microphone for professional interviews, videos, etc. with an enhanced high-performance super-cardioid pickup, alongside single-head mutual complementary sound gathering technology. This microphone has a wide frequency response, and high-definition sound resolution. 2. The Bower Professional Microphone is powered by a CR2 battery that will increase usage

time. Microphone should be kept in mobile mode, which is the off mode, in order to preserve the life of the battery when not in use 3. The Bower Professional Microphone in phone mode is perfect for interviews, ambient

audio, music, Live broadcasts, Social Media and so much more. The microphone in camera mode is primarily designed for vlogging, interview and other professional fields.

# GENERAL HANDLING

. Gently slide the shoe mount adapter into the mount on the top of the phone holder. 2. Expand phone mount and gently Insert your phone so, it is flush against the back support of the phone holder.

3. Test by gently shaking to make sure the phone is secure.



7 Wire clip



is towards the left



Insert the CR2 battery

matching the positive and

4. When the switch button 5. If you move the switch phone mode) the product camera mode the red light is off and LED light is off will turn on

6. Phone mode will receive it is attached to smartphone. Do not switch to camera mode when attached to phone mode

a. Connect the rail connector to the camera attachment securely by twisting into place. b. Connect the microphone mini stereo plug to the camera's microphone input port.

c. Move the switch from left to right on the microphone (or phone mode to camera mode) on microphone and

d. red battery light will power on.

## FOR USE WITH SMARTPHONE a. Place microphone in phone mode

b. Red battery light will power on when connected to the phone using phones power. C. Connect microphone mini stereo cable into the mobile phone's input port.

\* If phone or camera does not have an 3.5mm aux/audio input you will need to purchase a For Apple™ Inc, iPhone 7 model or later lightning to aux adapter required

## PERFORMANCE PARAMETERS: Frequency response: 100-16 000 HZ

Sensitivity: -40dB±2dB (0dB=1V/Pa 1K HZ) Pointing to the features: single directional x 2 Output impedance: 200  $\Omega$ Signal-to-noise ratio: 76 dB (1 KHZ at 1 PA) The loudest level: 120dB (at 1K HZ harmonic distortion) Power supply: CR2 Battery - 3V DC

## PRODUCT SPECIFICATIONS: Type: MS (Mid - Side) stereo wire

(see image below).

TO USE THE RIG

Length: About 28 cm Power requirements: 3V CR2 battery Battery life: Approximately 800 hours depending on usage and storage Size: 30.5x61x132.5 mm (not including conductor) Weight: About 45 g (not including battery)


ACCESSORIES: 3V CR2 lithium battery (1) Operating instructions (1)

1. The microphone is very sensitive, do not drop, knock, or shake aggressively. 2. Keep microphone away from extreme heat and humidity, especially temperatures above 60°C

3. If the microphone is placed next to a speaker, it may produce a whistler due to acoustic feedback. Keep the microphone away from speakers or other devices that cause acoustic feedback. You can also try to lower the volume of the speaker to eliminate acoustic 4. If the Indicator light is off, check the battery to ensure that it was installed correctly.

6. When the battery is low, the brightness of the indicator light becomes very weak. Please replace the battery at this time. 7. If wind cap is exposed to water, immediately put in the shade to dry, to prevent

insolate ageing. Do not put in drying machine.

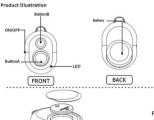

Battery Please install the battery with the positive electrode facing up

# How To Use







. Turn on the power button(located at the side of remote), indicator LED flashes and «Bower Shutter» will enter into pairing mode. 2. Turn on your smartphone and search for «Bower Shutter» device

3. Select the device of **\*Bower Shutter\*** from the list and pairing will be finshed autoumaticaly in few seconds.

# S. Bower Inc.™ One (1) Year Limited Warranty: This warranty gives you

specific legal rights and you may have other rights which vary from state to state.

The S. Bower Inc.™ Limited Warranty is a voluntary manufacturer's warranty provided to the consumer. This warranty provides rights separate to rights provided by consumer law, including but not limited to those relating to non-conforming goods. S. Bower Inc.™ One-Year Limited Warranty benefits are in addition to, and not instead of, rights provided by consumer law and it does not exclude, limit or suspend a buyer's rights arising from consumer law. Consumers have the right to choose whether to claim service under the S. Bower Inc.™ One-Year Limited Warranty or under their consumer law rights. The S. Bower Inc.™ One-Year Limited Warranty terms and conditions shall not apply to consumer law claims, contact your local consumer organization.

Please note: All claims made under the S. Bower Inc.™ One-Year Limited Warranty will be governed by the terms set out in this warranty document.

S. Bower Inc.™ warrants to the product owner that this product will be free against defects in materials and workmanship for a period of ONE (1) YEAR from the date of original retail purchase when used in accordance with S. Bower Inc.™ 's user manual. Under this warranty, you will be able to send your claims and defective product to S. Bower Inc.™, via freight prepaid, along with proof of purchase, and will be repaired or replaced, based on S. Bower Inc.™ sole discretion. Repair and/or replacement may be made with new or refurbished product components at S. Bower Inc.™ sole discretion. This limited warranty does not cover failures due to abuse, accidental damage or when repairs have been made or attempted by anyone other than S. Bower Inc.™ personnel. A defective product meeting the warranty conditions set forth herein will be replaced or repaired at no charge in either of two ways: The first, which will result in exchanges only is to return the product to the retailer from whom it was purchased (provided that the store is a participating retailer). Returns should be made within the time period of the retailer's policy for exchanges. Proof of purchase may be required. Please check with the retailer for its specific return policy regarding time limits for returns or exchanges. The second option is to send the product (prepaid freight) to S. Bower Inc.™ corporate offices located at S. Bower Inc. 38-09 43rd Avenue 1st Floor Long Island City, NY 11101 for repair or replacement at S. Bower Inc.™'s option. Proof of purchase is required. Include name, return address, and issues that you are experiencing with S. Bower Inc.™ products. All other guarantees, express or implied, are

This warranty does not cover products sold outside of the United States.

©2020 S. Bower, Inc. All rights reserved. All brand names and trademarks belong to their respective owners S. Bower, Inc. LIC. NY 11101 www.BowerUSA.com