

REM AIR SYSTEM TM

Wireless Remote Control Air Pump Instruction Manual


Congratulations, and thank you for purchasing the leading replacement air system for luxury air mattresses. We know you will be pleased with the quality and performance of your investment. Your new REM Air System boasts the newest in remote sensor and whisper technology. In addition you will also be happy with the simplistic setup and user friendliness.



Technical Specifications:

Model: REM Air System 4 Valve replacement pump
Voltage: DC12V
Pressure: 0-60mbar (Show 1-100 numerical value)

Flow: 20LPM
Power: 25W
Standby Power: 2W
Weight: 2.3Kg
Contour Dimension: Length 270* Wide 155* Height 90mm
Noise: 45dB

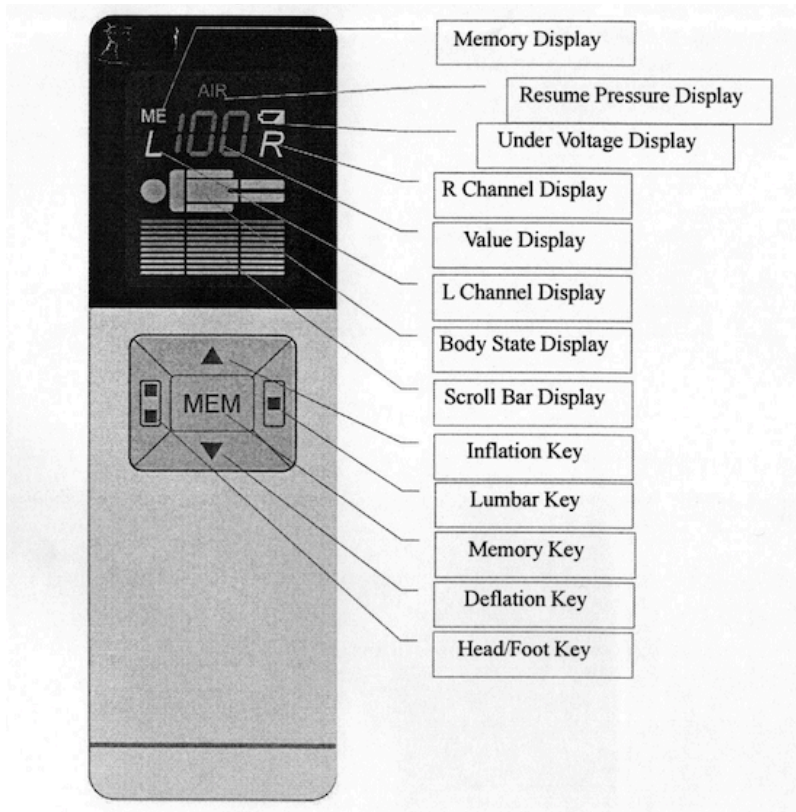

Operational Instructions:

1. Connect pump with mattress hoses. Follow the pump connection diagram located by the pump valves to connect Left and Right hoses correctly.
2. When plugged into the outlet the pump LED light will show red for 30 seconds. The pump will calibrate with the remote control. When the LED light turns green, the pump is ready to be used.
3. To wake up the remote, press any key. Only one remote will be work at one time when inflating or deflating mattress. The remote has an auto shut off after 15 seconds of not being used.
4. To operate the head and foot simply press the "Head/Foot" key. The body icon on the remote will blink when being used. The Lumbar key will be used in the same method.
5. Inflation and deflation: Choose the desired part of the mattress to inflate or deflate and then press the "up" arrow to inflate and the "down" arrow to deflate. The remote will read the digital number while the scroll bars will roll from low to high to show the progress of the action. You may stop the action by pressing any key on the remote.
6. The pump will auto stop inflation when the remote number reaches "100"
7. **Memory Value:** Press Memory key, and the LCD will show "ME", the pump will then automatically start inflating or deflating from the Head/Foot zone first and then to the "Lumbar" zone to inflate or deflate. If you wish to stop at any time simply press any key.
8. **Saving Memory Value:** Inflate or deflate to desired number then press the "MEM" key for 3 seconds, the "ME" will the blink and you number will be saved for the Head/Foot and Lumbar zones.
9. **To Resume that last air pressure value:** press the desired zone: "Head/Foot or Lumbar." The LCD will then show "Air" and it will then automatically resume the last used pressure value. (This function is in the case of a pressure drop in the mattress)

Tips & Knowledge

10. The remote controls will work within 5 to 10 meters of pump. If the remote is out of range it will read "Er"
11. Calibration: The remote and pump are calibrated before packaging. If the remote should read "Er" this means that it may need to be calibrated once more.

Follow these steps to calibrate:

Replug in your pump. When the LED is blue, wake up the remote by pressing any key. Then hold the "Lumbar" key down for 3 seconds. The LCD remote screen should then read "Su." The remote is now calibrated and ready for use.

Remote Power:

You will need 3 AAA- LR03-1.5V batteries to power one remote. The remote will show the power strength of the batteries. Please change batteries from time to time so to avoid damage to remote.